

epcatalogs.com

# JX95 Straddle Mount Tractor

## Operator's Manual

**87684394** 8/07  
Replaces 87362486

**CASE** 

---

# CONTENTS

	Page
<b>Section 1 - General Information and Safety</b> .....	1-1
JX Series Straddle Mount .....	1-1
To the Owner .....	1-2
Improvements .....	1-2
Introduction .....	1-3
Using this Manual .....	1-4
Communication for the User .....	1-5
Important Ecological Considerations .....	1-6
Tractor Identification .....	1-7
Working Safely .....	1-9
Safety Covers and Guards .....	1-16
Safety Decals .....	1-18
Location of the Decals on Your Tractor .....	1-18
Standardized Symbols .....	1-22
<b>Section 2 - Controls, Instruments and Operation</b> .....	2-1
Driver's Seat .....	2-2
Instrument Panel .....	2-5
Instrument Console Controls .....	2-10
Operating Controls .....	2-12
Towing the Tractor .....	2-16
Checks Before Using the Tractor .....	2-17
Operation .....	2-18
Starting the Engine .....	2-19
12X12 Synchronized Mechanical Shuttle - 30 Km/h (18.6 Mph) (12 Forward Gears + 12 Reverse Gears - Synchro Shuttle) .....	2-22
20X12 Synchronized Mechanical Shuttle with Creeper (20 Forward Gears + 12 Reverse Gears - Synchro Shuttle) .....	2-24
Mechanical MFD Engagement .....	2-26
Mechanical Controlled Differential Lock .....	2-27
LIM-Slip Front Differential Lock .....	2-27
<b>Section 3 - Field Operation</b> .....	3-1
Power Take-off Operation (PTO) .....	3-2
Hydraulic Lift .....	3-6
Three-point Linkage (Category I and II) .....	3-11
Equipment Mounting Points .....	3-15
Lower Link Attachment .....	3-16
Towing Equipment .....	3-17
Folding ROPS .....	3-19

	<b>Page</b>
<b>Section 3 - Field Operation (Cont.)</b> .....	3-1
Operator Protective Structure .....	3-20
Remote Control Valves .....	3-21
Tires, Wheels, Tracks, Ballast Wheel Track Adjustment .....	3-23
Steering Angle Adjustment .....	3-28
Steering Angle Adjustment (Models with 2 <sup>nd</sup> Steering Cylinder) .....	3-29
Tire Use, Maintenance and Replacement .....	3-30
Tire Loading Information .....	3-31
Speed Code .....	3-31
Tire Data and Pressures .....	3-32
Tire Combinations .....	3-34
Tire Inflation Advice .....	3-36
Ballasting .....	3-37
Maximum Permitted Weight .....	3-42
MFD Models .....	3-43
<b>Section 4 - Lubrication and Maintenance</b> .....	4-1
Introduction .....	4-1
Tractor Refuelling .....	4-2
Miscellaneous Checks .....	4-3
Access for Inspection and Maintenance .....	4-4
Products and Quantities for Refilling .....	4-5
Lubrication and Maintenance Schedule .....	4-7
Flexible Maintenance .....	4-9
When the Warning Light is ON .....	4-11
Every 10 Hours .....	4-13
Every 50 Hour .....	4-16
Every 200 Hours of Work .....	4-19
Every 600 Hours of Work .....	4-25
Every 900 Hours of Work .....	4-25
Every 1200 Hours of Work .....	4-26
Every 1200 Hours or Every 2 Years .....	4-28
General Maintenance .....	4-33
Recommendations for Bodywork Maintenance .....	4-34
<b>Section 5 - Troubleshooting</b> .....	5-1
Locating and Identifying Problems .....	5-1
Introduction .....	5-1
Engine .....	5-2
Electrical System .....	5-5
Hydraulic System .....	5-6
Hydraulic Lift and 3-Point Equipment Coupling .....	5-7

---

	<b>Page</b>
<b>Section 6 - Tractor Storage</b> .....	6-1
<b>Section 7 - Accessories</b> .....	7-1
Electrical System .....	7-1
<b>Section 8 - Specifications and Data</b> .....	8-1
Dimensions of 2WD Models with Standard Tires .....	8-2
Dimensions of MFD Models with Standard Tires .....	8-3
Turning Radius .....	8-4
Weights kg (lbs) .....	8-5
Engine Data .....	8-6
<b>Section 9 - Delivery Report - JX95 Series Straddle Mount</b> ..	9-1
First 50 Hour Service - Check and Adjust, As Required .....	9-5
<b>Index</b> .....	10-1

epcatalogs.com

---

# FEDERAL EMISSIONS WARRANTY

## (North America Only)

(California owner's emissions warranty is covered elsewhere)

CNH UK Ltd warrants that your new 1996 and later heavy-duty off-road diesel engine was designed, built, and equipped to conform to applicable U.S. Environmental Protection Agency regulations for a period of use of five years or 3,000 hours of operation, whichever occurs first.

The new model year, class of diesel engine, and emission application determination for your engine are identified on the emission control information label affixed to the engine. The warranty period begins on the date the new equipment is sold to the first retail purchaser.

Any emission control system parts which are proven defective during normal use will be repaired or replaced during the warranty period. The warranty repairs and service will be performed by any authorized CNH dealer at the dealer's place of business, with no charge for parts or labor (including diagnosis).

As the engine owner, you are responsible to perform all the required maintenance listed in your owner's manual. CNH UK Ltd will not deny an emission warranty claim solely because you have no record of maintenance; however, a claim may be denied if your failure to perform maintenance resulted in the failure of a warranted part. Receipts covering regular maintenance should be retained in the event of questions and these receipts should be passed on to each subsequent owner of the engine.

It is recommended replacement parts used for maintenance or repairs be CNH Service Parts to maintain the quality originally designed into your emission certified engine. The use of non-CNH parts does not invalidate the warranty on other components unless the use of such parts causes damage to warranted parts.

CNH UK Ltd wishes to assure the emission control systems warranty is being properly administered. If you believe you have not received the service entitled to under this warranty, you should contact the nearest CNH Office for assistance. The address and phone number of each Office is in your equipment owner's manual. If additional assistance or information is needed, contact:

Service Department  
CNH America, LLC  
500 Diller Avenue  
New Holland, PA 17557  
(717) 355-1121

Please note that the Emission Warranty does not cover:

1. Systems and parts that were not first installed on the new equipment or engine as original equipment by CNH UK Ltd.
2. Part malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, or use of non-recommended fuels and lubricating oils.
3. Accident caused damage, acts of nature, or other events beyond CNH UK Ltd's control.
4. Replacement of expendable items made in connection with scheduled maintenance.
5. Parts requiring replacement at inspection or adjustment maintenance intervals for reasons other than being defective.
6. Parts which are not CNH Service Parts.
7. Loss of time, inconvenience, loss of use of equipment/engine or commercial loss.
8. Equipment with altered or disconnected hourmeter where the hours cannot be determined.
9. Equipment not normally operated outside the United States.
10. Non-defective parts replaced by other than CNH dealers.

### Coverage

This emission control system warranty applies only to the following emission control parts.

Electronic Control Unit  
Fuel Injection Pump  
Fuel Injectors  
Turbocharger  
Intake Manifold  
Exhaust Manifold  
Boost Pressure Tubing-connection to Aneroid Device ON F.I.P.

[Buy now](#)

[Case JX95 Tractor Operator Manuals PDF](#)

[With Instant Download](#)