

epcatalogs.com

AXIAL-FLOW® 5088
AXIAL-FLOW® 6088
AXIAL-FLOW® 7088
Combine

OPERATOR'S MANUAL

Part number 84348238

4th edition English

September 2010

Replaces part number 87479345



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use	1-3
Foreword - Ecology and the environment	1-4
Biodiesel fuel - Biodiesel Fuels	1-5
Product identification	1-6
Machine orientation	1-7
Universal Symbols	1-8
International symbols	1-12
Torque - Minimum tightening torques for normal assembly	1-13
Electro-magnetic interference (EMC)	1-17

2 SAFETY INFORMATION

Safety alert symbol and signal word definition and signal word definitions	2-1
Basic operating safety rules	2-2
Proposition 65	2-6
Safety signs	2-7
Informational Decals	2-19
SAFETY SECURITY ACCESSORIES Safety - Note to the Owner	2-30
Do Not Operate hang tag	2-31
Protective devices	2-32
Fire prevention	2-34
Battery safety	2-36
Maintenance Safety	2-37
Fuel storage	2-38
Wheels and tires	2-39
Neutral start system	2-40
Operator presence system	2-40
Backup alarm system	2-40
Unclogging the machine	2-41
Note to the Owner	2-42

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Operator's Platform	3-1
Engine, Rear Platform Access	3-6

OPERATOR'S SEAT

Operator seat - Overview	3-8
Seat belt - Overview	3-10

INSTRUCTOR'S SEAT

Instructional seat	3-12
--------------------------	------

FORWARD CONTROLS

Instrument panel	3-13
Indicator lamp and alarm test	3-13
Gauges	3-15
Warning indicators	3-17
Custom LCD display	3-20

Foot controls.....	3-25
Steering column	3-26

RIGHT-HAND SIDE CONTROLS

Propulsion control lever	3-29
Right hand console	3-34
Gear shifting system.....	3-46
Cab Layout	3-47
Cab Door	3-48

REARWARD CONTROLS

Rear window.....	3-49
------------------	------

OVERHEAD CONTROLS

Front overhead controls	3-50
Radio or audio system.....	3-53
Automatic temperature control system	3-55
Interior lamps	3-60

SHIELD

Side Panel operation	3-61
Side Panel adjustment	3-65
Service Lamps.....	3-66

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Before starting the engine.....	4-1
---------------------------------	-----

STARTING THE UNIT

Normal engine starting	4-3
Stopping the engine	4-6
Cold temperature operation	4-7

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transport safety	5-1
------------------------	-----

PREPARING FOR ROAD TRANSPORT

Preparing for road transport	5-2
Road travel	5-5

SHIPPING TRANSPORT

Tie downs for shipping.....	5-7
-----------------------------	-----

RECOVERY TRANSPORT

Towing	5-9
Disabled machine - Releasing the parking brake	5-10

6 WORKING OPERATIONS

GENERAL INFORMATION

Adjustments and calibration	6-1
Error screen	6-1
Monitor screens	6-3
Hours screen	6-4
Area change	6-5

Grain scan change	6-6
Header sensitivity	6-7
Header type/cutting type	6-8
Combine info	6-11
Set up screens	6-14
Calibrations	6-21
Concave	6-21
Tailings volume	6-22
Header height	6-23
Header tilt	6-26
Upper Sieve	6-29
Lower Sieve - calibration	6-31
Reel drive	6-33
Diagnostic menu	6-35
Alarm and Abort screen	6-43
CXCM Error codes	6-44
Alarms	6-45
Automatic Crop Settings	6-47
AFS PRO 600	6-47
Header connection	6-52
Connecting a header	6-52
Remove header	6-56
Adapter adjustment	6-59
CROP PROCESSING	
Combine setup	6-60
General field operation	6-60
Threshing speed	6-64
Initial crop settings	6-65
Rotor rasp bar types	6-67
Rice rotor initial crop settings	6-69
Header Height Control	6-72
Header operating variables	6-72
Return to Cut Mode	6-76
Auto Height mode	6-78
Pressure Float mode	6-79
Header Tilt Control	6-80
Manual mode	6-80
Auto tilt mode	6-80
Level mode	6-81
Reel control	6-82
Reel speed	6-82
Reel position	6-83
Monitor Operation	6-84
Shaft Speed	6-84
Harvest Screen	6-85
Feeder	6-86
Feeder Reverser	6-86
Automatic Feeder cutoff	6-86
Rock Trap	6-87
Feeder Cradle adjustment	6-89
Unloading	6-91
Unloading	6-91

Feeding	6-93
Two speed gear box - Adjustment	6-93
Feeder chain - adjustment	6-94
Feeder drum - fore/aft adjustment	6-96
Ride control - accumulator	6-98
Threshing and separation	6-100
Threshing and separating overview	6-100
Rotor - overview	6-101
Unplugging the Rotor	6-106
Concaves	6-107
Concaves Overview	6-107
Concaves - Adjustment	6-110
Concave - Removal	6-115
Concave - Installation	6-116
Grates	6-118
Grates - Overview	6-118
Grates - Removal	6-120
Grates - Installation	6-121
Cage Transport Vanes	6-123
Threshing, separation and cleaning	6-125
Cleaning system and lower frame	6-126
Cleaning system and lower frame - Overview	6-126
Auger bed - Overview	6-127
Cleaning fan - Overview	6-129
Sieves	6-131
Chaffer sieve	6-131
Chaffer sieve removal	6-135
Chaffer sieve installation	6-137
Lower Sieve - Overview	6-139
Lower sieve removal	6-141
Lower sieve installation	6-143
Grain storage/unloading	6-144
Grain handling and material distribution	6-144
Clean out doors	6-146
Clean grain elevator drive	6-149
Cross Auger	6-150
Unloader drive chains	6-150
Residue handling	6-151
Chaff spreader	6-151
Straw chopper	6-154
Chopper blade - Blade replacement	6-158
Counter knives - Removal	6-160
Losses	6-161
Threshing	6-161
Seed loss	6-166
Quick stop	6-168
Threshing and separation - Troubleshooting	6-169

7 MAINTENANCE

GENERAL INFORMATION

Grease fittings and intervals	7-1
Grease decal reference - Engine platform	7-1
Grease decal reference - left hand side	7-4

[Buy now](#)

[Case Axial-Flow 5088, 6088 and 7088 Combine Operators Manual PDF](#)
[With Instant Download](#)