

## **JX95 HC**

# Operator's Manual

Print No. 84154409 Ist Edition English - 01 / 2010





## **JX95 HC**

## Operator's Manual

Print No. 84154409

Ist edition English 01/2010



### **CAUTION**



THIS WARNING SYMBOL POINTS OUT IMPORTANT MESSAGES CONCERNING YOUR SAFETY. READ THE FOLLOWING SAFETY REGULATIONS CAREFULLY AND FOLLOW THE RECOMMENDATIONS IN ORDER TO AVOID POTENTIAL HAZARDS AND SERIOUS OR FATAL ACCIDENTS. SAFEGUARD YOUR HEALTH AND SAFETY AND THAT OF OTHERS BY ALWAYS TAKING THE UTMOST CARE.

In this Manual and on the decals attached to the tractor, the symbol is accompanied by the following keywords:

- CAUTION When the warning is to prevent potential damage to the machine, which could also put the operator's safety at risk.
- **DANGER** This warning specifically indicates a potential danger to the user or to any their person directly involved.

Failure to observe the iris ructions preceded by the aforementioned key rords (CAUTION and DANGER) may roult severe or fatal injury to the persons involved.

Furthermore, this Manual also contains instructions in italics preceded by the terms **NOTE** and **WARNING**, with the following relevance in relation to machine protection:

- **NOTE** Underlines the correct procedure or technique to be followed by the operator.
- WARNING Informs the operator of the danger of damaging the machine if the specified procedure is not followed.

#### IMPORTANT WARNINGS

The nactine is designed and produced exclusively for agricultural and forestry use. Any other use may use due serious accidents.

other use will be considered to be contrary to the use specified by CASE IH, who cannot be held liable for damage to property or the machine, or for personal injuries which may result.

Persons who risk improper use will therefore assume the responsibility for any consequences arising from such use.

Compliance with the instructions for use, maintenance and repairs described in this Manual, are the essential preconditions for the use specified by CASE IH.

The machine must only be used, serviced or repaired by personnel trained in the relevant working methods and safety regulations and who have been authorised to work on the machine.

The driver must also observe the rules concerning general safety and accident prevention, including the Highway Code when driving on public highways.

Any arbitrary modifications made to this machine will release CASE IH from any liability resulting from damage or injury.

CASE IH and all distribution organisations, inclusive of, but not restricted to, national, regional or local distributors, cannot be held liable for damage resulting from the malfunction of parts and/or components not approved by CASE IH.

Under no circumstances will a guarantee be issued for products made or sold by CASE IH that are damaged as a result of the malfunction of parts and/or components not approved by CASE IH.

#### **CONTENTS**

Title	Page
Section 1 – General Information and Safety	
To the owner	1–1
Tractor identification	1–2
Ecology and the environment	1–5
Safety precautions	1–6
Safety decals	1–12
International symbols	1–15
Section 2 – Controls, Instruments and Operation	
Safety covers and guards	
Controls and instruments	2–4
Instrument panel	2–5
Instrument console controls	
Right-hand side operating controls	2–11
Left-hand side operating controls	2–12
Cab controls	
Seats	
Cab	2–19
Cab air conditioning system	
Transmission with range gear and muci 9— 30 km/h (19 mph)	
Transmission with creeper and hulland 80 km/h (19 mph)	
Mechanically controlled four 1996. Trive	
Mechanically controlled different allock	
Towing the tractor	
Loading the tractor cutral transporter	
Checks before uting the tractor	2–39
Section 3 Fiel Operation	
Starting (II) en ine with thermostart	3–2
Power Log-off	3–5
Hydraulic lift	3–14
Three–point linkage Cat. II	3–19
Remote control valves	
Wheel track adjustment	3–28
Tyres	
Tyre combinations	3–35
Ballasting	3–37
Static weight distribution	3–50

Buy now

Case JX95HC Tractor PDF Operator's Manual

With Instant Download