

Betriebsanleitung  
Operating Instructions  
Manuel d'Utilisation  
Manual de Servicio  
Istruzioni per l'Uso



ZF Synchromesh Transmission  
16-Speed

1367 758 101a\_en

epcatalogs.com

Subject to technical changes

Copyright by ZF

This documentation is protected by copyright. Any reproduction or dissemination in whatever form which does not comply fully with the intended purpose of this documentation is prohibited without the consent of ZF Friedrichshafen AG.

Printed in Germany

ZF Friedrichshafen AG, MC-C / 2009

Edition: 2010-06

epcatalogs.com

Your vehicle is equipped with a 16-speed synchromesh transmission of the **ZF-Ecosplit model range**.

The more familiar you are with ZF transmissions, the more economically you will be able to operate them. In these operating instructions, you will learn how to derive maximum benefit from the technical advantages of the ZF transmission.

Therefore, we kindly ask the driver to carefully read these operating instructions and the special information provided by the vehicle manufacturer before driving the vehicle for the first time.

In order to ensure reliability of service, please note the specifications governing maintenance. The ZF Customer Service specialists are available to assist you in carrying out maintenance work or to help if any other problems arise.

Motoring pleasure with ZF transmissions is brought to you by

**ZF Friedrichshafen AG**

Truck Driveline Technology business unit (SL)  
D-88038 Friedrichshafen

Phone +49 (0) 75 41 77 0

Fax: +49 (0) 75 41 77-908 000

Internet [www.zf.com](http://www.zf.com)

The following safety instructions are used with the present operating instructions:

### NOTE

Reference is made to **special** procedures, methods, information, etc.

### CAUTION

Used when deviating and unprofessional operation can damage the product.



### DANGER!

This is used when lack of care could lead to personal injury and/or material damage.

---



### THREATS TO THE ENVIRONMENT!

Lubricants, consumables, and cleaning agents must not enter the soil, ground water, or sewage system.

- Ask your local environmental protection agency for safety information on the relevant products and adhere to their requirements.
  - Collect used oil in a sufficiently large container.
  - Dispose of used oil, dirty filters, lubricants, and cleaning agents in accordance with environmental protection regulations.
  - When working with lubricants and cleaning agents, always refer to the manufacturer's instructions.
-

<b>1</b>	<b>Technical Data</b> .....	<b>6</b>	<b>4</b>	<b>Maintenance</b> .....	<b>25</b>
<b>2</b>	<b>Description</b> .....	<b>9</b>	4.1	Transmission Oil.....	25
2.1	Setup .....	9	4.1.1	Oil Grade .....	25
2.2	Version .....	9	4.1.2	Oil Quantity .....	25
2.3	Shift Actuation.....	11	4.1.3	Oil Change Interval .....	25
2.4	Auxiliary Power Units .....	13	4.2	Oil Change .....	26
<b>3</b>	<b>Operation</b> .....	<b>14</b>	4.2.1	Draining Used Oil.....	26
3.1	Starting Engine and Setting Off .....	14	4.2.2	Oil Fill .....	27
3.2	Actuating the Clutch .....	14	4.3	Oil Level Check .....	28
3.3	Shifting of Transmission .....	15	4.3.1	Oil Fill and Oil Level Check for Transmissions With Clutch-Dependent PTOs .....	28
3.3.1	Transmission Shift Pattern.....	15	4.4	Transmission Maintenance for Design With Heat Exchanger .....	29
3.3.2	Changing Gears .....	17	4.5	Checking the Clutch.....	30
3.4	Engaging the PTOs .....	20	4.6	Checking the Trigger Valve at the Clutch Pedal.....	31
3.4.1	Clutch-Dependent PTOs.....	20	4.7	Rebuilding the Transmission.....	32
3.5	Parking.....	21	4.7.1	Sealer .....	32
3.6	Tow-Starting.....	21	4.7.2	Hole Breather .....	32
3.7	Towing .....	22	4.8	Pneumatic System Maintenance.....	33
3.8	Limp Home Operation .....	23	4.9	Type Plate .....	33
3.8.1	Servoshift.....	23			
3.9	Starting Up the Vehicle at Low Temperatures.....	24			
3.9.1	Parking Vehicle at Low Temperatures .....	24			

[Buy now](#)

[ZF-Ecosplit Transmission Operating Instructions PDF](#)

[With Instant Download](#)