

Operating Instructions



ZF Synchromesh
Transmission
9 S 1110
9 S 1310

1324 758 101

epcatalogs.com

Subject to technical changes

Copyright by ZF

This documentation is protected by copyright. Any reproduction or dissemination in whatever form which does not comply fully with the intended purpose of this documentation is prohibited without the consent of ZF Friedrichshafen AG.

Printed in Germany

ZF Friedrichshafen AG, MC-C

Edition: 2005-10

epcatalogs.com

Your vehicle is equipped with a manual transmission from the **ZF-ECOMID model range**.

The more familiar you are with your transmission, the more cost-effectively you will be able to drive with it. These operating instructions tell you how to make the best use of the technological advantages of the ZF transmission. Therefore please carefully read these operating instructions, and any special instructions given by the vehicle manufacturer, before driving the vehicle for the first time.

In order to ensure reliability in service, please note the specifications governing maintenance. The ZF Customer Service specialists are available to assist you in carrying out maintenance work or to help if any other problems arise. The enclosed fold-out sheet contains the addresses.

Motoring pleasure with ZF transmissions is brought to you by

ZF Friedrichshafen AG

Commercial Vehicle and Special Driveline Technology

D-88038 Friedrichshafen

Phone: +49 (0) 75 41 77-0

Fax: +49 (0) 75 41 77-90 80 00

Internet: www.zf.com

The following safety instructions appear in the present operating instructions:

NOTE

Refers to special processes, techniques, information, etc.

CAUTION

This is used when incorrect, unprofessional working practices could damage the product.



DANGER!

This is used when lack of care could lead to personal injury or material damage.



THREATS TO THE ENVIRONMENT!

Lubricants and cleaning agents must not be allowed to enter the soil, ground water, or sewage system.

- Ask your local environment agency for safety information on the relevant products and adhere to their requirements.
 - Collect used oil in a suitably large container.
 - Dispose of used oil, dirty filters, lubricants, and cleaning agents in accordance with environmental protection guidelines.
 - When working with lubricants and cleaning agents always refer to the manufacturer's instructions.
-

	Page		Page
1 Technical Data	6	4 Maintenance	
2 Description		4.1 Transmission Fluid	20
2.1 Setup	7	4.1.1 Oil Grade	20
2.2 Version	7	4.1.2 Oil Fill Quantity	20
2.3 Shift Actuation	8	4.1.3 Oil Change Interval	20
2.4 Auxiliary Power Units	9	4.2 Oil Changes	21
3 Operation		4.2.1 Draining Oil	21
3.1 Starting Engine and Setting Off	10	4.2.2 Oil Fill	22
3.2 Actuating the Separating Clutch	10	4.3 Oil Level Check	22
3.3 Shifting of Transmission	11	4.4 Filling With Oil and Checking Oil Level on Transmissions With PTOs	23
3.3.1 Transmission Shift Pattern	11	4.5 Filling With Oil and Checking Oil Level on Transmissions With Heat Exchangers	23
3.3.2 Selecting Gears	13	4.6 Checking the Clutch	24
3.4 Engaging the Clutch-Dependent PTOs	15	4.7 Bleeding the Transmission	25
3.5 Parking	16	4.8 Pneumatic System Maintenance	26
3.6 Tow Starting	16	4.9 Type Plate	26
3.7 Towing	17		
3.8 Limp Home Operation	18		
3.9 Starting Up the Vehicle at Low Temperatures	19		
3.10 Parking Vehicle at Low Temperatures	19		

[Buy now](#)

[ZF-ECOMID 9S 1110, 9S 1310 Operation Instructions PDF](#)

[With Instant Download](#)