



PACCAR

MX


ECM Circuit Diagram

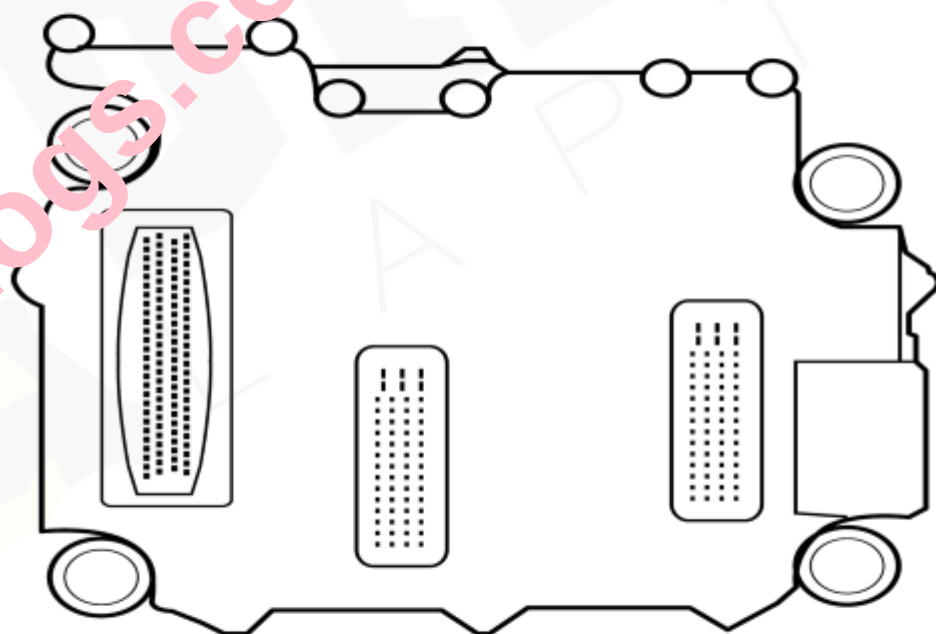

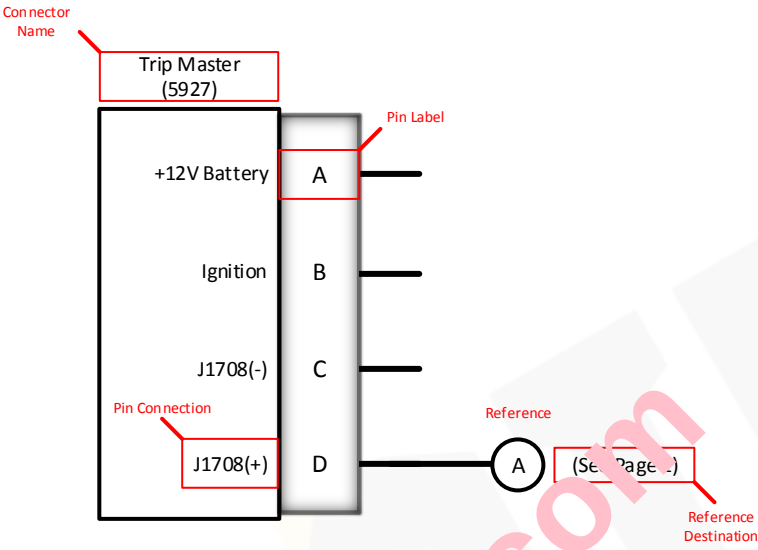

ABBREVIATION	COLOR
RD	RED
WH	WHITE
OR	ORANGE
YL/YE	YELLOW
PK	PINK
BLK	BLACK
GR	GRAY
PUR/P	PURPLE
BR/BN	BROWN
GN	GREEN
BU/BL	BLUE

Capital Abbreviation's Represent Wire Main Color
Lower Case Abbreviation's Represent Secondary Color

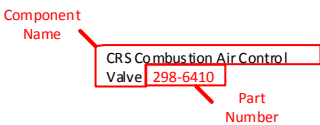

Component


1
2

Component Connection


SYMBOL

●	Splice
⌋	Circuit Breaker
⌋	Fuse
⌋	Diode
∞	Twisted Pair
>>	Passthrough
⌋	Ground
⌋	Power
⌋	Reference


62-Pin Connector (B)

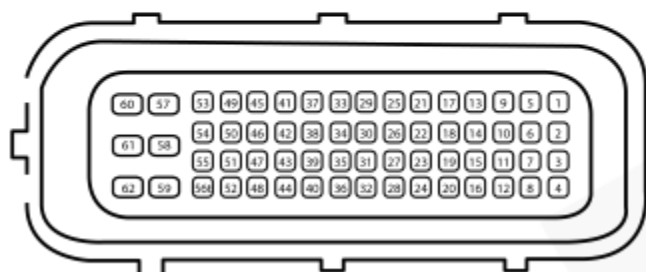

62-Pin Co

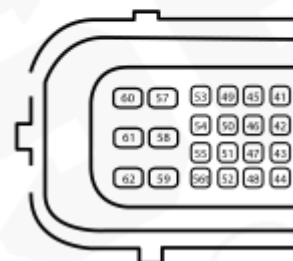

92-Pin Connector (C)

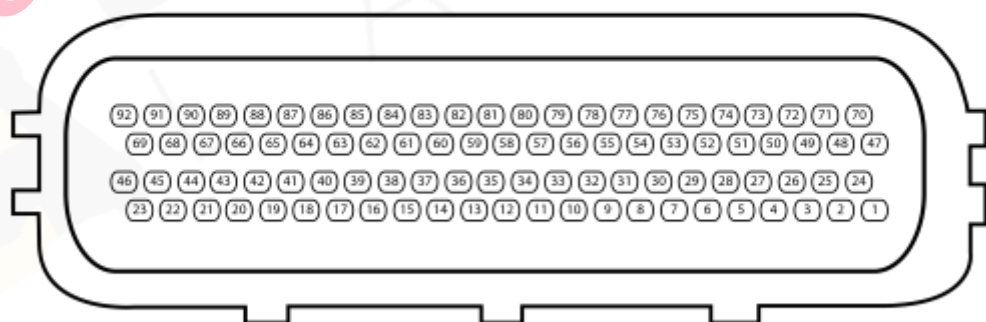

Cylinder 4, 5, 6

Solenoid Valve Injector Cyl 5	2
Solenoid Valve Injector Cyl 5	8
Solenoid Valve Injector Cyl 6	3
Solenoid Valve Injector Cyl 6	9
Solenoid Valve Injector Cyl 4	1
Solenoid Valve Injector Cyl 4	7
Solenoid Valve Eng Brake Cyl 5	5
Solenoid Valve Eng Brake Cyl 5	11
Solenoid Valve Eng Brake Cyl 6	12
Solenoid Valve Eng Brake Cyl 6	6
Solenoid Valve Eng Brake Cyl 4	4
Solenoid Valve Eng Brake Cyl 4	10

Cylinder 1, 2, 3

Solenoid Valve Injector Cyl 1	7
Solenoid Valve Injector Cyl 1	1
Solenoid Valve Injector Cyl 3	9
Solenoid Valve Injector Cyl 3	3
Solenoid Valve Injector Cyl 2	8
Solenoid Valve Injector Cyl 2	2
Solenoid Valve Eng Brake Cyl 2	11
Solenoid Valve Eng Brake Cyl 2	5
Solenoid Valve Eng Brake Cyl 1	4
Solenoid Valve Eng Brake Cyl 1	10
Solenoid Valve Eng Brake Cyl 3	12
Solenoid Valve Eng Brake Cyl 3	6

Cylinder 1 Solenoid Valve Pump Unit		1
Cylinder 5 Solenoid Valve Pump Unit		1
		2
Cylinder 3 Solenoid Valve Pump Unit		2
		1

Cylinder 6 Solenoid Valve Pump Unit		1
		2
Cylinder 2 Solenoid Valve Pump Unit		2
		1
Cylinder 4 Solenoid Valve Pump Unit		2
		1
Boost Temperature Sensor		2
		1
Fuel Temperature Sensor		3
		1
Crankshaft Sensor		3
		2
		1
Cams haft Sensor		3
		2
		1
Before Catalyst Nox Sensor		1
		2
		3
		4
Bo ost Press ure Sensor		1
		2
		4
Fuel Pres sure Sensor		1
		2
		4

Interface Nox
Sensor Connector

1
2
3
4

[Buy now](#)

[Paccar MX ECM Circuit Diagram PDF](#)

[With Instant Download](#)