

ORIGINAL INSTRUCTIONS

epcatalogs.com

Farmall I 05V
Tractor

OPERATOR'S MANUAL

Part number 47496802

1st edition English
January 2013



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Proposition 65	1-2
Electro-magnetic interference (EMC).....	1-3
International symbols	1-4
Introduction	1-6
Tractor intended use.....	1-7
Ecology and the Environment	1-9
Identification plates	1-10
Component Identification	1-12

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety information	2-2
Air conditioning safety regulations.....	2-6
Roll Over Protective Structure (ROPS).....	2-7
Personal protective equipment (PPE)	2-8
Tractor jacking points	2-9
Hazardous chemicals.....	2-10
Burn prevention.....	2-11
Getting in and out of the machine	2-12
Safety signs	2-13

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Cab	3-1
Heating system	3-4
Heating, ventilation or air-conditioning control	3-5
Cab air filter.....	3-7

OPERATOR'S SEAT

Operator seat.....	3-9
--------------------	-----

FORWARD CONTROLS

Analogue dashboard	3-11
Digital dashboard	3-16
Front controls	3-22

LEFT-HAND SIDE CONTROLS

Console Left-hand console - Control identification	3-25
Parking brake for hydraulic transmissions.....	3-26

RIGHT-HAND SIDE CONTROLS

Console Right-hand console - Control identification	3-27
---	------

EXTERIOR CONTROLS

Console - Control identification	3-30
--	------

DISPLAY SETTINGS

Instrument cluster - Program	3-31
------------------------------------	------

TRANSMISSION

Transmission - Operating 4WD models	3-38
Transmission with gear reducer and mechanical reversing mechanism	3-39
Transmission with gear reducer and electrohydraulic reversing mechanism	3-42
Parking brake for hydraulic transmissions	3-45
Transmission with gear reducer, electrohydraulic reversing mechanism and HI-LO control	3-46
Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and additional reducer	3-49

4 OPERATING INSTRUCTIONS

STARTING THE UNIT

Engine starting system - Safety rules	4-1
Engine starting system - Care	4-2
Engine starting system - Start	4-3

STOPPING THE UNIT

Engine starting system - Stop	4-5
-------------------------------------	-----

MOVING THE UNIT

Moving the machine	4-6
--------------------------	-----

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transporting the machine	5-1
--------------------------------	-----

RECOVERY TRANSPORT

Towing the tractor	5-2
--------------------------	-----

6 WORKING OPERATIONS

2WD or 4WD

Four-wheel drive with electrohydraulic actuation	6-1
--	-----

DIFFERENTIAL LOCK

Electrohydraulic differential lock	6-2
--	-----

REMOTE VALVES

General safety rules	6-3
Rear remote control valve(s)	6-4
Electrohydraulically controlled side hydraulic valves	6-7
Side hydraulic valves	6-9
Maintenance	6-10

POWER TAKE OFF (PTO)

Power take off (PTO)	6-12
----------------------------	------

HYDRAULIC LIFT

Hydraulic lift	6-15
Hydraulic lift with electronic control	6-17

THREE-POINT LINKAGE

Three-point linkage	6-22
Additional equipment attachment points	6-26

TOWBAR

General safety rules	6-27
Swinging drawbar	6-28

MAXIMUM PERMITTED LOADS

Front and rear axle	6-29
---------------------------	------

WHEELS AND TIRES

Wheels and tires	6-31
Tyre dimensions	6-35

WHEEL TRACK ADJUSTMENT

Wheel tread settings	6-37
Tire combinations and tread positions	6-40

BALLAST

Ballast	6-43
---------------	------

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service	7-1
Introduction	7-3

Various controls	7-4
Body maintenance.....	7-5
Running-in period.....	7-7
Fuel supply	7-8
General specification - Biodiesel Fuels	7-9
Fluids and lubricants	7-10
Opening the hood	7-12

MAINTENANCE CHART

Maintenance Chart	7-13
-------------------------	------

AS REQUIRED

Radiator expansion tank.....	7-15
Windscreen washer tank	7-15
Road light - Check.....	7-15
Clutch pedal adjustment.....	7-16
Parking brake or parking lock - Adjust.....	7-16
Radiator - Cleaning.....	7-16
Tyre pressure	7-17
Wheel nuts torque	7-17
Brake pedals	7-17

AT WARNING MESSAGE DISPLAY

Engine air filters	7-19
Fuel filter water drain	7-20
Brake fluid level	7-20

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-22
------------------------	------

EVERY 50 HOURS

Rear wheel hub.....	7-23
Lift and linkage	7-23
2WD steering cylinder	7-23
2WD front axle pivot	7-24
4WD front axle pivot	7-24
2WD left-hand stub axle	7-25
2WD right-hand stub axle	7-25

EVERY 100 HOURS

Transmission oil cooler	7-26
Air conditioning condenser	7-26
Intercooler	7-26
Cab air filter.....	7-27
Cab recirculated air filter	7-27

EVERY 300 HOURS

Alternator belt.....	7-28
----------------------	------

[Buy now](#)

[Case Farmall 105V PDF Operation manuals](#)

[With Instant Download](#)