

ORIGINAL INSTRUCTIONS

epcatalogs.com

# **Farmall I05V** Tractor

## **OPERATOR'S MANUAL**

**Part number 47768395**

3<sup>rd</sup> edition English

September 2014

*Replaces part number 47595699*



# Contents

---

## 1 GENERAL INFORMATION

|  |      |
|--|------|
| Note to the Owner .....                        | 1-1  |
| Intended use .....                             | 1-3  |
| Proposition 65 .....                           | 1-5  |
| Electro-Magnetic Compatibility (EMC) .....     | 1-6  |
| Manual scope and required training level ..... | 1-7  |
| Metric and imperial units abbreviations .....  | 1-8  |
| Identification plates .....                    | 1-10 |
| Identification plates .....                    | 1-12 |
| Machine orientation .....                      | 1-14 |
| Component Identification .....                 | 1-15 |

## 2 SAFETY INFORMATION

|  |      |
|--|------|
| Safety rules and signal word definitions .....           | 2-1  |
| Safety rules - General information .....                 | 2-2  |
| Safety rules - Maintenance .....                         | 2-2  |
| Safety rules - Wheels and tires .....                    | 2-3  |
| Safety rules - Explosions and fires .....                | 2-4  |
| Safety rules - Battery .....                             | 2-4  |
| Safety rules - Passenger seat .....                      | 2-5  |
| Safety rules - Power Take-Off (PTO) .....                | 2-5  |
| Safety rules - Seat belts .....                          | 2-5  |
| Safety rules - Operator protective structure .....       | 2-5  |
| Safety rules - HVAC system .....                         | 2-7  |
| Safety rules - Personal Protective Equipment (PPE) ..... | 2-8  |
| Safety rules - "Do not use" sign .....                   | 2-8  |
| Safety rules - Hazardous chemicals .....                 | 2-8  |
| Safety rules - Near utilities .....                      | 2-8  |
| Safety rules - In the event of electrical storms .....   | 2-9  |
| Safety rules - Getting on and off the machine .....      | 2-9  |
| Safety rules - Lifting and overhead loads .....          | 2-9  |
| Ecology and the environment .....                        | 2-10 |
| Towing the tractor for recovery .....                    | 2-11 |
| Tractor jacking points .....                             | 2-12 |
| Burn prevention .....                                    | 2-13 |
| Safety signs .....                                       | 2-14 |

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

|   |     |
|---|-----|
| Getting in and out of the machine .....             | 3-1 |
| Getting to know the internal parts of the cab ..... | 3-2 |

### OPERATOR'S SEAT

|                     |     |
|---------------------|-----|
| Operator seat ..... | 3-5 |
|---------------------|-----|

---

## FORWARD CONTROLS

|                          |      |
|--------------------------|------|
| Analogue dashboard ..... | 3-7  |
| Digital dashboard .....  | 3-11 |
| Front controls .....     | 3-17 |

## LEFT-HAND SIDE CONTROLS

|  |      |
|--|------|
| Console Left-hand console - Control identification ..... | 3-20 |
| Console Left-hand console - Control identification ..... | 3-22 |
| Parking brake for hydraulic transmissions .....          | 3-23 |

## RIGHT-HAND SIDE CONTROLS

|   |      |
|---|------|
| Console Right-hand console - Control identification ..... | 3-24 |
|---|------|

## OVERHEAD CONTROLS

|  |      |
|--|------|
| Heating system .....                                   | 3-26 |
| Heating, ventilation or air-conditioning control ..... | 3-28 |
| Cab air filter .....                                   | 3-30 |

## EXTERIOR CONTROLS

|  |      |
|--|------|
| Console - Control identification ..... | 3-32 |
| Console - Control identification ..... | 3-33 |

## DISPLAY SETTINGS

|                                    |      |
|------------------------------------|------|
| Instrument cluster - Program ..... | 3-34 |
|------------------------------------|------|

## TRANSMISSION

|   |      |
|---|------|
| Transmission - Operating 4WD models .....   | 3-41 |
| Transmission with gear reducer and mechanical reversing mechanism .....   | 3-42 |
| Transmission with gear reducer and electrohydraulic reversing mechanism .....   | 3-45 |
| Parking brake for hydraulic transmissions .....   | 3-48 |
| Transmission with gear reducer, electrohydraulic reversing mechanism and HI-LO control .....                          | 3-49 |
| Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and electrohydraulic clutch ..... | 3-52 |
| Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and additional reducer .....      | 3-57 |

## 4 OPERATING INSTRUCTIONS

### STARTING THE UNIT

|   |     |
|---|-----|
| Engine starting system - Safety rules ..... | 4-1 |
| Engine starting system - Care .....         | 4-2 |
| Engine starting system - Start .....        | 4-3 |

### STOPPING THE UNIT

|                                     |     |
|-------------------------------------|-----|
| Engine starting system - Stop ..... | 4-5 |
|-------------------------------------|-----|

---

## MOVING THE UNIT

|                          |     |
|--------------------------|-----|
| Moving the machine ..... | 4-6 |
|--------------------------|-----|

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

|                                |     |
|--------------------------------|-----|
| Transporting the machine ..... | 5-1 |
|--------------------------------|-----|

### RECOVERY TRANSPORT

|                          |     |
|--------------------------|-----|
| Towing the tractor ..... | 5-2 |
|--------------------------|-----|

## 6 WORKING OPERATIONS

### FOUR WHEEL DRIVE (4WD)

|  |     |
|--|-----|
| Four-wheel drive with electrohydraulic actuation ..... | 6-1 |
|--|-----|

### DIFFERENTIAL LOCK

|  |     |
|--|-----|
| Electrohydraulic differential lock ..... | 6-2 |
|--|-----|

### REMOTE VALVES

|  |      |
|--|------|
| General safety rules .....                                       | 6-3  |
| Rear remote control valve(s) .....                               | 6-4  |
| Electrohydraulically controlled side hydraulic valves .....      | 6-8  |
| Electrohydraulically controlled rear remote control valves ..... | 6-10 |
| Side hydraulic valves .....                                      | 6-11 |

### POWER TAKE OFF (PTO)

|                                 |      |
|---------------------------------|------|
| Safety rules .....              | 6-12 |
| Rear Power Take-Off (PTO) ..... | 6-13 |
| Rear Power Take-Off (PTO) ..... | 6-17 |

### HYDRAULIC LIFT

|  |      |
|--|------|
| Hydraulic lift with mechanical control ..... | 6-19 |
| Lift-O-Matic® control - Operating .....      | 6-20 |
| Hydraulic lift with electronic control ..... | 6-22 |

### REAR THREE-POINT HITCH

|  |      |
|--|------|
| Operating Instructions .....                 | 6-27 |
| Attach the implement .....                   | 6-31 |
| Additional equipment attachment points ..... | 6-33 |

### SWINGING DRAWBARS

|                            |      |
|----------------------------|------|
| General safety rules ..... | 6-34 |
| Swinging drawbar .....     | 6-35 |

---

|                        |      |
|------------------------|------|
| Swinging drawbar ..... | 6-36 |
|------------------------|------|

## WHEELS AND TIRES

|                        |      |
|------------------------|------|
| Wheels and tires ..... | 6-37 |
| Tyre dimensions .....  | 6-41 |

## WHEEL TRACK ADJUSTMENT

|   |      |
|---|------|
| Wheel tread settings .....                  | 6-43 |
| Tire combinations and tread positions ..... | 6-46 |

## BALLAST

|               |      |
|---------------|------|
| Ballast ..... | 6-49 |
|---------------|------|

## 7 MAINTENANCE

### GENERAL INFORMATION

|   |      |
|---|------|
| General safety before you service .....     | 7-1  |
| Introduction .....                          | 7-3  |
| Various controls .....                      | 7-4  |
| Body maintenance .....                      | 7-5  |
| Running-in period .....                     | 7-7  |
| Fuel supply .....                           | 7-8  |
| General specification .....                 | 7-9  |
| Organic Acid Technology (OAT) coolant ..... | 7-10 |
| Consumables .....                           | 7-12 |
| Opening the hood .....                      | 7-14 |

### MAINTENANCE CHART

|                         |      |
|-------------------------|------|
| Maintenance chart ..... | 7-15 |
|-------------------------|------|

### AS REQUIRED

|  |      |
|--|------|
| Engine coolant level .....                   | 7-17 |
| Windscreen washer tank .....                 | 7-17 |
| Road light - Check .....                     | 7-17 |
| Clutch pedal adjustment .....                | 7-18 |
| Parking brake or parking lock - Adjust ..... | 7-18 |
| Radiator - Cleaning .....                    | 7-18 |
| Tire pressure .....                          | 7-19 |
| Wheel nuts tightening torque .....           | 7-19 |
| Brake pedals .....                           | 7-20 |

### AT WARNING MESSAGE DISPLAY

|                               |      |
|-------------------------------|------|
| Engine air filters .....      | 7-21 |
| Fuel filter water drain ..... | 7-22 |
| Brake fluid level .....       | 7-23 |

### EVERY 10 HOURS OR EACH DAY

|                        |      |
|------------------------|------|
| Engine oil level ..... | 7-24 |
|------------------------|------|

[Buy now](#)

[Case Farmall 105V PDF Operation manuals](#)

[With Instant Download](#)