



Workshop literature

Series 4156

XD40 • XD45 • XD50

epcatalogs.com

[epcatalogs.com](http://epcatalogs.com)

## 00 General information

|                                                                                                    |       |
|----------------------------------------------------------------------------------------------------|-------|
| <b>Product information</b>                                                                         | 00- 1 |
| Instruction and maintenance manual                                                                 | 00- 1 |
| General Forklift Description                                                                       | 00- 1 |
| Definition of Direction of Travel                                                                  | 00- 2 |
| Overall dimensions                                                                                 | 00- 3 |
| Technical Data                                                                                     | 00- 3 |
| Abbreviations key                                                                                  | 00- 6 |
| Alternative lift characteristics                                                                   | 00- 6 |
| Forklift capacities - Model 40 - Masts vertical with forks = 1400 mm max. (for superelastic tyres) | 00- 8 |
| Forklift capacities - Model 40 - Masts vertical with forks = 1400 mm max. (for pneumatic tyres)    | 00-10 |
| Forklift capacities - Model 45 - Masts vertical with forks = 1400 mm max. (for superelastic tyres) | 00-12 |
| Forklift capacities - Model 45 - Masts vertical with forks = 1400 mm max. (for pneumatic tyres)    | 00-15 |
| Forklift capacities - Model 50 - Masts vertical with forks = 1400 mm max. (for superelastic tyres) | 00-17 |
| Forklift capacities - Model 50 - Masts vertical with forks = 1400 mm max. (for pneumatic tyres)    | 00-19 |
| Tyre characteristics                                                                               | 00-22 |
| Pneumatic tyre inflation pressure                                                                  | 00-22 |
| Lamps                                                                                              | 00-22 |
| Transporting the Forklift                                                                          | 00-22 |
| Loading and Unloading Forklift                                                                     | 00-23 |
| Forklift Towing                                                                                    | 00-24 |
| Internal accessibility                                                                             | 00-26 |
| <b>Safety precautions</b>                                                                          | 00-27 |
| Description of safety symbols                                                                      | 00-27 |
| Operations Preliminary to Maintenance                                                              | 00-27 |
| To avoid accidents                                                                                 | 00-27 |
| General safety Regulations                                                                         | 00-28 |
| Safety Regulations Relative to Operating Materials                                                 | 00-30 |

## 01 Technical assistance

|                                                                       |       |
|-----------------------------------------------------------------------|-------|
| <b>Maintenance</b>                                                    | 01- 1 |
| Synoptic table of general maintenance operations on the forklift      | 01- 1 |
| Synoptic table of maintenance operations to be performed on the motor | 01- 2 |
| Supply Table                                                          | 01- 2 |

## 12 Motor

|                                                                        |       |
|------------------------------------------------------------------------|-------|
| Motor views .....                                                      | 12- 1 |
| Motor views .....                                                      | 12- 1 |
| Technical Data .....                                                   | 12- 6 |
| Motor technical data .....                                             | 12- 6 |
| NEF motor - coding .....                                               | 12- 7 |
| Description of the main mechanical components of the motor .....       | 12- 9 |
| Motor lubrication .....                                                | 12-14 |
| Cooling .....                                                          | 12-17 |
| Mechanical fuel injection system .....                                 | 12-18 |
| Electrical components .....                                            | 12-19 |
| Injection system .....                                                 | 12-21 |
| Injection group .....                                                  | 12-21 |
| Injection pump .....                                                   | 12-21 |
| Feed stroke .....                                                      | 12-23 |
| Delivery stroke .....                                                  | 12-24 |
| End-of-delivery stroke .....                                           | 12-25 |
| Motor stop .....                                                       | 12-26 |
| L.D.A. device (adjustment of the flow as a function of the load) ..... | 12-27 |
| Starting .....                                                         | 12-28 |
| Starting device .....                                                  | 12-28 |
| Feed stroke depending on the load (L.F.B.) .....                       | 12-29 |
| Position of the regulator sleeve in the LFB .....                      | 12-30 |
| Automatic cold injection advance device (KKSB) .....                   | 12-31 |
| Adjustments .....                                                      | 12-33 |
| Timing .....                                                           | 12-33 |
| Timing of the injection pump .....                                     | 12-40 |
| Breakdown search .....                                                 | 12-41 |
| Motor breakdown search .....                                           | 12-41 |

## 13 Motor - accessory parts

|                           |       |
|---------------------------|-------|
| Motor fastening .....     | 13- 1 |
| Motor disconnection ..... | 13- 1 |
| Motor decomposition ..... | 13- 4 |
| Motor assembly .....      | 13- 5 |
| Motor reconnection .....  | 13- 7 |

|                                          |       |
|------------------------------------------|-------|
| <b>Air intake</b>                        | 13-12 |
| Air filter technical data                | 13-12 |
| Air filter blockage switch               | 13-13 |
| Air filter disconnection                 | 13-14 |
| Air filter reconnection                  | 13-16 |
| Additional air filter - Optional         | 13-19 |
| Cyclonic filter - Optional               | 13-21 |
| Cyclonic filter assembly - Optional      | 13-22 |
| <b>Cooling system</b>                    | 13-24 |
| Main radiator                            | 13-24 |
| Secondary radiator                       | 13-25 |
| Radiator disconnection                   | 13-26 |
| Radiator reconnection                    | 13-31 |
| <b>Tank</b>                              | 13-37 |
| Fuel tank disconnection                  | 13-37 |
| Fuel tank reconnection                   | 13-40 |
| <b>14 Exhaust gas system</b>             |       |
| Exhaust gas system                       | 14- 1 |
| Exhaust pipes and silencer disconnection | 14- 1 |
| Exhaust pipes and silencer reconnection  | 14- 3 |
| <b>20 Transmission</b>                   |       |
| General                                  | 20- 1 |
| Instructions for transmission service    | 20- 1 |
| Transmission                             | 20- 2 |
| Transmission breakdown search            | 20- 2 |
| Front axle                               | 20- 5 |
| Front axle technical data                | 20- 5 |
| Front axle sections                      | 20- 6 |
| Front axle breakdownsearch               | 20- 8 |
| Front axle disconnection                 | 20- 9 |
| Front axle reconnection                  | 20-15 |
| Procedure for changing the oil           | 20-16 |
| <b>31 Truck</b>                          |       |
| Counterweight                            | 31- 1 |
| Counterweight disconnection              | 31- 1 |

[Buy now](#)

[OM Pimespo Series 4156 XD40 â€¢ XD45 â€¢ XD50 Workshop literature PDF](#)

[With Instant Download](#)