CC Tractor **Operators Manual** 5259 Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

## BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS 1 THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE
- 2. MAKE SURE T. E ( PERATOR READS AND UNDERSTANDS THE OPERATOR'S MANCAL FOR THIS MACHINE.



4D (OPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

## BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

- 1. READ THE OPERATOR'S MANUAL.
- 2. READ ALL SAFETY DECALS ON THE MACHINE.
- 3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

© 1995 Case Corporation

CASE and IH are registered trade marks of Case Corporation

## CASE Manual

Instructions for Operation and Care of

CASE

MODEL "TRACTOR



TO C. RE WNERS-

h e thorough knowledge the owner has of his Tractor the better will be sun, and the greater the profit from its use. It is the desire of the J. h e Co., that every Tractor should give the highest degree of service and every effort is made toward insuring this service in the design and manufacture of the Tractor. When it passes into the hands of the owner it passes largely beyond the control of the Company. This manual has been prepared with the purpose of giving the owner as much knowledge of the Tractor as possible. The owner and particularly the operator is urged to read and study this manual to use good judgment in the use and care of his Tractor, and satisfactory service will follow.

CASE CO.

Racine - Wisconsin - U. S. A.

Form 5259 10M 6-39

## SPECIAL SAFETY INSTRUCTIONS

1. Do Not Operate New Tractor On Full Load.

No fine piece of machinery should ever be loaded to full capacity until it has been run light for a reasonable length of time. FOR FIRST 50 HOURS this tractor should be RUN AT HALF LOAD OR LESS BEFORE IT IS PUT ON FULL LOAD.

- 2. NEVER GET OFF OR ON TRACTOR WHILE IT IS IN MOTION.
- 3. When the power take-off shaft is used, be absolutely sure that guard furnished is in place. This guard is shown at (8) Fig. (16). If an attempt is made to operate power take-off without guard, operator may be injured this clothing being caught by the universal joint or the revolving shaft.
- NOTE: IT IS EQUALLY MP. STANT FOR THE SAFETY OF THE OPERATOR TO HAVE A SUIT OF UARD ON THE DRIVEN MACHINE, WHICH WILL PREVENT CL. TH. IG BEING CAUGHT BY THE REAR UNIVERSAL JOINT OR THE REV. LVI. IG SHAFT.
- NOTE: IF PO'LR TAKE-OFF OR OTHER POWER MACHINERY IS DELIVERED WITHOU PI PER GUARDS, APPLY FOR SAME TO YOUR NEAREST CASE DEALER LASE BRANCH HOUSE.
- 4. What craiming an engine the handle of the crank should be pulled upward with left hand so the operator's hand will be in a position to avoid being uc'ry the starting crank if there is a reversal of the direction of the engin from any cause.
  - the starting any tractor do not engage the clutch quickly. Always engage clean gradually so the engine will pick up the load slowly. This is particularly necessary when the tractor is going up a steep hill, climbing out of ditches or when hitched to some heavy or difficult load. Never hitch a tractor to a stump or other object by means of a long chain or rope with slack so that when the tractor moves forward it will jerk into the load.
- 6. When working on steep side hills, any tractor may tip over sideways, especially when the wheel on the lower side strikes a hollow, hole or ditch. The center of gravity on Case tractors is low and they are especially stable but when operating under unusual conditions they must be operated with reasonable care.
- 7. It is always advisable to reduce the speed of the tractor when turning.
- 8. When going up a steep hill or climbing out of a ditch or gully, any tractor is liable to raise its front wheels off the ground, if the full power is suddenly applied or by quickly engaging the clutch. Under such conditions the momentum of the flywheel adds to the power of the engine, and to avoid possibility of danger under these conditions the operator should keep his hand on the clutch lever, (or foot on the clutch pedal if foot clutch is used) engaging the power of the engine slowly and be prepared at all times to disengage the clutch promptly should the front wheels raise off the ground. The same precautions must be taken if the tractor becomes mired down by being driver into a soft bog, a mud hole or ditch.
- 8. Read Instruction Book Carefully.


The paragraphs of the following printed instructions are numbered in the order that the different operations should be done. Numbers on the illustrations correspond with the paragraph numbers and in many cases the partireferred to in the instructions are shaded or emphasized on the illustration so that the directions can be easily followed.

Ordering Parts.

OCO!

When ordering parts be sure to give Serial Number and Model of tractor and name and number of Part Ordered.



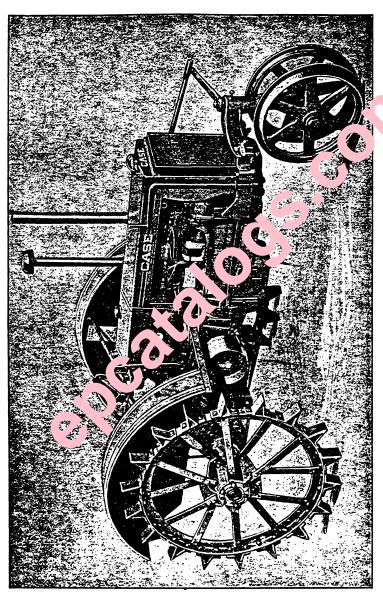

Buy now

Case CC tractor pdf operators manual

With Instant Download