elecatial costs

Model "LAI" **Tractor**

Operators Manual

5296

Reprinted



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

 
M171B

 
If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two ran. Pictorial, decals are defined as follows:

- The first panel indicates the nature of anc hazard.
- The second panel indicates the approvise avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as







IMPROPE', OF TRATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH, LETCIAL USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERA OF.

- Is in ructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

issued November, 1994

TO PURCHASERS OF NEW CASE MACHINES

Congratulations on your purchase of a CASE machine. Welcome to the ever-increasing number of satisfied CASE owners.

The dependability and economical performance of your new CASE machine will prove that you were wise in making this choice.


The organization back of your machine has been building quality farm equipment for more than a century. Your CASE machine was built in one of the largest and best equipped plants in the world. In this factory quality materials, the finest precision machiner, high grade workmanship, thorough inspection, and complete testing 'quipment are combined to give you the best in performance and economical operation.

The care which you give your machine will have a great deal to do with the service and satisfication you get from it. By observing the precautions and suggestions in this manual, your CASE machine will serve you well for many years frame this manual your guide. Should you need information not covere the e, or should your machine require special servicing, contact your CASE dealer. He has trained men who are kept informed on the best methods of servicing CASE machines in the field or in his shop.


Then it becomes necessary, after long use, to replace certain parts on your machine, be sure to use only genuine CASE parts, which insure proper fit and continued good service. These may be obtained from your CASE dealer. It is always helpful to provide him with the MODEL of your machine in addition to a description (and part number if available) of the parts required.

INDEX

| | Page No. |
|----------------------------|----------|
| Air Cleaner | 23 |
| Battery | 41 |
| Bearings - Front Wheel | 54 |
| Brakes | 49 |
| Carburetor | |
| Clutch | |
| Cold Weather Operation | |
| Cooling System | |
| Crankcase Breather | 45 |
| Fan Belt | 22 |
| Fuels | |
| Fuel Filter | 27 |
| Governor | |
| Lubrication | |
| Manifold | |
| Magneto | |
| Oil Filter | |
| Oil Pump | 42 |
| Oil Trap | 46 |
| Power Take-Off | 55 |
| Radiator Shutte | 21 |
| Serial Number | 56 |
| Service Eug. estions | 28 |
| Spar' lu | |
| Spec. cions | 4 |
| Speeds | 5 |
| Starting and Lighting | |
| Starting Engine | 7 |
| Starting Tractor | 9 |
| Stopping Tractor | 9 |
| Storing Tractor | 57 |
| Tires | 53 |
| Transmission Case Breather | 47 |
| Valves | 44 |
| Warranty | |
| Wheel Weights | 51 |

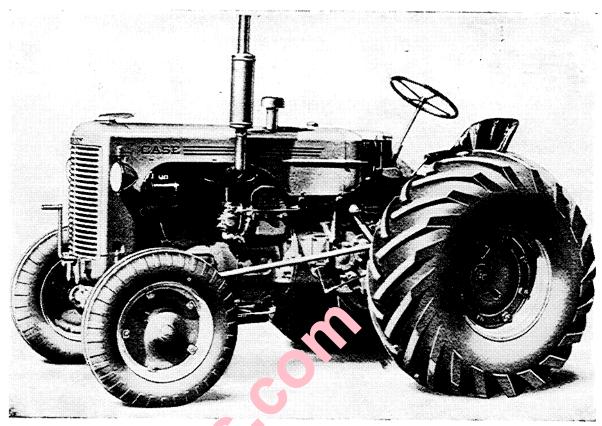

L. I e of Model "LAI" Tractor

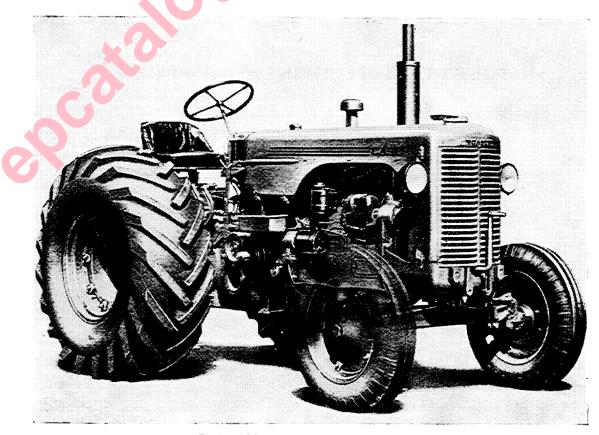

R. H. Side of Model "LAI" Tractor

Buy now

Case LAI tractor PDF Operator's Manual

With Instant Download