

epcatalogs.com

# **284 Tractor**

## **Operators Manual**

**1004164C1**





***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

## To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effort less versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.


Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

### METRIC (SI) MEASUREMENTS


3-6017-1001

A standard of measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parentheses.)

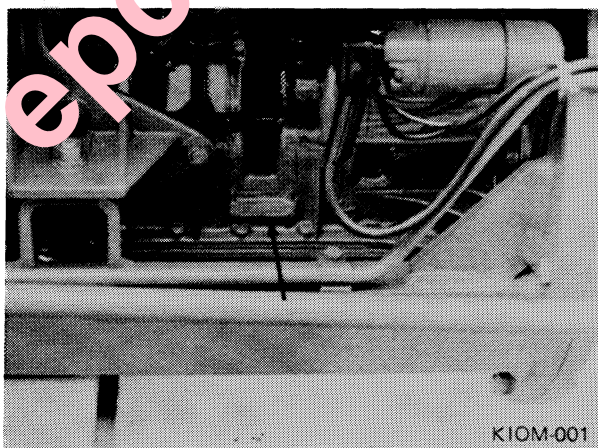

1. Engine serial number

---

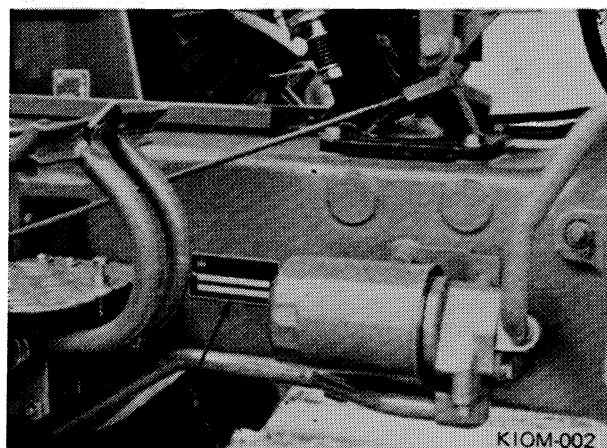

2. Tractor serial number

---

# CONTENTS

|   |           |  |            |
|---|-----------|--|------------|
| CONTENTS  | 1, 2      | OPERATING THE TRACTOR                      | 16 thru 20 |
| INTRODUCTION  | 3         | Starting the Tractor                       |            |
| WORK SAFELY – FOLLOW THESE RULES  | 4, 5      | After the Engine Starts                    |            |
| INSTRUMENTS AND CONTROLS  | 6 thru 13 | Driving the Tractor                        |            |
| Brake pedal   |           | Driving on Slopes                          |            |
| Brake latch   |           | Towing the Tractor                         |            |
| Choke   |           | Driving on Public Road                     |            |
| Clutch pedal  |           | Stopping the Tractor                       |            |
| Differential lock pedal   |           | Differential Lock                          |            |
| Drop control knob   |           | Rear Work Lamp (Optional)                  |            |
| Engine speed control lever  |           | POWER TAKE-OFF                             | 21, 22     |
| Flashing warning light  |           | General                                    |            |
| Flashing light switch   |           | Changing the Power Take-Off                |            |
| Front throttle control  |           | Speeds                                     |            |
| Fuse block  |           | Operating the Power Take-Off               |            |
| Gear shift lever  |           | HYDRAULIC LIFT AND HITCH SYSTEMS           | 23, 24     |
| Head and taillight switch   |           | Position Control Lever Adjustable          |            |
| Ignition switch   |           | Stop                                       |            |
| Instrument cluster (Tachometer speedmeter, hour meter, water tellite, oil pressure tellite, charge indicator tellite) |           | Position Control Lever Lock                |            |
| Low fuel indicator lamp   |           | THREE POINT HITCH                          | 24 thru 28 |
| Parking brake lever   |           | Lower Links and Upper Link                 |            |
| Position control lever  |           | Lower Link Adjustments                     |            |
| Position control lever adjustable stop  |           | Upper Link Adjustment                      |            |
| Position control lever lock   |           | Attaching to the Tractor                   |            |
| Power take-off lever  |           | Stabilizer                                 |            |
| Transmission range lever  |           | Uncoupling the Implement                   |            |
| OPTIONAL INSTRUMENTS AND CONTROLS   | 14        | Removing the Three Point Hitch Linkage     |            |
| Hydraulic Auxiliary Valve   |           | Installing the Three Point Hitch           |            |
| Rear Work Lamp  |           | HITCHING TRAILING EQUIPMENT TO THE TRACTOR | 28, 29     |
| BEFORE OPERATING THE TRACTOR  | 15, 16    | FRONT WHEELS                               | 29, 30     |
| Lubrication   |           | Adjusting the Tread Width                  |            |
| Air Cleaning System   |           | Fixed Drawbar                              |            |
| Tires   |           | Cross Drawbar (Optional)                   |            |
| Engine Cooling System   |           | REAR WHEELS                                | 30, 31     |
| Fuel  |           | WEIGHTS                                    | 32, 33     |
| Adjusting the Seat  |           | Front End Weights                          |            |
| Tractor Break-In Procedure  |           | Front Wheel Weights                        |            |
|   |           | Rear Wheel Weights                         |            |



## CONTENTS

|   |        |                                   |            |
|---|--------|-----------------------------------|------------|
| PREVENTIVE MAINTENANCE GUIDE                        | 34, 35 | Traction and Weights              | 51         |
|   |        | Overloading                       | 51         |
| PREVENTIVE MAINTENANCE                              | 36     | Brake                             | 51         |
| Hood  | 36     | Brake Adjustment                  | 51         |
| Fuel System   | 36     | Park Brake Adjustment             | 52         |
| Fuel Shut Off Valve                                 | 37     | Care and Adjustment of the Engine |            |
| Filler Cap Air Vent                                 | 37     | Clutch                            | 53         |
| Cleaning the Fuel Strainer and Sediment Bowl        | 37     | Engine Speed Control              | 53, 54     |
| Fuel Filter   | 37     |                                   |            |
| Carburetor  | 37     | STORING THE TRACTOR               | 55         |
| Carburetor Adjustment                               | 38     | Storage                           |            |
| Cooling System                                      | 38     | Removing from Storage             |            |
| Adding Coolant to the Cooling System                | 39     |                                   |            |
| Draining the Cooling System                         | 39     | COLD WEATHER PRECAUTIONS          | 56         |
| Cleaning the Cooling System                         | 39     | Fuel System                       |            |
| Filling the Cooling System                          | 39, 40 | Electrical                        |            |
| Care of the Radiator                                | 40     | Lubrication                       |            |
| Water Pump Governor and Fan-Alternator Belt Tension | 40     | Cooling System                    |            |
| Dry-Type Air Cleaner                                | 41, 42 | LUBRICATION                       | 56 thru 60 |
| Electrical System                                   | 43     | Checking the Oil Level            |            |
| Ignition System                                     | 43, 44 | Engine Oil                        |            |
| Charging System and Alternator-Generator            | 44     | Changing Oil Level                |            |
| Lighting Switch                                     | 44     | Gear Lubricant                    |            |
| Headlight Replacement                               | 44, 45 | Transmission Breather             |            |
| Flashing Warning Light                              | 45     | Lubrication Fitting Grease        |            |
| Taillight (Optional)                                | 46     | Oil Filter                        |            |
| Rear Work Lamp (Optional)                           | 46     | Hydraulic Fluid Filter            |            |
| Fuse  | 47     | Greasing the Front Wheels         |            |
| Battery   | 47, 48 | LUBRICATION TABLE                 | 61         |
| Tellite Bulb Replacement                            | 48, 49 | LUBRICATION GUIDE                 | 62 thru 64 |
| Front and Rear Wheels                               | 49     | SPECIFICATIONS                    | 65 thru 67 |
| Adjusting the Toe-in                                | 49     |                                   |            |
| Tires   | 50     | EXTRA EQUIPMENT AND ACCESSORIES   | 68         |
| Care of Tires                                       | 50     |                                   |            |
| Inflation   | 50     | CAUTION PRODUCT GRAPHICS          | 69 thru 71 |
| Using the Spark Plug Tire Pump                      | 50     |                                   |            |
| Shipping Tractors Equipped with Pneumatic Tires     | 50, 51 | METRIC (SI) MEASUREMENTS          | 72         |
| Mounting Tires on the Rim                           | 51     |                                   |            |

[Buy now](#)

[Case 284 Tractor Operator's Manual PDF](#)

[With Instant Download](#)