

epcatalogs.com


284 Tractor

Operators Manual

1058732C3

Reprinted



 ***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effort less versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.

THIS MANUAL IS FOR TRACTOR WITH SERIAL NUMBER OF
J012 925 AND ABOVE . . . 284 Gasoline tractor
J000 501 AND ABOVE . . . 24 Diesel tractor



METRIC (SI) MEASUREMENTS

A standard of measurement known as International System of Units (SI) has been adopted for worldwide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parentheses.)

Gasoline tractor



Diesel tractor

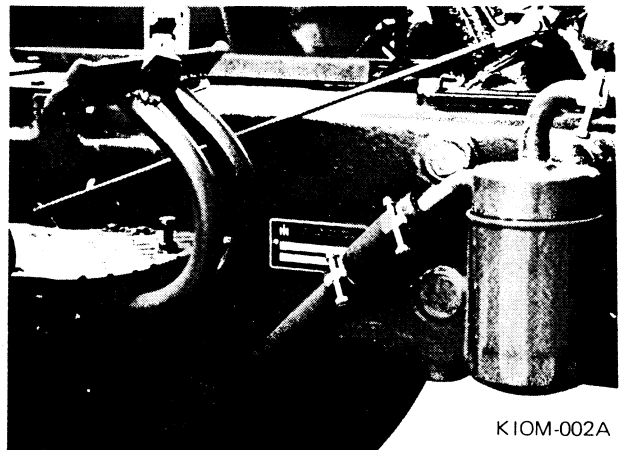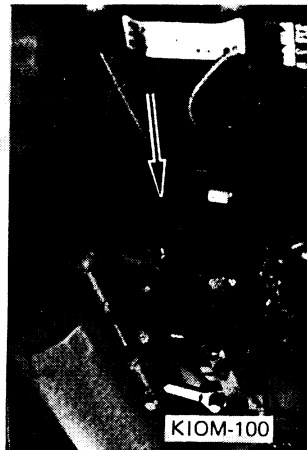

1. Engine serial number

2. Tractor serial number

epcatalogs.com

CONTENTS

CONTENTS	1,2	OPERATING THE TRACTOR	20 thru 24
INTRODUCTION	3	Starting the Tractor	
WORK SAFELY—FOLLOW THESE RULES	4 thru 6	After the Engine Starts	
INSTRUMENTS AND CONTROLS	7 thru 15	Driving the Tractor	
Brake pedals		Driving on Slopes	
Brake latch		Towing the Tractor	
Choke control (Gasoline tractor)		Driving on Public Road	
Clutch pedal		Stopping the Tractor	
Differential lock pedal		Differential Lock	
Drop control knob		Hydraulic Auxiliary Valve (Optional)	
Engine speed control lever		Rear Work Lamp (Optional)	
Flashing light switch		Power Steering (Optional)	
Foot throttle control			
Fuel shut off lever (Diesel tractor)		POWER TAKE-OFF	25, 26
Fuse block		General	
Gearshift lever		Changing the Power Take-Off	
Glow signal (Diesel tractor)		Speeds	
Head and taillight switch		Operating the Power Take-Off	
Hood open knob			
Ignition switch (Gasoline tractor)		HYDRAULIC LIFT AND HITCH	
Instrument cluster (Tachometer, speedometer, hour meter, water temperature tellite, oil pressure tellite, charge indicator tellite)		SYSTEMS	27, 28
Starting switch lever (Diesel tractor)		Position Control Lever Adjustable	
Low fuel indicator lamp		Stop	
Park brake lever		Position Control Lever Lock	
Position control lever		Drop Control Knob	
Position control lever adjustable		THREE POINT HITCH	29 thru 32
Position control lever lock		Lower Links and Upper Link	
Power take-off lever		Lower Link Adjustments	
Transmission range lever		Upper Link Adjustment	
OPTIONAL INSTRUMENTS AND CONTROLS	16, 17	Attaching to the Tractor	
Hydraulic Auxiliary Valve		Stabilizer	
Rear Work Lamp		Uncoupling the Implement	
Taillight		Removing the Three Point Hitch	
All-Wheel Drive		Linkage	
BEFORE OPERATING THE TRACTOR	18, 19	Installing the Three Point Hitch	
Lubrication		HITCHING TRAILING EQUIPMENT TO THE TRACTOR	33
Air Cleaning System			
Tires		FRONT WHEELS	34, 35
Engine Cooling System		Adjusting the Tread Width	
Fuel		REAR WHEELS	35, 36
Adjusting the Seat		Adjusting the Tread Width	
Tractor Break-In Procedure		WEIGHTS	37, 38
		Front End Weights	
		Front Wheel Weights	
		Rear Wheel Weights	

[Buy now](#)

[Case 284 Tractor Operator's Manual PDF](#)

[With Instant Download](#)