elecation of the second of the

International 966 Tractor

Operator's Manual

1084205R1

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two ran. Pictorial, decals are defined as follows:

- The first panel indicates the nature of are hazard.
- The second panel indicates the approvise avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





IMPROPE OF TRATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH, LE C. LE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERA OF.

- Is in ructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000 issued November, 1994


INTERNATIONAL®


966

TRACTOR

INTERNATIONAL

OPERATOR'S MANUAL

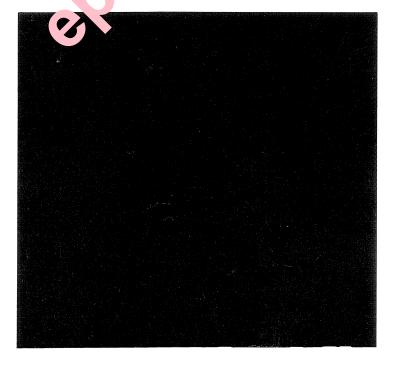

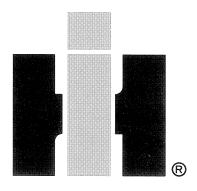

To The Owner

Assembled in this manual are operation, lubrication, and maintenance instructions for the Farmall 966 Diesel Tractor. The Farmall 966 Tractor including the Hi-Clear and All-Wheel Drive Models, have either a conventional clutch and transmission or hydrostatic drive. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained servicemen, informed in the latest method of servicing tractors and modern tools, and original-equipment II service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor model and serial numbers, including prefix and suffix letter. Write these serial numbers in the spaces provided under "Serial Numbers".

Universal symbols are used to pictorially dentify various tractor instruments and controls. Throughout this manual an including symbol is placed by the instructions like this example for engine coolant temperature. We waves signify water or coolant and the thermometer indicates temperature. Regardless of the language used in a nation, and without translation, this symbol means water or coolant temperature.

A Careful Operator

S THE BEST INSURANCE AGAINST AN ACCIDENT

THIS MANUAL IS FOR TRACTORS WITH TRACTOR SERIAL NO. 17000 AND ABOVE.

DEALER'S COPY

OWNER'S COPY

DELIVERY SERVICE FOR 966 TRACTOR

Delivered to		Dealer
R.R. No	Box No	Town
		Serial No
	I content, equipment	the above described equipment which review included care, adjustments, and safe operation. The warranty ewed.
		DEALER'S SIGNATURE ave been received by me and I have been thoroughly tion and applicable warranty policy.
DATE		OWNER'S SIGNATURE
	FOLD BACK H	IERE AND ADD CARBON — — — — — — — — — — — — — — —
2		HERE AND ADD CARBON ————————————————————————————————————
Delivered to		Dealer
		Town
Town		Serial No
StateI have thoroughly inst	Zip ructed the buyer on t I content, equipment	Engine Serial No. the above described equipment which review included care, adjustments, and safe operation. The warranty
		DEALER'S SIGNATURE ave been received by me and I have been thoroughly ion and applicable warranty policy.
DATE		OWNER'S SIGNATURE

- CUT ALONG THIS LINE FIRST

Buy now

Case 966 Tractor PDF Operator's Manual

With Instant Download