epcataloos.com 4156 Tractor

Operators Manual

1082774R1



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

 
M171B

 
If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two ran. Pictorial, decals are defined as follows:

- The first panel indicates the nature of anc hazard.
- The second panel indicates the approvise avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as







IMPROPE', OF TRATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH, LETCIAL USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERA OF.

- Is in ructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

issued November, 1994

To The Owner

Assembled in this manual are operation, lubrication, and maintenance instructions for the International 4156 Four-Wheel Drive Tractor. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.


Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained servicemen, informed in the latest metho of servicing tractors, and modern tools, and ginal-equipment IH service parts which assure proper fit and good performance.


To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.

Before you operate the tractor study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the transparent and engine serial numbers, including fin and suffix letters. Write these serial numbers in the spaces provided below.

Note: When transporting a unit, seal the intake and exhaust pipe openings to prevent the entrance of foreign materials.

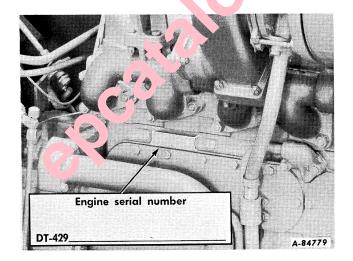

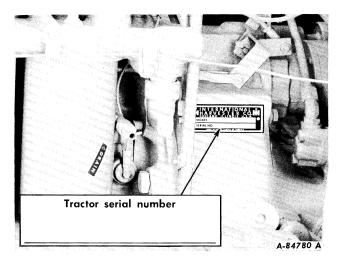

CONTENTS

Description	Page No.
CONTENTS	1
INTRODUCTION	2
INSTRUMENTS AND CONTROLS	3
BEFORE OPERATING YOUR NEW TRACTOR	4
DRIVING THE TRACTOR	5 to 7 7 to 12 13 13 to 15
HYDRAULIC CONTROLS FOR THREE-POINT HIT	15,16
THREE-POINT HITCH	16 to 19
AUXILIARY VALVES AND REMOTE CYLYNDERS	22, 23 24 25 25 to 28 28 to 31
ELECTRICAL SYSTEM	31 to 39
MINOR ENGINE SERV. C PERATIONS	40 to 42
STEERING, WHEELS, AND PNEUMATIC TIRES	43
WEIGHTS	44 to 46
BRAKES	46,47
ENGINE CL TCH	47,48
STC '.N ; THE TRACTOR	48, 49 50 51 to 55
LUBRICATION	55 to 59
LUBRICATION TABLE	59
LUBRICATION GUIDE	60 to 63
PREVENTIVE MAINTENANCE GUIDE	64, 65
SPECIFICATIONS	65 to 67
QUICK COUPLER	20,21
EXTRA EQUIPMENT AND ACCESSORIES	67
INDEX	68,69

Buy now

Case 4156 Tractor PDF Operator's Manual

With Instant Download