elecatiano de la constitución de

4166 Tractor

Operators Manual

1084116R1

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two ran. Pictorial, decals are defined as follows:

- The first panel indicates the nature of the haward.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





IMPROPE, OF RATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH, SE CHE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERA. OF.

- Is in ructed in safe and proper use of the machine.
- leads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000 issued November, 1994

CONTENTS

CONTENTS	1	POWER TAKE-OFF	37,38
INTRODUCTION	2	COOLING SYSTEM	39 to 41
WORK SAFELY - FOLLOW THESE RULES	3,4	AIR CLEANING SYSTEM	42 to 44
TRACTOR INSTRUMENTS AND CONTROLS	4,5	ELECTRICAL SYSTEM STEERING, WHEELS, AND PNEUMATIC	45 to 50
CAB CONTROLS	6,7	TIRES	51
CAB EQUIPMENT PREVENTIVE	0.411	WEIGHTS	52
MAINTENANCE	8 t 11	STORING THE TRACTOR	53,54
BEFORE OPERATING YOUR NEW TRACTOR	12	COLD WEATHER PRECAUTIONS	55
DRIVING THE TRACTOR	13 to 16	LUBRICATION	56 to 59
ENGINE AND FUEL SYSTE	17 to 23	LUBRICATION TABLE	60
HYDRAULIC CONTROLS FOR THREE-POINT HIT OF	24	LUBRICATION GUIDE	61 to 65
THREE-POINT 41, 74	25 to 30	PREVENTIVE MAINTENANCE GUIDE	66,67
HITCHING TR. "LING EQUIPMENT	21.22	SPECIFICATIONS	68 to 70
TO THE TRICTOR AUX '17 RY VALVES, REMOTE	31,32	OPTIONAL EQUIPMENT	71



CYLIL DERS AND HYDRAULIC OUTLETS 33 to 36

INTRODUCTION



1 - Right 2 - Rear 3 - Left 4 - Front

Illust. 2
Terms of location.

LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. See Illust. 2.

The illustrations in this manual are numbered to correspond with the pages on which they appear; for example, Illust. 2, is on page 2.

A variety of optional equipment is available. Refer to "Optional Equipment". Operating and maintenance instruction on these items is included in the instructions for operating or Maintaining the tractor.

WORK SAFELY - FOLLOW THESE RULES



This symbol is used to call your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions.

A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT

BEFORE STARTING

Know the controls and what they do.

When fueling an engine, keep any type of open flame away. Do Not Smoke! Wait for the engine to cool before refueling it.

Check brakes and clutch for correct adjustments.

Check coolant and engine oil leve's, and perform any other necessary service before starting the engine.

Clean dirt, trash, and greater rom operator's platform, pedals, rep., and steering wheel.

Be sure exhaust in the side extension are in place so exhauters are discharged above operator

Always a 'v a "Charged" fire extinguisher and wirst aid kit.

1. 'a wose-fitting clothing, which could can be moving parts.

Mounting assist handles and steps are provided for your safety. Use them when getting on or off the tractor.

Put all controls in neutral before starting the engine.

Be sure power take-off lever is in the "OFF" or disengaged position before starting engine.

Before starting engine make sure helpers or observers stand clear of equipment.

Operate the engine only in well ventilated areas.

Release park brake completely.

Check overhead clearance carefully before driving under power lines, guy wires, bridges, low hanging tree branches, entering or leaving buildings, etc.

DURING OPERATION

Hydraulic fluid escaping under pressure can have enough force to penetrate the skin. Indraulic fluid may also infect a minor cut or opening in the skin. If injured by escaping fluid, see a doctor at once. Serious infection or reaction can result if medical treatment is not given immediately. Make sure all connections are tight and that hoses and lines are in good condition before applying pressure to the system. Relieve all pressure before disconnecting the lines or performing other work on the hydraulic system. To find a leak under pressure use a small piece of cardboard or wood. Never use hands.

Power take-off master shield must always be in place on the tractor.

Use the drawbar in lowest position when hitching to a heavy load, such as manure spreaders, loaded two-wheel trailers, and heavy wagons.

Pull only from drawbar; never hitch to axle housing.

Shift transmission to neutral and set park brake before dismounting to hitch equipment.

Always keep safety shields in place when using power take-off.

Disengage PTO and shut off the engine before adjusting or unclogging power driven machinery.

Only the operator should ride on the tractor. He should sit on the seat or stand on the platform. If the tractor has roll over protective frame, he should sit on the seat with the safety belt fastened.

Buy now

Case 4166 Tractor PDF Operator's Manual

With Instant Download