

epcatalogs.com


# **Cub Tractor**

## **Operators Manual**

1084506R1

Reprinted





***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

## To The Owner

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory trained servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.

To obtain top performance and assure economical operation the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester Dealer.


Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.


**THIS MANUAL IS FOR TRACTORS WITH SERIAL NUMBER 248 125 AND ABOVE.**

### METRIC (SI) MEASUREMENTS

A standard of metric measurement known as International System of Units (SI) has been adopted for world-wide use. English Units followed by Metric Equivalents are used throughout this manual. (Metric Equivalents are given in parentheses.)

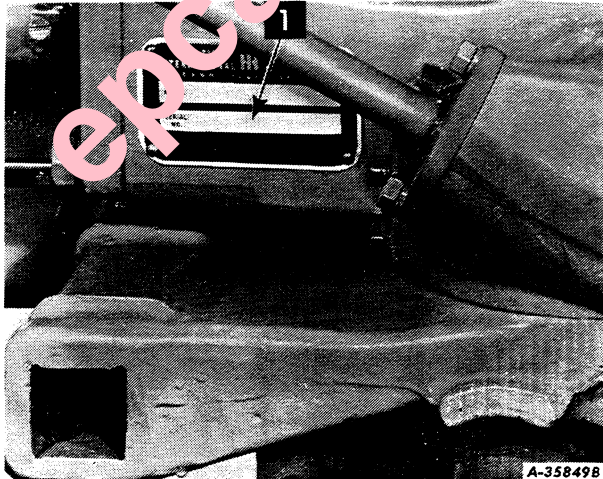

1 - Tractor Serial number \_\_\_\_\_

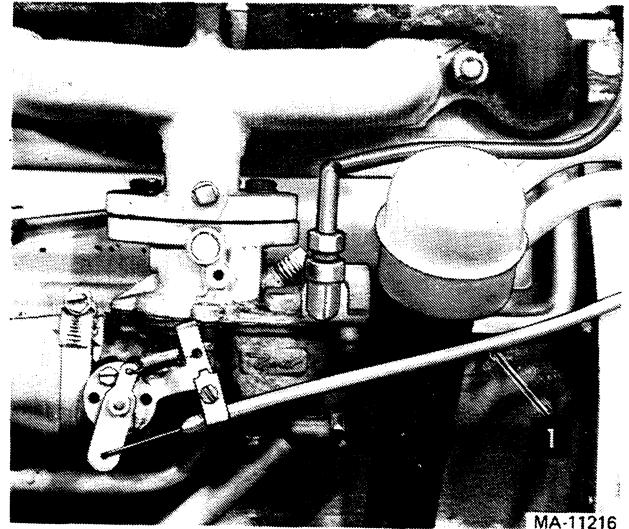

1 - Engine serial number \_\_\_\_\_

[epcatalogs.com](http://epcatalogs.com)

# CONTENTS

<b>CONTENTS</b>	1, 2	<b>TOUCH CONTROL LIFT SYSTEM</b>	19
<b>INTRODUCTION</b>	3	<b>FAST-HITCH</b>	20 thru 23
<b>WORK SAFELY — FOLLOW THESE RULES</b>	4 thru 6	Depth Adjusting Crank and Hitch Bail	
<b>INSTRUMENTS AND CONTROLS</b>	7 thru 11	Leveling Crank and Stop Collar	
Brake Pedals		Diagonal Link	
Brake Pedal Latch		Pull Bar	
Brake Pedal Lock		Lift Links	
Choke Control		Pull Bar Extension	
Charge Indicator		Uncoupling the Equipment	
Clutch Pedal		Coupling the Equipment	
Engine Speed Control Lever		<b>DRAWBARS</b>	23, 24
Fuse Holder		Fast-Hitch Drawbar	
Gearshift Lever		Removing the Drawbar	
Ignition Switch		Adjusting the Drawbar	
Lighting Switch		<b>WEIGHTS</b>	25, 26
Oil Pressure Gauge		Front Wheel Weights	
Power Take-Off Shifter Rod		Rear Wheel Weights	
Touch Control Lever (With Adjustable Stop)		<b>TREAD WIDTH ADJUSTMENT</b>	27 thru 30
<b>BEFORE OPERATING THE TRACTOR</b>	11 thru 13	Front Tread Width Adjustment	
Lubrication		Rear Tread Width Adjustment	
Air Cleaning System		<b>PREVENTIVE MAINTENANCE GUIDE</b>	31, 32
Tires		<b>PREVENTIVE MAINTENANCE</b>	33 thru 48
Engine Cooling System		Fuel System	33
Fuel		Fuel Shut Off Valve	33
Tractor Break-In Procedure		Filler Cap Air Vent	33
<b>OPERATING THE TRACTOR</b>	13 thru 15	Cleaning the Fuel Strainer and Sediment Bowl	33, 34
Starting the Tractor		Carburetor	34
After the Engine Starts		Cooling System	34
Driving the Tractor		Radiator Cap Removal	35
Gearshift Lever		Adding Coolant to the Cooling System	35
Brake Pedals		Draining the Cooling System	35
Driving on Slopes		Cleaning the Cooling System	35
Stopping the Tractor		Filling the Cooling System	36
<b>POWER TAKE-OFF</b>	16	Care of the Radiator Fan, Crank and Alternator	36
<b>POWER TAKE-OFF DRIVEN BELT PULLEY</b>	17, 18	Belt Tension	36, 37
Changing from Power Take-Off to Belt Pulley		Oil Cup Service	37
Changing from Belt Pulley to Power Take-Off		Oil Bath Air Cleaner	38
		Air Cleaning System	38
		Washing the Cleaner	38

[Buy now](#)

[Case Cub Tractor PDF Operator's Manual](#)

[With Instant Download](#)