

Shop Manual

HYDRAULIC
EXCAVATOR

PC800 -8

PC800LC -8

PC800SE -8

PC850 -8

PC850SE -8

SERIAL NUMBERS

PC800- 50001

PC800LC- 50001

PC800SE- 50001 and up

PC850- 10001

PC850SE- 10001

ECOT3

KOMATSU

epcatalogs.com

HYDRAULIC EXCAVATOR

PC800-8
PC800SE-8
PC800LC-8

PC850-8
PC850SE-8

Machine model	Serial number
PC800-8	50001 and up
PC800SE-8	50001 and up
PC800LC-8	50001 and up
PC850-8	10001 and up
PC850SE-8	10001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00373-12
00 Index and foreword	SEN00374-12
Index	SEN00375-12 ●
Foreword and general information	SEN00376-03
01 Specification	SEN00377-02
Specification and technical data	SEN00378-02
10 Structure, function and maintenance standard	SEN00379-07
Engine and cooling system	SEN00380-01
Power train	SEN00381-01
Undercarriage and frame	SEN00382-01
Hydraulic system, Part 1	SEN00383-03
Hydraulic system, Part 2	SEN00384-03
Work equipment	SEN00385-01
Cab and its attachments	SEN00396-01
Electrical system	SEN00386-05
20 Standard value table	SEN00387-02
Standard service value table	SEN00784-02
30 Testing and adjusting	SEN00388-04
Testing and adjusting, Part 1	SEN00786-04
Testing and adjusting, Part 2	SEN00788-03
Testing and adjusting, Part 3	SEN00912-02
Testing and adjusting, Part 4	SEN00913-03
Testing and adjusting, Part 5	SEN00914-03
40 Troubleshooting	SEN00389-05
Failure code table and fuse locations	SEN02797-02
General information on troubleshooting	SEN00789-04
Troubleshooting by failure code (Display of code), Part 1	SEN00790-04
Troubleshooting by failure code (Display of code), Part 2	SEN00791-03
Troubleshooting by failure code (Display of code), Part 3	SEN00792-03
Troubleshooting of electrical system (E-mode)	SEN00793-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00794-02

Troubleshooting of engine (S-mode)	SEN00795-03
50 Disassembly and assembly	SEN00390-05
General information on disassembly and assembly	SEN01052-03
Engine and cooling system (SAA6D140E-5)	SEN01053-01
Engine (SAA6D140E-5)	SEN01054-01
Power train	SEN01055-02
Undercarriage and frame	SEN01056-04 ●
Hydraulic system	SEN01057-03
Work equipment	SEN01058-00
Cab and its attachments	SEN01059-01
Electrical system	SEN01060-01
90 Diagrams and drawings	SEN00391-04
Hydraulic diagrams and drawings	SEN00392-02
Electrical diagrams and drawings	SEN00393-03

[Buy now](#)

[Komatsu Hydraulic Excavator PC800/SE/LC-8, PC850/SE-8 Shop Manual PDF](#)

[With Instant Download](#)