

PART No. EM172-2-4

OPERATOR'S MANUAL

EX700

EXCAVATOR

Serial. No. 01526 and up

HITACHI

epcatalogs.com

INTRODUCTION

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or machine damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

This machine is of metric design. Measurements in this manual are metric. Use only metric hardware and tools as specified.

Right-hand and left-hand sides are determined by facing in the direction of forward travel.


Write product identification numbers in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of Hitachi's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that Hitachi will back its products where defects appear within the warranty period. In some circumstances, Hitachi also provides field improvements, often without charge to the customer, even if the product is out of warranty. **Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.** Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

Only qualified, experienced operators officially licensed (according to local law) should be allowed to operate the machine.

Moreover, only officially licensed personnel should be allowed to inspect / service the machine.

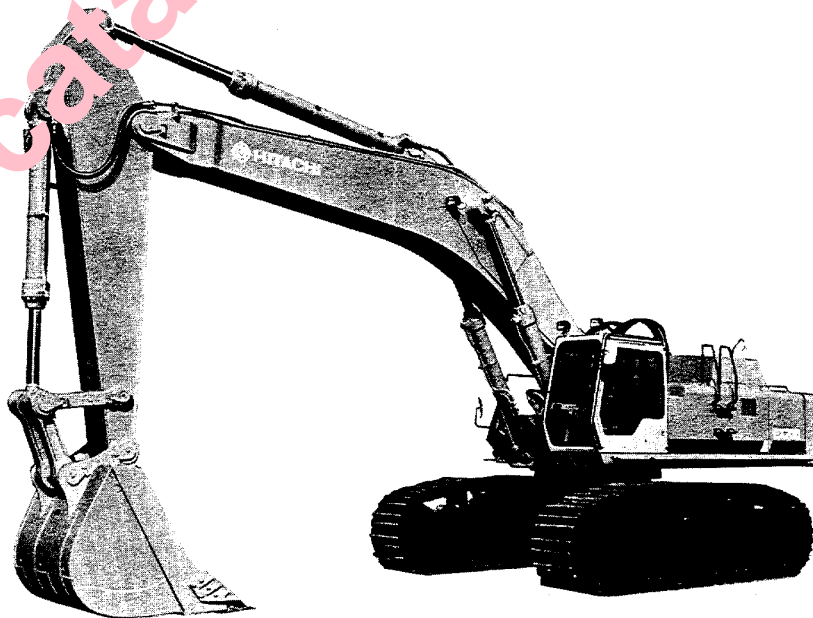

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

epcatalogs.com

CONTENTS

Safety	1	Maintenance	
Safety Signs	16	Correct Maintenance and Inspection	
Operational Safety	19	Procedure	81
Getting On/Off The Machine	21	Maintenance Interval Guide	92
Operator's Station		A. Greasing	95
Pedals and Levers	22	B. Engine Oil	105
Monitor Panels and Switch Panels	23	C. Gear Oil	108
Gauges and Indicators on		D. Hydraulic System	113
The Monitor Panel	26	E. Fuel System	122
Air Conditioner	32	F. Air Cleaner	124
Radio Operation	36	G. Cooling System	126
Operator's Seat Adjustment	38	H. Air Conditioner	134
Seat Belt (Optional)	40	I. Electrical System	138
Break-In	6	Miscellaneous	
Pre-Start Inspection	7	Replace Air Governor Element	141
Operating the Engine		Check Bucket Teeth	142
Check Instrument before Starting	48	Check and Adjust Track Sag	151
Starting the Engine	49	Adjust Bucket Linkage	152
Starting in cold weather	50	Auto-Lubrication System (Optional) ..	153
Using Booster Batteries	51	Check Tightening Torque of	
Check Instrument after Starting		Bolts and Nuts	156
Stopping the Engine	52	Maintenance Under Special Environmental	
Driving the Machine		Conditions	172
Drive Machine Carefully, Travel		Storage	173
Speed Switch	53	Assembling	174
Travel Alarm (Optional),		Transporting	189
Steering the Machine Using Pedals,		Troubleshooting	
Steering the Machine Using Levers	54	Engine	206
Operating the Machine		Electrical System	208
Horn, Control Lever	57	Hydraulic System	209
Bucket Open-Close, Pilot Control		Mode Selection, Auto-Idle	212
Shut-off Lever	62	Specifications	213
Warming Machine	64	Machine Numbers	225
Auto-Idle Switch	65		
Mode Selection Switch, Power-saving Switch,			
Boom/Swing Priority Switch,			
Heavy Lift Button (Optional)	66		
Traveling	69		
Backhoe Operation	73		
Loading Shovel Operation	76		
Craning	79		

[Buy now](#)

[Hitachi Excavator EX700 Operator's Manual PDF](#)

[With Instant Download](#)