

SHOP MANUAL

PW95R-2

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PW95R-2 21D0210001 and up

PW95R-2 21D0220001 and up



epcatalogs.com

CONTENTS

	Page
10 STRUCTURE AND FUNCTION.....	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD.....	40-1

epcatalogs.com

epcatalogs.com

**PAGE INTENTIONALLY
LEFT BLANK**

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to table below.

Mark	Indication	Action required
○	Page to be newly	Add
●	Page to be replaced	Replace
()	Page to be delete	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	00-1			10-20			10-108			20-7				
	00-2			10-21			10-109			20-8				
	00-2-1			10-22			10-110			20-9				
	00-2-2			10-23			10-111			20-10				
	00-3			10-24			10-112			20-11				
	00-4			10-25			10-113			20-12				
	00-5			10-26			10-114			20-13				
	00-6			10-27			10-115			20-14				
	00-7			10-28			10-116			20-15				
	00-8			10-29			10-117			20-16				
	00-9			10-30			10-118			20-17				
	00-10			10-31			10-119			20-18				
	00-11			10-32			10-120			20-19				
	00-12			10-33			10-121			20-20				
	00-13			10-34			10-122			20-21				
	00-14			10-35			10-123			20-22				
	00-15			10-36			10-124			20-23				
	00-16			10-37			10-125			20-24				
	00-17			10-38			10-126			20-25				
	00-18			10-39			10-127			20-26				
	00-19			10-40			10-128			20-27				
	00-20			10-41			10-129			20-28				
	00-21			10-42			10-130			20-29				
	00-22			10-43			10-131			20-30				
				10-44			10-132			20-31				
	10-1			10-45			10-133			20-32				
	10-2			10-46			10-134			20-33				
	10-3			10-47			10-135			20-34				
	10-4			10-48			10-136			20-35				
	10-5			10-49			10-137			20-36				
	10-6			10-50			10-138			20-37				
	10-7			10-51			10-139			20-38				
	10-8			10-52			10-140			20-39				
	10-9			10-53			10-141			20-40				
	10-10			10-54			10-142			20-41				
	10-11			10-55			10-143			20-42				
	10-12			10-56			10-144			20-43				
	10-13			10-57						20-44				
	10-14			10-58			20-1			20-45				
	10-15			10-59			20-2			20-46				
	10-16			10-60			20-3			20-47				
	10-17			10-61			20-4			20-48				
	10-18			10-62			20-5			20-49				
	10-19			10-63			20-6			20-50				

[Buy now](#)

[Komatsu Hydraulic Excavator PW95R-2 Shop Manual PDF](#)

[With Instant Download](#)