



MANITOU NORTH AMERICA, INC.

6401 IMPERIAL DRIVE
Waco, TX 76712-6803

NOTE: *Manitou Forklift Manuals are continually updated and subject to change without prior notice. If your Forklift Model or parts are not found in this manual, please contact your dealer or the Manitou North America Parts Department for the latest information and parts availability.*

epcatalogs.com

SLT415B

SERIES 2-E2

S/N: 205925 & ABOVE

PARTS MANUAL

For Parts Orders contact your Manitou North America Dealer or call:
Manitou North America, Parts Dept. 800-425-3727 or (254) 799-0232
Parts Dept. Fax: (254) 867-6504 Website: www.manitou-na.com

epcatalogs.com

ALPHABETICAL CONTENTS

SLT415 B 2-E2 PTS 547911P R01-06

DESCRIPTION - [PG. NUMBER]

AIR INTAKE SYSTEM – [pg 33]	ENGINE, TIMING GEAR COVER – [pg 253]
ALTERNATOR INSTALLATION – [pg 265]	ENGINE, VALVE TRAIN – [pg 227]
BOOM ASSEMBLY – [pg 63]	ENGINE, WATER PUMP – [pg 245]
BOOM SEALING - [pg 71]	EXHAUST SYSTEM – [pg 33]
CAB DOOR, MISC. - [pg 103]	FILTERS AND BELTS – [pg 19]
CAB MISC., I - [pg 87]	FRAME MISC. I – [pg 109]
CAB MISC., II - [pg 91]	FRAME MISC. II - [pg 115]
CAB MISC., III - [pg 95]	FUEL SYSTEM ASSEMBLY – [pg 51]
COUNTER WEIGHTS - [pg 73]	HYDRAULIC, RETURN OIL FILTER ASSEMBLY – [pg 167]
CYLINDER, CARRIAGE TILTING – [pg 151]	HYDRAULICS, ADDITIONAL ACCESSORY - [pg 203]
CYLINDER, COMPENSATION – [pg 143]	HYDRAULICS, CYLINDER OPERATIONS – [pg 133]
CYLINDER, LIFTING – [pg 139]	HYDRAULICS, PRIMARY – [pg 123]
CYLINDER, STEERING – [pg 155]	HYDRAULICS, SECONDARY – [pg 43]
CYLINDER, TELESCOPIC – [pg 147]	HYDRAULICS, VALVE BANK ASSEMBLY – [pg 159]
DECALS, I – [pg 199]	HYDROSTATIC MOTOR INSTALLATION, REAR 400CC - [pg 79]
ELECTRICAL MISC. I – [pg 181]	HYDROSTATIC MOTOR INSTALLATION, REAR 750 CC - [pg 209]
ELECTRICAL MISC. II – [pg 189]	HYDROSTATIC MOTOR, FRONT 400 CC – [pg 287]
ELECTRICAL, ENGINE - [pg 197]	HYDROSTATIC MOTOR, REAR 400 CC – [pg 279]
ELECTRICAL, PRIMARY - [pg 171]	HYDROSTATIC MOTOR, REAR 750 CC – [pg 283]
ELECTRICAL, SECONDARY - [pg 177]	HYDROSTATIC PUMP – [pg 275]
ENGINE BLOCK, MISC. – [pg 217]	HYDROSTATIC SYSTEM - [pg 37]
ENGINE GASKIT SET, 0.4MM - [pg 241]	INCHING VALVE – [pg 273]
ENGINE GASKIT SET, 0.5MM - [pg 241]	MIRRORS - [pg 91]
ENGINE MISC. I - [pg 213]	PEDAL LINKAGE, BRAKE AND THROTTLE - [pg 75]
ENGINE MISC. II - [pg 231]	RADIATOR INSTALLATION – [pg 27]
ENGINE OIL PAN – [pg 233]	SEAT ASSEMBLY – [pg 83]
ENGINE VALVE COVER – [pg 241]	SKID STEER CARRIER - [pg 59]
ENGINE, CRANKSHAFT AND CONNECTING RODS – [pg 269]	STEER AXLE ASSEMBLY – [pg 79]
ENGINE, CYLINDER HEAD – [pg 223]	STEERING VALVE – [pg 167]
ENGINE, EXHAUST MANIFOLD – [pg 267]	TIRES AND WHEELS – [pg 23, 25 & 209]
ENGINE, FLYWHEEL AND HOUSING – [pg 259]	WINDSHIELD, REAR - [pg 99]
ENGINE, OIL FILTER INSTALLATION - [pg 237]	
ENGINE, STARTER MOTOR ASSEMBLY – [pg 263]	

epcatalogs.com

IMPORTANT

PARTS LISTS:

The text pages have a figure (for example: 1) printed in the top left corner, and a plus sign (+) at the

“1” means that this is the first page of text or part no.s.

“+” means that the parts list is continued onto the next page. The last page does not have the “+” sign.

“X” in the Quantity columns means according to need.

PARTS ORDER:

When placing an order, always state:

- Spare part ref. number
- Complete description
- Quantity
- Type of machine
- Machine serial number
- Component identification number (mast, boom, cab, engine, axle, etc.)

NOTICE:

Certain parts, or part assemblies illustrated in this catalogue are supplied only as options, and not

SYMBOLS:



From Serial No. (beginning with Serial No.)



Up to Serial No. (ending with Serial No.)



For Serial No.s (used on Serial No.s only)



Except for Serial No.s (excluding Serial No.s)



See parts page . . .



Up to machine Serial No., engine No., cab No., transmission No., etc.



From machine Serial No., engine No., cab No., transmission No., etc.

[Buy now](#)

[Manitou SLT415B Forklift Parts Manual PDF](#)

[With Instant Download](#)