

epcatalogs.com


210 IH

Operator's Manual

1090176R2

Reprinted

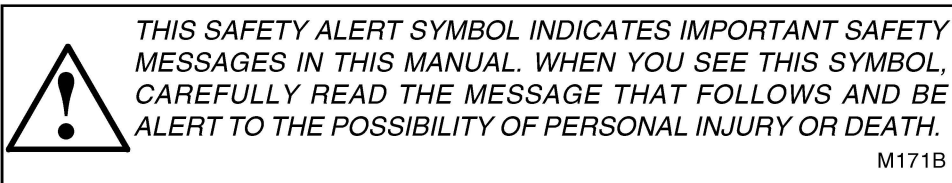

***CASE* **



If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as  and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.




OPERATOR'S MANUAL

INTERNATIONAL

210

Windrower

OPERATION
MAINTENANCE
LUBRICATION

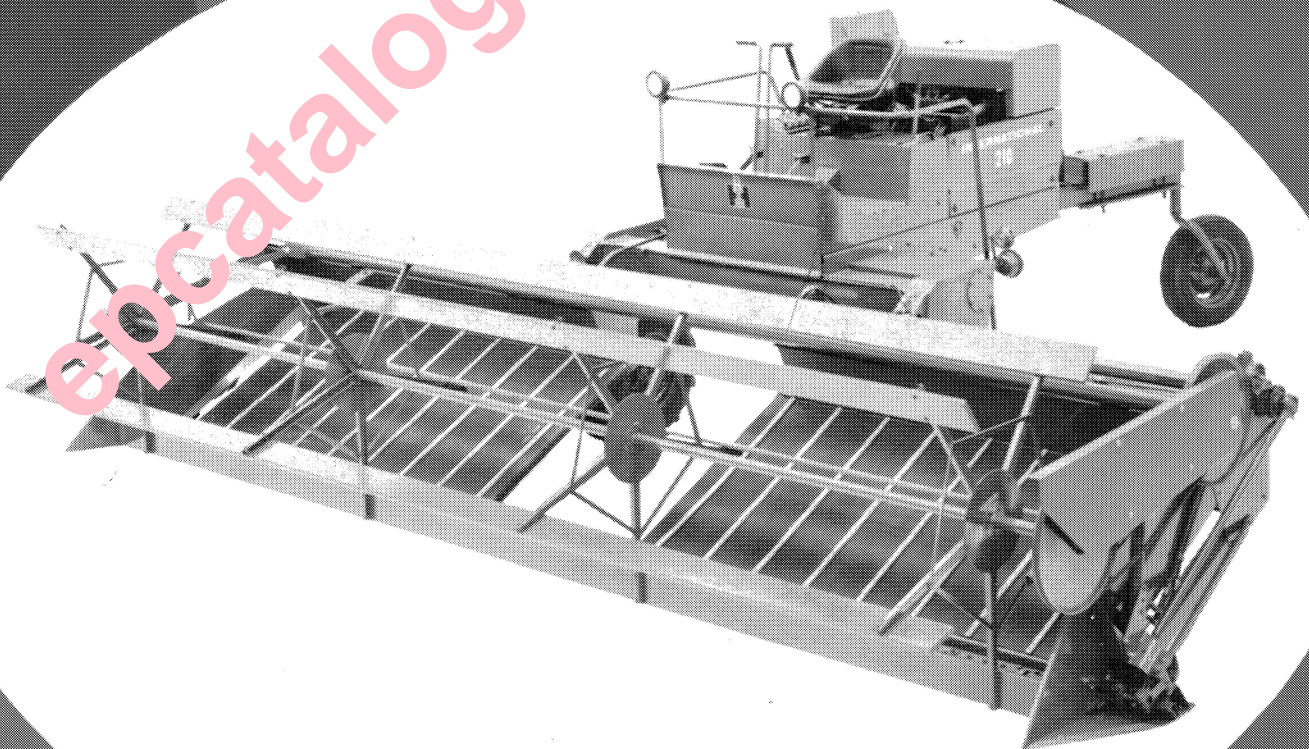

TO THE OWNER


Your new International Harvester Windrower is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester Dealer is interested in the performance you receive from this Windrower. He has factory-trained service men informed in the latest method of servicing your Windrower and I.H. service parts to assure you of satisfactory Windrower operation.

To obtain top performance and assure economical operation, the Windrower should be inspected depending on its use, periodically, or at least once a year by your International Harvester Dealer.

Before you operate the Windrower, study this manual carefully. It has been prepared to help you operate and maintain your Windrower with utmost efficiency. New copies may be ordered from your dealer at a nominal price.

Your dealer has original-equipment parts, which assure proper fit and good performance. When in need of parts, always specify the Windrower and engine serial numbers, including prefix and suffix letters. The Windrower serial number is stamped on a name plate attached to the right rear side of the chassis "A" frame.

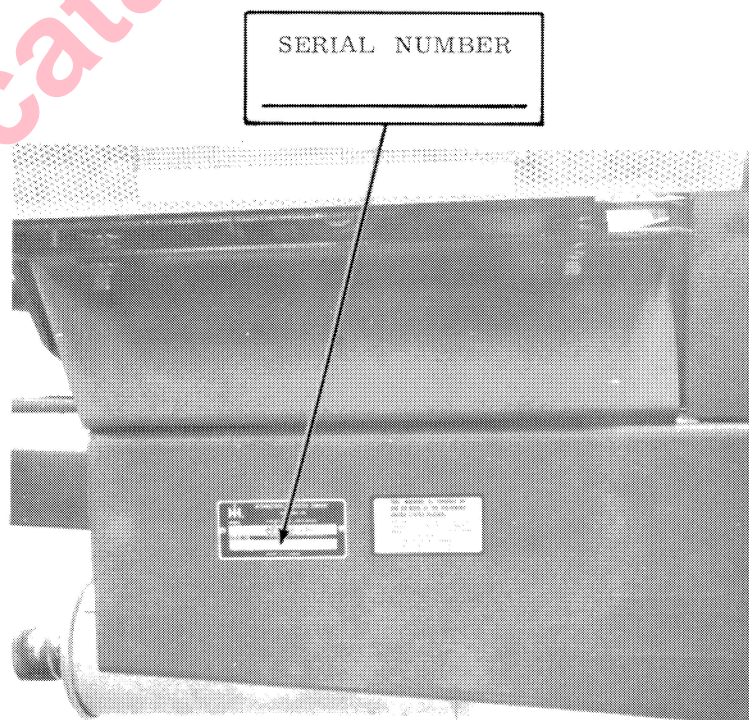

INDEX

DESCRIPTION	PAGE
INTRODUCTION.....	2
GET ACQUAINTED WITH THE CONTROLS BEFORE OPERATING.....	3, 4
PREPARING YOUR MACHINE FOR WORK.....	5-10
Apron Drive Belt.....	9
Apron Roller Drive Chain.....	9
Countershaft Drive.....	7
Hay Conditioner Drive Belt.....	10
Hay Conditioner Roll Drive Chain.....	10
Hydraulic Pump Drive.....	5
Platform Drive.....	5
Pneumatic Tire Pressure.....	9
Rear Counterweights.....	9
Reel Drive - Belt Type.....	8
Reel Drive - Roller Chain.....	8
Reel Jackshaft Drive Belt.....	8
Variable Propulsion Drive.....	9
Variable Speed Drive.....	6
OPERATION OF YOUR MACHINE.....	11-19
Cutting Range.....	11
Drives Guards Attachment.....	18
Equalizing The Hydraulic Reel Lift.....	14
Hay Conditioner.....	16, 17
Roll Height.....	17
Roll Pressure.....	16
Upper Roll Stop Bolt.....	17
Windrow Deflector.....	17
Knife, Knife Drive and Knife Register.....	12
Pick-Up Reel.....	15
Platform Apron Adjustment and Alignment.....	13
Platform Apron Speed.....	13
Platform Float Adjustment.....	11
Platform Float Operation.....	11
Platform Gauge Wheels.....	18
Reel Adjustment.....	14
Reel Drive Shield Attachment.....	18
Reel Speed.....	14
Seat Adjustment.....	11
Transporting.....	19
Windrow Deflector Rod Attachment.....	18
MAINTENANCE OF YOUR MACHINE.....	20-30
Assembling The New Countershaft Drive Belt.....	27
Assembling The New Variator Drive Belts.....	27
Brake Adjustment.....	25
Chains and Sprocket Alignment.....	23
Final Drive Chains and Breathers.....	29
Finding Trouble.....	20, 21
Hydraulic Fluid Strainer.....	29
Knife Removal and Replacement.....	30
Platform Control Valve.....	25
Preventive Maintenance.....	22
Removing The Countershaft Drive Belt.....	27
Removing The Variator Drive Belts.....	26, 27
Replacing The Platform Drive Belt.....	28
Self Aligning Sealed Bearings.....	23
Steering and Clutch Linkage.....	24, 25
Throttle Control Linkage.....	25
CARE OF YOUR MACHINE - LUBRICATION.....	30-35
SPECIFICATIONS.....	36, 37

[Buy now](#)

[Case 210 IH PDF Operator's Manual](#)

[With Instant Download](#)