

epcatalogs.com


806 Farmall Tractor

Operators Manual

1082602R2

Reprinted

CASE 





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as  and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

To The Owner

Assembled in this manual are operation, lubrication, and maintenance instructions for the Farmall and International 806 Gasoline, LP Gas, and Diesel Tractors, including the Hi-Clear and All-Wheel Drive models. This material has been prepared in detail in the hope that it will help you to better understand the correct care and efficient operation of your tractor.

Your new International Harvester tractor is designed to meet today's exacting operating requirements. The ease and comfort of operation, the ability to match ground speeds to engine power and work requirement, and the effortless versatility of the hydraulic system are intended to lighten your work and shorten your hours on the job.

Your local International Harvester dealer is interested in the performance you receive from this tractor. He has factory-trained

servicemen, informed in the latest method of servicing tractors, and modern tools, and original-equipment IH service parts which assure proper fit and good performance.


To obtain top performance and assure economical operation, the tractor should be inspected, depending on its use, periodically, or at least once a year, by your International Harvester dealer.

Before you operate the tractor, study this manual carefully. It has been prepared to help you operate and maintain your tractor with utmost efficiency. New copies may be ordered from your dealer at a nominal price.


When in need of parts, always specify the tractor and engine serial numbers, including prefix and suffix letters. Write these serial numbers in the spaces provided below.



Location of the tractor serial number.

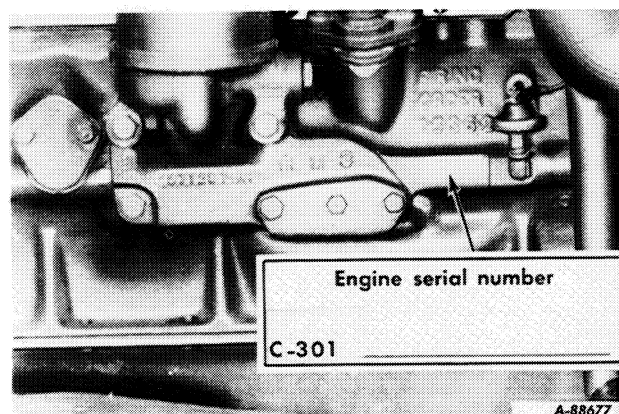

Location of gasoline or LP Gas engine serial number.

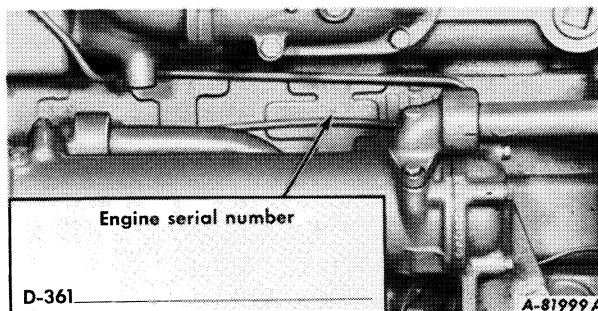

Location of diesel engine serial number.

CONTENTS

Description	Page No.
CONTENTS	
INTRODUCTION	1, 2
INSTRUMENTS AND CONTROLS	3 to 8
BEFORE OPERATING THE TRACTOR	8 to 10
PREPARING FOR EACH DAY'S WORK	10, 11
GASOLINE ENGINE	11, 12
GASOLINE FUEL SYSTEM	12, 13
LP GAS ENGINE	14
LP GAS FUEL SYSTEM	15, 16
DIESEL ENGINE	17 to 20
DIESEL FUEL SYSTEM	20 to 24
DRIVING THE TRACTOR	24 to 26
TORQUE AMPLIFIER	26, 27
BASIC HYDRAULIC SYSTEM WITH POWER STEERING	28, 29, 30
HYDRAULIC CONTROLS FOR THREE-POINT AND TWO-POINT HITCH	30 to 33
THREE-POINT HITCH	34 to 40
TWO-POINT FAST-HITCH	41 to 45
AUXILIARY VALVES AND REMOTE CYLINDERS	46 to 49
HITCHING TRAILING EQUIPMENT TO THE TRACTOR	50, 51
POWER TAKE-OFF	51, 52
BELT PULLEY	52 to 55
COOLING SYSTEM	55 to 59
AIR CLEANING SYSTEM	59 to 61
ELECTRICAL SYSTEM	61 to 83
MINOR ENGINE SERVICE OPERATIONS	83 to 88
FRONT WHEELS	88 to 92
REAR WHEELS	92 to 100
WEIGHTS	101, 102
PNEUMATIC TIRES	103 to 105
BRAKES	105 to 107
ENGINE CLUTCH	107 to 110
STORING THE TRACTOR	110 to 112
COLD WEATHER PRECAUTIONS	112, 113
TROUBLE SHOOTING	114 to 120
LUBRICATION	120 to 132
LUBRICATION TABLE	126
LUBRICATION GUIDE	127 to 132
PREVENTIVE MAINTENANCE GUIDE	133, 134
SPECIFICATIONS	135 to 138
EXTRA EQUIPMENT AND ACCESSORIES	139
INDEX	140 to 143

epcatalogs.com

[Buy now](#)

[Case 806 Farmall PDF Operator's Manual](#)

[With Instant Download](#)