McComick International 634 Tractors

Operator's Manual

1092584RI

Reprinted

CASE III



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

If Safety Decals on this machine use the words Danger, Warning or Caution, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or mode ate injury. It may also be used to alert against unsafe practices. The cold associated with Caution is YELLOW.

If Safety Decals on this pactine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second reprindicates the appropriate avoidance of the hazard.
- Backgrund of or is YELLOW.
- Prohitio symbols such as



if used, are RED.



VARNIN

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY **OPERATOR:**

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation

© 2001 Case Corporation


OPERATOR'S MANUAL

McCORMICK
INTERNATIONAL
634
TRACYORS


1092584RI



DESCRIPTION

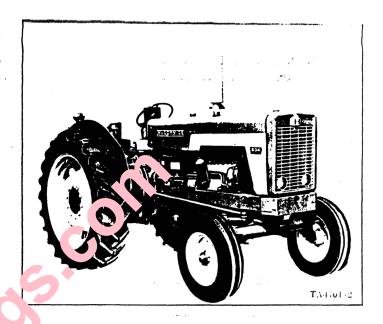

Illust.1 Front Right View of 634 Tractor

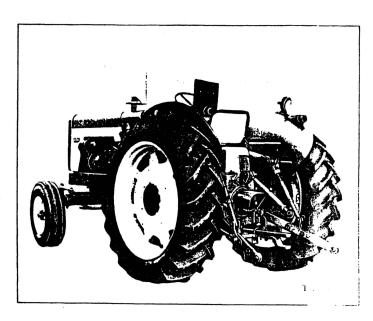

Illust. 2 Rear Left View of 634 Tractor

CONTENTS

634 TRACTOR

	Page No
DESCRIPTION	1
NTRODUCTION	2
SPECIFICATIONS	3
NSTRUMENTS AND CONTROLS	6
FOR BETTER PERFORMANCE AND SAFE OPERATION	10
BEFORE STARTING A NEW TRACTOR	11
PREPARING THE TRACTOR FOR EACH DAY'S WORK	12
DPERATION	
OPERATING THE ENGINE	13
OPERATING THE TRACTOR	14
THE VARY-TOUCH HYDRAULIC SYSTEM	17
OPERATING REMOTE CYLINDERS	21
AUXILIARY CONTROL VALVES	
SELF-SEALING COUPLINGS	
THREE POINT LINKAGE	24
ADJUSTABLE CHECK LINKS	25
AUTOMATIC HITCH	
THREE POINT LINKAGE C AWI R	27
SWINGING DRAWBAR	
STANDARD POWER TA .E'C	
INDEPENDENT PC I KY OFF	29
BELT PULLEY A C. YENT	
WATER BALL .37 A) WHEEL WEIGHTS	
WHEEL TICAD AUGUSTMENT	34
PREVENTIVE 11 ATENANCE	
L RIC, VT SPECIFICATIONS	39
B. ATION GUIDE	
LL RICATION CHART	
COLD WEATHER PRECAUTIONS	
HOT WEATHER PRECAUTIONS	
ROUTINE SERVICING SCHEDULE	47
MAINTENANCE	
COOLING SYSTEM	
AIRCLEANING SYSTEM	
ENGINE MAINTENANCE	
FUEL SYSTEM	
ENGINE CLUTCH	
TDA NOMICCIONI	5.0

Buy now

Case 634 Tractors PDF Operator's Manual

With Instant Download