
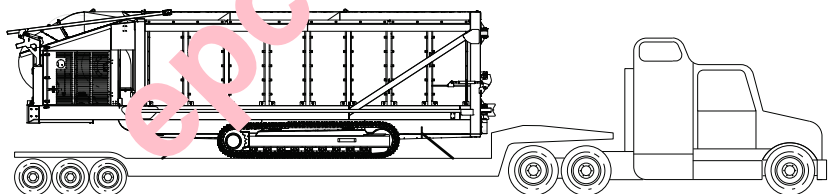


# Tigercat

ENG

## 6050 CARBONATOR MOVING AND TRANSPORTING INSTRUCTIONS

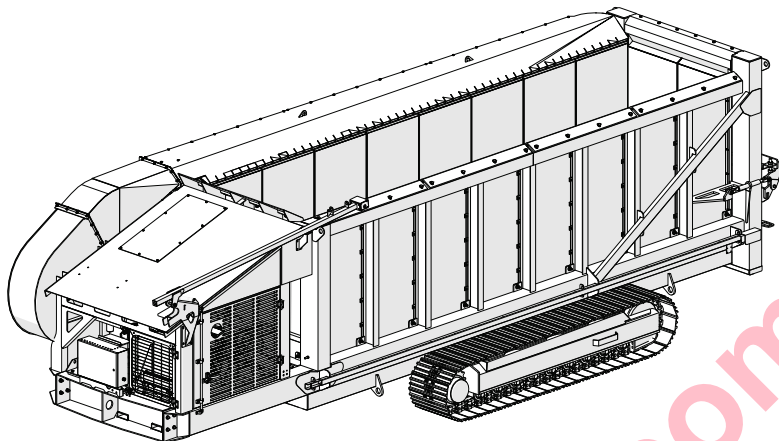

[epcatalogs.com](http://epcatalogs.com)

**CONTENTS**

MOVING INSTRUCTIONS..... 5

TRANSPORTING INSTRUCTIONS..... 8

epcatalogs.com


epcatalogs.com

## MOVING INSTRUCTIONS


**IMPORTANT!**

**Read and understand these safety instructions before loading or off-loading this machine. See operator's manual in the storage box in the engine compartment for additional information.**


1. Turn the battery disconnect key switch to the ON position.
2. Make sure the area is clear and that all personnel are at a safe distance before moving the machine.
3. Open the main electrical panel and remove the remote from the storage location.
4. Press the I/O (On/Off) button on the remote to turn ON the remote. Refer to REMOTE on page 7.
5. Check that no other personnel have moved into a hazardous area before starting the machine.
6. Turn the ignition key switch (inside main electrical panel) to the RUN position.
7. Press the green system reset button until it illuminates.
8. Turn the ignition key switch to the START position to crank the engine.
9. When the engine starts release the ignition key switch to the RUN position.
10. Maintain engine speed at LOW. Wait three to five minutes before moving the machine.

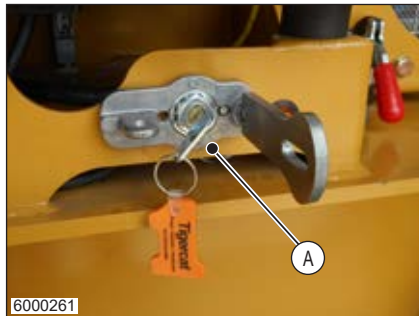

A Battery Disconnect Switch—ON

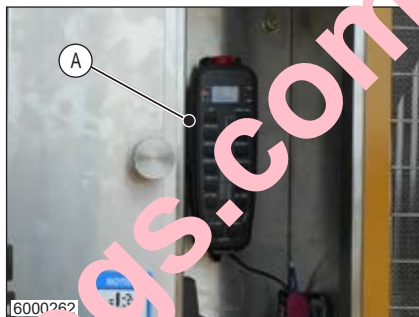

A Remote—inside Main Electrical Panel

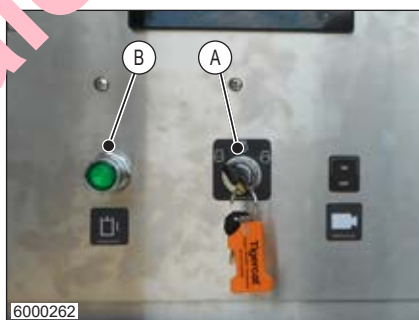

A Ignition Key Switch  
B System Reset Button

[Buy now](#)

[Tigercat 6050 Carbonator Operators Manual PDF](#)

[With Instant Download](#)