

Tigercat®



760B MULCHER VEHICLE MOVING AND TRANSPORTING INSTRUCTIONS

epcatalogs.com

epcatalogs.com

CONTENTS

ENGLISH

VEHICLE MOVING INSTRUCTIONS	5
TRANSPORTING INSTRUCTIONS.....	12

epcatalogs.com

epcatalogs.com

760B Mulcher English

Vehicle Moving Instructions

IMPORTANT!


Read and understand these safety instructions before loading or off-loading this machine. See operator's manual in the storage box in the cab for additional information.

1. Remove the retaining pins and lynch pins from the red articulation lock bar (left side of machine) and slide the lock bar into the front chassis storage position. Hold the lock bar in place with the retaining pin. Store the second retaining pin in the rear chassis tube socket. Install the lynch pins.


NOTE: The machine may require gentle steering if difficulty is experienced disconnecting or installing the articulation lock bar.

If difficulty is experienced, continue with the moving instructions and steer the machine straight following steps 19 and 20.

If it is necessary to leave the cab to disconnect the lock bar the interlock system will turn OFF. When re-entering the cab repeat steps 4, 5 and 10 to reset the interlock system.

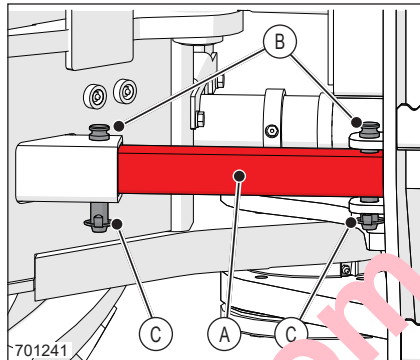

Locked Position

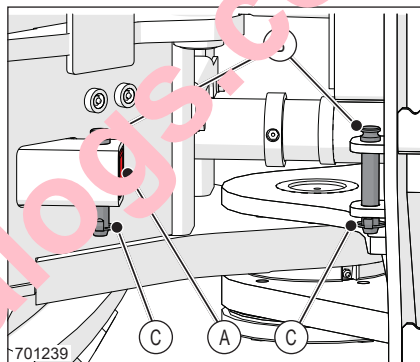

Stored Position

- A Articulation Lock Bar
- B Retaining Pins
- C Lynch Pins

[Buy now](#)

[Tigercat 760B MULCHER Operators Manual PDF](#)

[With Instant Download](#)