


# Tigercat®

ENG

S720G

## VEHICLE MOVING AND TRANSPORTING INSTRUCTIONS

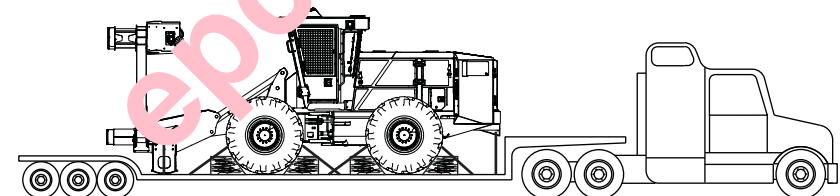

54512AMUL 1.0 02/18

[epcatalogs.com](http://epcatalogs.com)

**INDEX**

ENGLISH

VEHICLE MOVING INSTRUCTIONS .....	4
TRANSPORTING INSTRUCTIONS .....	10

epcatalogs.com

## S720G (English)

### IMPORTANT!

Read and understand these safety instructions before loading or off-loading this machine. Refer to operator's manual in the storage box in the cab for additional information.


### VEHICLE MOVING INSTRUCTIONS

1. Remove the retaining pins and lynch pins from the red articulation lock bar and slide the lock bar into the front chassis storage position. Hold the lock bar in place with the retaining pin. Store the second retaining pin in the rear chassis tube socket. Install the lynch pins.


**NOTE:** The machine may require gentle steering if difficulty is experienced disconnecting or installing the articulation lock bar.

If difficulty is experienced, continue with the moving instructions and steer the machine straight following steps 18 and 19.

If it is necessary to leave the cab to disconnect the lock bar, the interlock system will turn OFF. When re-entering the cab repeat steps 10 and 13 to reset the interlock system.

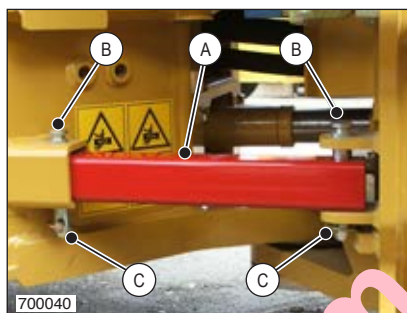

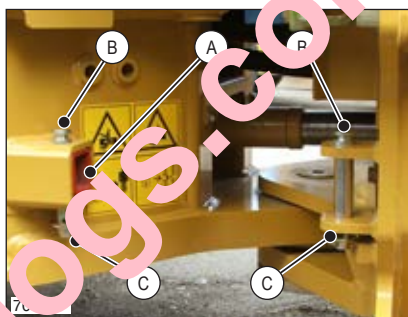

Locked Position




Stored Position

- A Articulation Lock Bar
- B Retaining Pins
- C Lynch Pins

2. Turn ON the battery disconnect switch . The switch is located in the top of the battery compartment on the left rear corner of the machine.
3. Before moving the machine, make sure the area is clear and that any personnel are at a safe distance.
4. Sit in operator's seat, close both cab doors and fasten seat belt.
5. Place both seat armrests in the down, operating position.
6. Ensure that parking brake (P) is applied (top of parking brake switch in the down position).
7. Pull the travel speed control lever fully back to the minimum travel speed position.
8. Check that outside personnel have not moved into a hazardous location near the machine before starting the engine.
9. Press the horn switch  to alert personnel, in the area, of your intent to start the engine.



A Battery Disconnect Switch

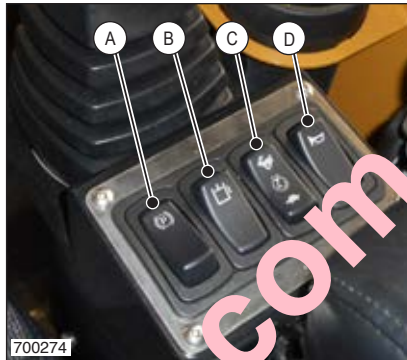

A Parking Brake Switch  
B Interlock Switch  
C Engine Speed Switch  
D Horn Switch



A Travel Speed Control Lever

[Buy now](#)

[Tigercat S720G Operators Manual PDF](#)

[With Instant Download](#)