

epcatalogs.com

**QUADTRAC**

## Operators Manual



Reprinted

Rac 9-29263



*THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.*

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



## WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

## CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

### CALIFORNIA

#### Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

**NOTE:** Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

## CONTENTS

TO THE OWNER .....	1
IDENTIFICATION NUMBERS .....	3
PRODUCT IDENTIFICATION AND .....	3
SERIAL NUMBERS .....	3
SAFETY/DECALS .....	5
SAFETY .....	5
HAZARDOUS CHEMICALS .....	8
DECALS .....	9
ROLL OVER PROTECTIVE STRUCTURE (ROPS) .....	13
OPERATING INSTRUCTIONS .....	15
DIGITAL INSTRUMENT CLUSTER .....	15
MECHANICAL GAUGE INSTRUMENT PANEL .....	23
TRUE GROUND SPEED SENSOR .....	25
AREA METER .....	26
GENERAL FEATURES/FUNCTIONALITY .....	26
AREA METER OPERATION .....	27
AREA METER CALIBRATION .....	30
ALTERNATE H2 CALIBRATION PROCEDURE .....	32
USING THE AREA METER TO CALCULATE OR DISPLAY DISTANCE .....	32
MEMORY .....	33
IMPLEMENT MONITOR CONNECTOR .....	33
REMOTE HOLD .....	34
IMPLEMENT STATUS SWITCH .....	34
OPERATING CONTROLS .....	35
HEATER AND AIR CONDITIONING .....	37
BEFORE STARTING THE ENGINE .....	50
RUN-IN PROCEDURE .....	54
SEAT BELT .....	55
ENGINE STARTING PROCEDURE .....	56
STOPPING THE ENGINE .....	59
COLD TEMPERATURE OPERATION .....	60
TRANSMISSION OIL HEAT MAINTAINER .....	62
TOWING TRACTOR .....	64
TRANSPORTING TRACTOR .....	64
TRACK SLIP INDICATOR .....	65
INCHING (CLUTCH) PEDAL OPERATION .....	66
POWER SHIFT TRANSMISSION .....	67
DIFFERENTIAL LOCK .....	73
POWER TAKEOFF (IF EQUIPPED) .....	74
DRAWBAR .....	78
SAFETY CHAIN .....	80
TRACTOR WARNING LAMPS AND SMV SYMBOL .....	81

TRIM THIS EDGE

## CONTENTS

---

IMPLEMENT WARNING LAMPS AND SMV SYMBOL .....	83
FIELD OPERATION .....	84
DRAWBAR CLEVIS PREPARATION .....	84
THREE POINT HITCH PREPARATION .....	87
HITCH COUPLER - CATEGORY III OR IV-N .....	94
THREE POINT HITCH OPERATION .....	96
REMOTE HYDRAULICS PREPARATION .....	102
HIGH OUTPUT HYDRAULIC SYSTEM (IF EQUIPPED) .....	109
AUXILIARY POWER CONNECTIONS .....	110
INSTRUMENT CLUSTER CALIBRATION .....	113
SCRAPER OPERATIONS .....	115
CHEMICAL TANK MOUNTING .....	116
UTILITY BLADE OPERATION .....	117
DRIVING WHEEL/HUB BOLT TORQUES .....	118
TRACK ALIGNMENT .....	119
DIRT SHIELD ADJUSTMENT .....	120
TRACK REMOVAL AND INSTALLATION .....	120
LUBRICATION MAINTENANCE CHARTS .....	121
LUBRICATION/MAINTENANCE CHART .....	121
LUBRICATION/FILTERS/FLUIDS .....	123
GRILLE AND HOOD .....	123
GRAB HANDLE .....	124
ENGINE HOURMETER .....	124
GREASE FITTINGS .....	125
FLUID LEVELS AND FILTERS .....	129
SYSTEM CAPACITIES .....	133
ENVIRONMENT .....	133
PLASTIC AND RESIN PARTS .....	133
ENGINE LUBRICATION .....	134
FUEL SYSTEM .....	137
COOLING SYSTEM .....	140
COOLANT CAPACITY CHART .....	147
AIR INDUCTION SYSTEM .....	148
TRANSMISSION .....	153
HYDRAULIC / AXLE OIL .....	156
OPERATORS CAB .....	160
MAINTENANCE/ADJUSTMENTS .....	162
COOLING SYSTEM .....	162
FAN BELT, ALTERNATOR BELT AND AIR CONDITIONING BELT ..	163
ALTERNATOR BELT REPLACEMENT .....	164
A/C COMPRESSOR BELT REPLACEMENT .....	165

[Buy now](#)

[Case Quadtrac PDF Operator's Manual](#)

[With Instant Download](#)