

epcatalogs.com

275 Tractor

Operators Manual

9-12693

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TO THE OWNER OF A CASE IH TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case IH tractor will work well for many years.

Your Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

Your Authorized Case IH Dealer



NOTE: When you are in the tractor seat looking forward, the right hand (RH) and left hand (LH) of the tractor are the same as your right hand and left hand.

SERIAL NUMBERS

When ordering parts or when requesting information or assistance, always give the model and serial numbers of your tractor.

Write the model and serial numbers of your tractor on the lines below.


1. TRACTOR MODEL NUMBER _____

2. PRODUCT IDENTIFICATION NUMBER _____


3. ENGINE SERIAL NUMBER _____

4. ROPS SERIAL NUMBER _____

TRACTOR MODEL NUMBER AND
PRODUCT IDENTIFICATION NUMBER
PLATE

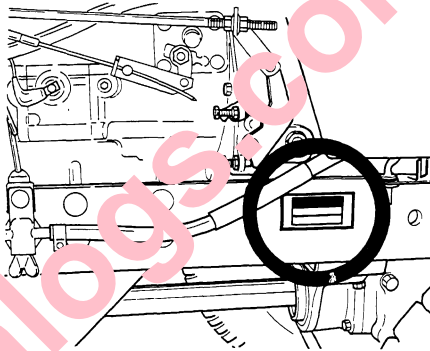

ROPS PRODUCT IDENTIFICATION
NUMBER PLATE

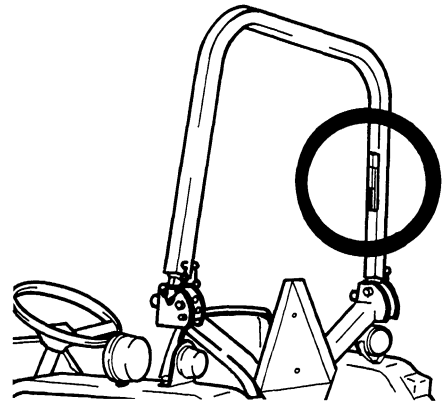

ENGINE SERIAL NUMBER

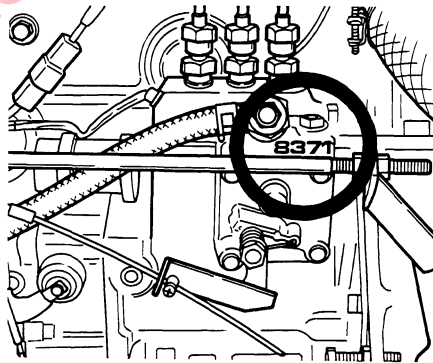


TABLE OF CONTENTS

TO THE OWNER OF A CASE IH TRACTOR..... I	ROLL OVER PROTECTIVE	
SERIAL NUMBER.....II	STRUCTURE (ROPS).....	52-61
TABLE OF CONTENTS..... III,IV	Foldable ROPS Frame.....	52
SAFETY..... V-XI	Normal Operating Position.....	52
Safety Rules..... V	Low Clearance Positions.....	53
Decals..... IV-VIII	Folding the ROPS.....	54,55
Before Starting..... VIII	Securing the ROPS in the	
Operation..... IX-X	Upright Position.....	56,60
Service..... XI	Tractor Roll Over.....	61
HAND SIGNALS..... XII,XIII	Safety Rules.....	61
NOTES..... XIV	ROPS Label.....	61
DIESEL ENGINE SPECIFICATIONS..... 1,2	TRANSMISSION CONTROLS.....	62
GENERAL TRACTOR	Transmission Operation.....	62
SPECIFICATIONS..... 3-5	MECHANICAL FRONT DRIVE	
TRAVEL SPEEDS - 275 TRACTOR..... 6	(MFD)(IF EQUIPPED).....	63
APPROXIMATE MEASUREMENTS	DIFFERENTIAL LOCK.....	64
AND WEIGHTS..... 7,8	POWER TAKE OFF (PTO).....	65-67
TIRE AND WHEEL	Rear PTO.....	65,66
SPECIFICATION..... 9-11	Mid PTO (If Equipped).....	67
Tire Inflation Specifications..... 11	LIVE PTO.....	68
Tire Load Capacity..... 11	POWER TAKE OFF GUARDS.....	69
TIRE SIZE COMBINATIONS -	PTO OPERATING SAFETY.....	70
MFD..... 12	DOWNBAR.....	71
FRONT WHEEL TREAD POSITIONS..... 13,14	CONNECTING IMPLEMENT	
REAR WHEEL TREAD POSITIONS..... 15,16	DOWNBAR.....	72
WHEEL MOUNTING TORQUES..... 17	SAFETY CHAIN.....	73
DIESEL FUEL SPECIFICATIONS..... 18	THREE POINT HITCH SYSTEM.....	74
Specifications for Acceptable..... 18	HITCH SYSTEM ADJUSTMENTS.....	75,76
Number Two Diesel Fuel..... 19	Lift Links and Turnbuckle.....	75
Fuel Conditioner..... 19	Upper Link.....	76
INSTRUMENTS AND INDICATORS..... 20-22	Stabilizer Chain.....	76
OPERATING CONTROLS..... 23-34	HITCH OPERATION.....	77-81
Control Pedals..... 26-28	Connect Implement to Hitch.....	77
Control Levers..... 29-34	Disconnect Implement	
Operators Seat..... 35	from Hitch.....	77
Amber Warning Lamps - Direction	Hitch Control Lever.....	78
Turn Signals and Stop Emblem..... 36,37	Draft Control Lever	
Implement Warning Lamps	(If Equipped).....	79
SMV Emblem..... 38	Operating with Draft Control.....	80
Rear Work Lamp (If Equipped)..... 39	Hitch Lowering Speed Adjustment.....	81
Sever Endicator Electrical	REMOTE HYDRAULIC CONTROL VALVE	
Connector (If Equipped)..... 40	(IF EQUIPPED).....	82
OPERATING INSTRUCTIONS..... 41,42	HYDRAULIC ADAPTER PLATE.....	83
Run-In Procedure..... 41	ADDING FLUID AFTER CONNECTING	
Towing..... 42	CYLINDERS AND HOSES.....	84
How to Transport Tractor..... 42	FRONT WHEEL ADJUSTMENTS.....	85-88
BEFORE STARTING THE ENGINE..... 43	Front Wheel Tread Adjustment	
NORMAL STARTING	(2WD).....	86
PROCEDURE..... 44-46	Toe-In Adjustment.....	87,88
STOPPING THE ENGINE..... 47	REAR WHEEL ADJUSTMENTS.....	89,90
COLD TEMPERATURE	Tractor Equipped with Non-Adjustable Wheels.....	89
OPERATION..... 48,49	Tractor Equipped with Adjustable Wheels.....	90
Coolant Heater..... 50	TRACTOR BALLAST.....	91-93
SEAT BELT..... 51	Front End Weights.....	91

[Buy now](#)

[Case 275 Tractor PDF Operators Manual](#)

[With Instant Download](#)