350 Series **Tractor Operators Manual** 9-281 Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
- 2. MAKE SURE THE COURT, TOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPF OP: OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

FF RE STARTING THE ENGINE, DO THE FOLLOWING:

- 1. READ THE OPERATOR'S MANUAL.
- 2. READ ALL SAFETY DECALS ON THE MACHINE.
- 3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

© 1995 Case Corporation

CASE and IH are registered trade marks of Case Corporation

NOTICE!

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Dealer's Delivery Service Report". When your Door completed these instructions, he will ask you to sign to report and will then hand you the yellow copy for your report.

NOTE: The "Dealer's Delivery Service Report" also contains a record of the Pre-Delivery Ch. of up which your Dealer made on your tractor.

AFTER DEL. Y. Y CHECKUP

The Authorized Che Dealer from whom you purchased volume we tractor will perform the "After Denv volumed on the following again you will arrange to bring your tractor to his Service Shop within - - -

ays after date of delivery or 200 hours peration (whichever occurs first).

The only charge your dealer will make for this inspection will be for oil, filters or other accessories.

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

	(Owner's Name)	(Date Checkup Performed)
	(Owner's Address)	
	(Dealership)	(Town)
	Tractor has been on ratedhour	(Tractor Model and Serial Number)
	Check ' o ch	☐ Check full governed no load engine speed.
	☐ Check and clutch (if used).	
		☐ Tighten all bolts (including rims).
	pe te Eagle Hitch hydraulic stem and check oil level in torque tube.	Cooling system.
		 Crankcase oil (Change oil and filter if necessary).
A (C		☐ Oil level in transmission and
e lo carallo	☐ Tighten cylinder head and adjust tappets.	torque tube.
	☐ Check power steering (if used).	 Lubricate all pressure fittings and oil cups.
	 Check fluid level in steering reservoir. 	☐ Check air cleaner.
	 Check distributor timing (magneto - if so equipped). 	☐ Check steering, bearing adjustment and front wheel toe-in.
	 Check spark plugs and distributor point gap. 	☐ Battery, starter, generator and lights.
		$\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
		concerning his experience with tractor ncerning maintenance or operation that
	Checku	1pPerformed by
		Performed by
	Signed	Dealer
	Original—Dealer Duplicate—Leave in Operators Manual Signed.	
	for Purchaser	Customer

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	;	(Date Checkup Performed)	
(Owner's Address)	`	· · · · · · · · · · · · · · · · · · ·	
(Doelership) Tractor has been operated	hours	(Tzactor Model r tal taber)	
☐ Check foot clutch.		□ Check for go ned no load	
☐ Check hand clutch (if used).		engir spe d.	
☐ Check brakes.		☐ Tighten an polts (including rims).	
☐ Operate Eagle Hitch hydraulic	aulic	🗍 🐪 , system.	
system and check oil lev torque tube.	el in	rankcase oil (Change oil and filer if necessary).	
☐ Check tire pressure.		al level in transmission and	
☐ Tighten cylinder head and dju		torque tube.	
tappets. Check power steering 1 s	³).	☐ Lubricate all pressure fittings and oil cups.	
 □ Check fluid level in \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		☐ Check air cleaner.	
		Check steering, bearing adjustment and front wheel toe-in.	
		☐ Battery, starter, generator and lights.	
		☐ Check operation of all instruments.	
DEAL 3. Question purchaser carefully concerning his experience with tractor			
and answer any quest are not clear to him.	tions conc	erning maintenance or operation that	
are not clear to him.	C 1 1		
	Спескир	Performed by	
	Signed	Dealer	
Original—Dealer Duplicate—Leave in Operators Manual	Signed		

Buy now

Case 350 Tractor PDF Operator's Manual

With Instant Download