Operators Manual 9-11393 Reprinted

CASE III



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazar four situation which if not avoided, may result in minor or moderate injury. The may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are 1SC two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicator the appropriate avoidance of the hazard.
- Background color is YELL W.
- Prohibition symbols so has







if used, are RED.

WARNING

.N. POPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR LEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation

TO THE OWNER OF A CASE INTERNATIONAL TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case International Tractor will work well for many years.

Your Dealer can give you assistance with CASE CORPORATION made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.



Figure 1

NOTE: Where right hand and left hand of the tractor is used in this manual it means the same as your right hand and left hand when you are in the tractor seat looking forward.

SERIAL NUMBERS

When ordering parts, requesting information or assistance always give the model and serial numbers of your tractor.


Write the model and serial numbers of your tractor on the lines below:

1. TRACTOR MODEL NUMBER	
-------------------------	--

- 2. PRODUCT IDENTIFICATION NUMBER _____
- 3. ENGINE SERIAL NUMBER _____
- 4. TRANSMISSION SERIAL ... 'ML IR _____
- 5. MFD AXLE SERIAL I UN 3LA _____
- 6. ROPS FRAME S :RI/ L NUMBER _____


Serial Number Location

ID .NTIFICATION NUMBER
(P I N) PLATE

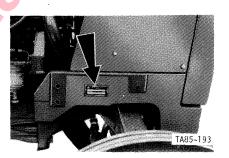

On right hand side of front bolster.


ROPS FRAME SERIAL NUMBER PLATE

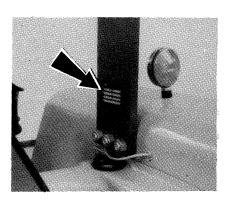


On right hand upper frame.

ENGINE SERIAL NUMBER

MFD AXLE SERIAL NUMBER

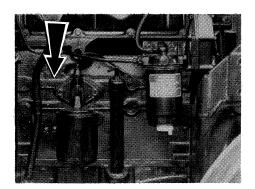

On right hand side of engine.

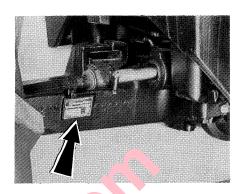

On rea to hand of housing.

TRANSMISSION SERIAL NUMBER



On right it and par of transmission

Buy now

Case 385 Tractor Operator's Manual PDF

With Instant Download