

epcatalogs.com

## 585, Tractor

### Operator's Manual

9-11263

9-11263

**CASE** *III*

## TO THE OWNER OF A CASE INTERNATIONAL TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case International Tractor will work well for many years.

Your Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

**Your Authorized Case Dealer**



Figure 1

**NOTE:** Where right hand and left hand of the tractor is used in this manual it means the same as your right hand and left hand when you are in the tractor seat looking forward.

## SERIAL NUMBERS


When ordering parts, requesting information or assistance always give the model and serial numbers of your tractor.

Write the model and serial numbers of your tractor on the lines below:

1. TRACTOR MODEL NUMBER \_\_\_\_\_
2. PRODUCT IDENTIFICATION NUMBER \_\_\_\_\_
3. ENGINE SERIAL NUMBER \_\_\_\_\_
4. TRANSMISSION SERIAL NUMBER \_\_\_\_\_
5. MFD AXLE SERIAL NUMBER \_\_\_\_\_
6. ROPS FRAME SERIAL NUMBER \_\_\_\_\_
7. CAB SERIAL NUMBER \_\_\_\_\_


### Serial Number Location

MODEL AND PRODUCT  
IDENTIFICATION NUMBER  
(PIN) PLATE

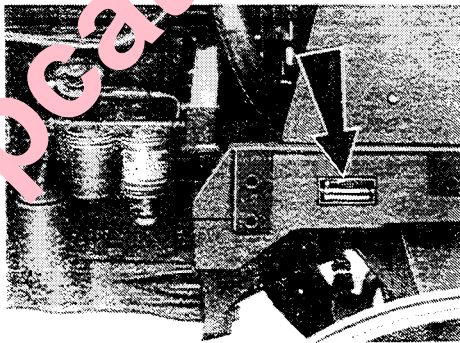


On right hand side of front bolster.

ROPS FRAME SERIAL  
NUMBER PLATE

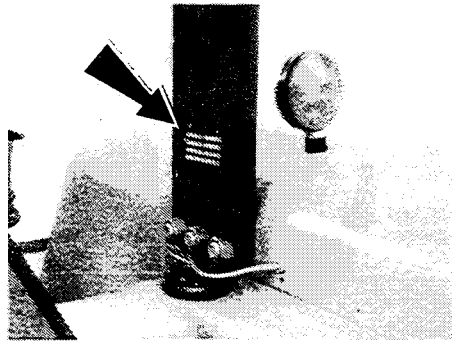


On right hand upper frame.

#### ENGINE SERIAL NUMBER

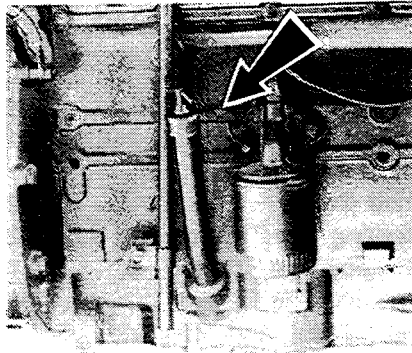

On right hand side of engine.

#### MFD AXLE SERIAL NUMBER

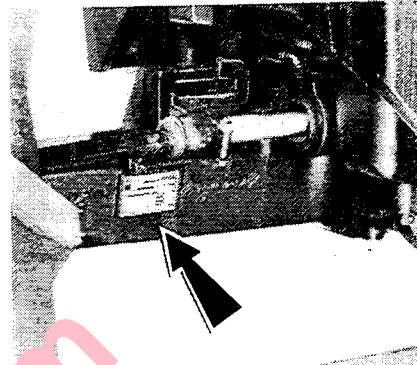


On rear left hand of housing.

#### TRANSMISSION SERIAL NUMBER



On right hand rear of transmission

#### CAB SERIAL NUMBER

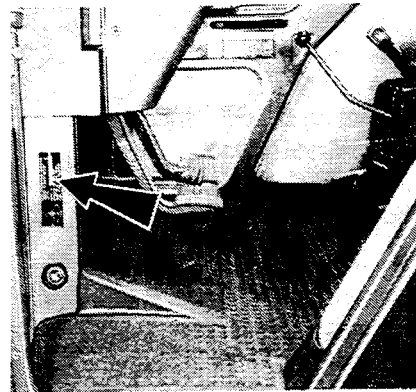

Inside cab, left ,lower front

## TABLE OF CONTENTS

TO THE OWNER .....	I	OPERATING	
SERIAL NUMBERS .....	II,III	INSTRUCTIONS .....	Continued
SAFETY .....	VI-XI	Driving The Tractor .....	58,59
Safety Rules .....	VI	Forward/Reverse	
Before Starting .....	VII	Transmission .....	60
Operation .....	VIII	Two Speed Power Shift .....	60
Service .....	XI	Differential Lock .....	61
HAND SIGNALS .....	XII,XIII	Mechanical Front	
DECALS .....	XIV-XVI	Drive (MFD) .....	62
SPECIFICATIONS .....	1-25	Steering The Tractor .....	63
Diesel Engine .....	1,2	Stopping The Tractor .....	64
General .....	3-5	Stopping The Engine .....	65
Travel Speeds .....	6,7	Dismounting and Mounting ..	66
Measurements .....	8-10	Towing The Tractor .....	67
Turning Radius .....	11	Transporting The Tractor ...	67
Weights .....	11	Hitch System Control ...	68-72
Axle Capacities .....	11	Position Control .....	68
Tires and Wheels .....	12-15	Adjustable Stop .....	69
Front Wheel Tread, 2WD ...	16	Draft Control .....	70
Front Wheel Tread, MFD ...	17	Raise Response .....	71
Steering Angles, MFD ...	18	Drop Response .....	72
Oscillation Stops, MFD ...	19,20	Remote Hydraulic Controls ..	73
Rear Wheel Tread .....	21-23	Neutral and Float	
Diesel Fuel .....	24	Lockout Bar .....	73
Fuel Conditioner .....	25	Remote Hydraulic Circuits ...	74
OPERATING CONTROLS ..	26-47	Hydraulic Hose Couplers ...	75
Instrument Panel .....	26,27	Self Sealing Breakaway	
Warning Lamps .....	28,29	Couplers .....	76,77
Controls .....	30-39	Remote Cylinder .....	78
Power Controls .....	40	7 Point Electrical Socket ...	79
Air Conditioning .....	40,41	Power Take Off (PTO) ...	80-83
Operators Seat .....	42,43	PTO Guards .....	82
Seat Belt .....	44	PTO Operating Safety .....	83
Amber Warning Lamps,		Drawbar .....	84
Turn Signals and		Three Point Hitch .....	85
SMV Symbol .....	45-47	Check Chains .....	86,87
OPERATING		Upper (Turnbuckle) Link ...	88
INSTRUCTIONS .....	48-95	Telescopic Stabilizers .....	88
Run-in Procedure .....	48	Hitching An Implement ...	89
Before Starting Engine ...	49-51	Ballasting .....	90,91
Starting Procedure .....	52,53	Front End Weights .....	90
Cold Starting .....	53-56	Rear Wheel Weights .....	90
Cold Temperature Operation	55	Water Ballasting .....	91
Using Booster Batteries ...	57	Measuring Wheel Slip ...	92,93
		Loads Matched To Tractor ...	94
		Adjusting Tread Positions ...	95
		Front Axle, 2WD .....	95
		Front MFD, and Rear .....	95

[Buy now](#)

[Case 585 Tractor PDF Operator's Manual](#)

[With Instant Download](#)