1200 Tractor **Operators Manual** Starting with SN 9806321

Rac 9-1982

Reprinted



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or mode ate injury. It may also be used to alert against unsafe practices. The columns associated with Caution is YELLOW.

If Safety Decals on this vac ine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second merindicates the appropriate avoidance of the hazard.
- Background or or is YELLOW.
- Proh itio symbols such as



and

op) if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation

10 THE PURCHASER OF A CASE TRACTOR

The care you give your new Case Tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, antat us.

V», r Authorized Case Dealer

To insure efficient and prompt service, please furnish us with the Model, Serial, Engine, Transmission, PTO and Axle Numbers of your Tractor in all correspondence or contacts.



Figure 1. Left Side View of Tractor

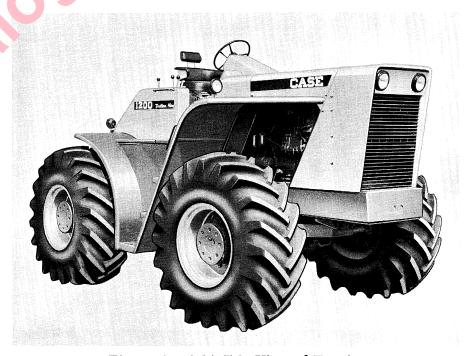


Figure 2. Right Side View of Tractor

SERIAL NUMBER

When ordering parts from your Authorized Case Dealer and in all contacts or correspondence relative to your Case Tractor, always specify the Serial Number, Engine Number, Model of the Tractor, Transmission, PTO and Axle Numbers.

The Model and Serial Numbers are stamped on the plate located on the instrument panel, Figure 3. The Engine Number is stamped on a plate located on the right side of the engine block, Figure 4. The Transmission Number is located on the rear of the transmission. The Axle Model Numbers are located on the axle housings. The PTO Serial Number Plate is located on the rear of the PTO housing.





Figure .

Figure 4

MOTE The terms hight Hand" and "Left Hand", whenever used in this manual r for to the machine as viewed when seated in the operator's sea

For converient reference fill in the following Model and Serial Numbers.

Model Number
Engine Number
Tractor Serial Number
Transmission Serial Number
Front Axle Serial Number
Rear Axle Serial Number
PTO Serial Number3

Buy now

Case 1200 Tractor Operator's Manuals PDF

With Instant Download