

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	43
SAFETY	V-XIX	Run-In Procedure	43
Safety Rules	V	Before Operating The Tractor	44
Before Starting	V	Towing	45
Operation	VII	How to Transport the Tractor	45
Service	XVII	Operating Instruments	46,47
HAND SIGNALS	XX,XXI	Operating Lamps	48,49
DECALS	XXII-XXVI	Operating Controls Tractor Without Cab	
SERIAL NUMBERS	1	Instrument Panel	50-55
DIESEL ENGINE SPECIFICATIONS	2-3	Foot Pedals	54,55
GENERAL SPECIFICATIONS	4-8	Levers, L/H Side	56-59
APPROXIMATE TRACTOR SPEEDS ...	9-12	Levers, R/H Side	60-67
FUEL SPECIFICATIONS	13	Operating Controls Tractor With Cab	
APPROXIMATE MEASUREMENTS ...	14-17	Instrument Panel	68-71
APPROXIMATE TRANSPORT		Foot Pedals	72,73
WEIGHTS	14-17	Levers, L/H Side	74,75
TIRE AND WHEEL EQUIPMENT	18-21	Levers, R/H Side	76,77
TIRE ARRANGEMENTS - MFD	20	Controls Cab	78,79
FRONT WHEEL TREAD		Controls Cab	80-82
POSITIONS - 2WD	22	Air Conditioning Operation	83,84
FRONT WHEEL TREAD		Operator's Seat	85,86
POSITIONS - MFD	23,24	Seat Belt	87
REAR WHEEL TREAD POSITIONS	25	After Warning Lamps, Direction	
POWER ADJUST REAR WHEEL		Traffic Signals & SMV (North America) ...	88
TREAD POSITIONS	26	Operating The Tractor On The	
LUBRICATION	27-42	Road (North America)	89
Engine Hourmeter	27	After Warning Lamps,	
Diesel Engine Oil	27	SMV Symbol (North America)	90
Lubrication Chart	28,29	Auxiliary Outlet Socket	91,92
Lubrication MFD Axle	30,31	Before Starting Engine	93
Grease Fittings	32,33	Starting Procedure	94,95
Engine Oil Change	34	Stopping the Engine	96,97
Engine Oil Filter Change	35	Cold Temperature Operation	98
Transmission Oil Level Check & Change ..	36	Power Shift Transmission	99-100
Transfer Gear Box Oil Level	37	Mechanical Shift Transmission	101-103
Hydraulic Oil Filter Change	38,39	Power Takeoff	104-105
Differential Oil Level - MFD	40	Operating Safety	106
Planetary Oil Level - MFD	41	Drawbar	107,108
Steering Filter Change	42	Pick-Up Hitch	109,110
		Combined Pickup Hitch and	
		Drawbar	111-114
		Hitch Operation	115,116
		Lift Rod	117
		Mechanical Float	117
		Stabilizers	118
		Draft Sensing Unit	119
		Selector Dial	120
		Operating with Position	121
		Operating with Draft	122
		Remote Hydraulic Control	123-130
		Three-Way Valve	126
		Hydraulic Hose Couplers	130
		Front Axle Tread Adjustment 2WD ..	131-134
		Front Axle Adjustment MFD	135-139
		Rear Wheel Tread Adjustment	140

Tractor Ballast	141
Front End Weights	142
Rear Wheel Weights	143
Tire Liquid Ballast	144
Measuring Wheel Slip	145
ROLLOVER PROTECTIVE STRUCTURE (ROPS)	146-149
MAINTENANCE	150
First Oil Change at 20 Hours	151
Raising Engine Cover	152,153
Removing Front Panel	153
Removing Side Panels	154
Regular Maintenance Chart	155
Daily Inspection/10 Hour	156
50 Hour Service	157,161
100 Hour Service	162
200 Hour Service	162
400 Hour Service	163-169
800 Hour Service	170-172
Air Conditioning	182-185
Alternator	181
Auxiliary Battery	180
Batteries	178,179
Bulbs	173
Lamps	174-177
Optional Equipment	186
Trailer Brakes Kit	186
Hitch Assist Cylinder	186
CASE TECHNICAL MANUALS	189

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.



1394 TRACTOR WITHOUT CAB

Figure 1

NOTE: *The right-hand and left-hand of the tractor are the same as your right-hand and left-hand when you are in the tractor seat looking forward.*



1394 TRACTOR WITH CAB
Figure 2

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.


Before Starting



CAUTION: To help prevent personal injuries during tractor operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.



CAUTION: Provide a first aid kit for use in case of accident.

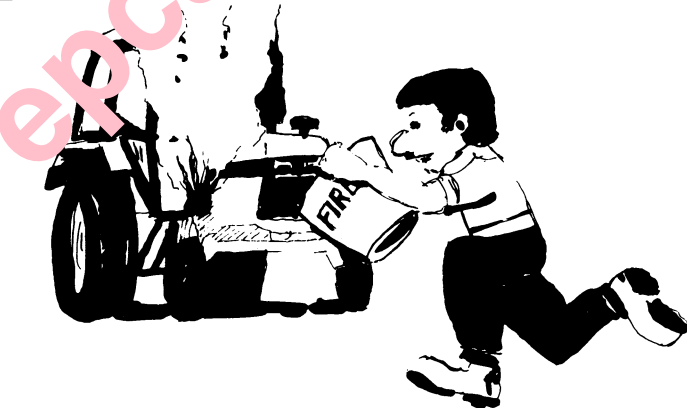

CAUTION: It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.

[Buy now](#)

[Case 1394 Tractor PDF Operator's Manual](#)

[With Instant Download](#)