

epcatalogs.com

# **1410 Tractor**

## **Operators Manual**

9-5418



Reprinted



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

## **WARNING**

**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

**BEFORE STARTING THE ENGINE, DO THE FOLLOWING:**

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

**LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.**

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

## CONTENTS

Use of Manual and Photograph of Tractor . . . . .	i
Safety Messages and Cartoons . . . . .	ii
ROPS Safety Messages . . . . .	xvi
Warning Signs . . . . .	xix
Hand Signals . . . . .	xx
Tractor Identification . . . . .	1
Specifications . . . . .	2
Operating Instruments and Controls . . . . .	16
Operating Levers and Pedals . . . . .	20
Starting the Engine . . . . .	28
Stopping the Engine . . . . .	29
Powershift Transmission . . . . .	30
Synchromesh Transmission . . . . .	31
Power Take Off (PTO) . . . . .	32
Front Wheel Tread Positions 2WD . . . . .	33
Front Wheel Tread Positions 4WD . . . . .	34
Rear Wheel Tread Positions PAVT Wheels . . . . .	34
Rear Wheel Tread Positions . . . . .	35
Ballast . . . . .	36
Measuring Wheel Slip . . . . .	37
Three Point Linkage . . . . .	38
Stabilizer Bars . . . . .	39
Telescopic Link Ends . . . . .	40
Mechanical Flotation . . . . .	40
Top Link 4WD Tractors . . . . .	41
Drawbar . . . . .	42
Position of Levers for Depth Control . . . . .	43
Operating with Depth Control . . . . .	44
Position of Levers for Height Control . . . . .	44
Operating with Height Control . . . . .	44
Position of Levers with TCU . . . . .	45
Operating with TCU . . . . .	46
Double Acting Live Take off Valves . . . . .	47
Single Acting Equipment . . . . .	48
Pipes and Couplers . . . . .	48
Remote Cylinders (Collar Type) . . . . .	49
Remote Cylinders (Clamp Type) . . . . .	50
Remote Cylinders (Mechanical Stop) . . . . .	51
Preventive Maintenance Introduction . . . . .	52
Service Chart . . . . .	53
Lubricants and Fuel Storage . . . . .	54
Lubrication Chart . . . . .	55
Front Axle Lubrication Chart 4WD . . . . .	56
Daily Inspection . . . . .	57

50 Hour Service . . . . .	58
100 Hour Service . . . . .	61
200/250 Hour Service . . . . .	63
500 Hour Service . . . . .	64
1000 Hour Service. . . . .	73
Removing the Hood . . . . .	74
Removing the Grille . . . . .	74
Cylinder Head Tightening . . . . .	75
Fuses . . . . .	75
Alternator . . . . .	76
Battery . . . . .	76
SAE Seven Point Connector Plug . . . . .	77
Wiring Diagrams. . . . .	78

epcatalogs.com


## TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions that are given, your Case Tractor will work correctly for many years.

It is a recommendation that some jobs are best done by your Authorized Case Dealer. For this reason, a complete description of this work has not been given in this manual.

If you do these jobs in your service shop, a repair manual is available from your Authorized Case Dealer. See your Authorized Case Dealer for any parts or assistance that you need. He has personnel with special training who know the best methods for the repair and maintenance of your Case Tractor.

**Your Authorized Case Dealer**

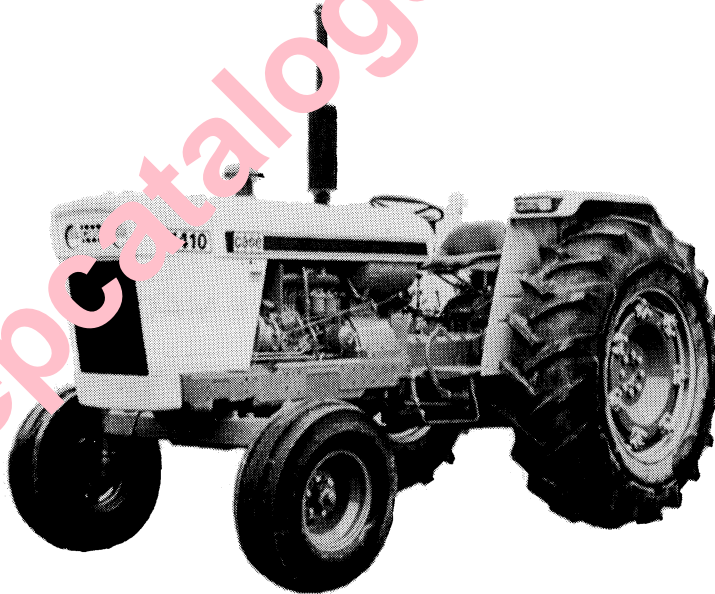

**NOTE** When left-hand and right-hand are used in this manual, they are the same as your left and right hand when you are on the tractor seat looking forward.

[Buy now](#)

[Case tractor 1410 PDF Operator's Manual](#)

[With Instant Download](#)