

epcatalogs.com

1490 Tractor

P.I.N. 111 88699 and After

Operators Manual

9-9324

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

CONTENTS

	Page		Page
TO THE OWNER	3	AIR CONDITIONER	
SAFETY		OPERATION	81
Safety Rules	4	CAB DOOR LOCK	81
HAND SIGNALS	20	TOOL COMPARTMENT	81
DECALS	22	REAR VIEW MIRRORS	82
TRACTOR IDENTIFICATION	26	CAB WINDOW LEVER	82
SPECIFICATIONS		SEAT BELTS	83
Diesel Engine	28	AMBER WARNING LAMPS,	
General Specifications	30	DIRECTION TURN SIGNALS	
APPROXIMATE TRACTOR		AND SMV SYMBOL	
SPEEDS	35	High Platform Tractor	84
APPROXIMATE		Low Profile Tractor	86
MEASUREMENTS	36	IMPLEMENT WARNING	
TIRE PRESSURES	38	LAMPS—SMV SYMBOL	88
TIRE ARRANGEMENTS: MFD	39	DIESEL ENGINE	
TREAD POSITIONS		Before Starting the Engine	89
Rear Wheels: Manual Adjust	40	Starting the Engine	90
Front Wheels: MFD	42	Before Stopping the Engine	91
Rear Wheels: Power Adjust	43	Stopping the Engine	91
Front Axle: 2 Wheel Drive	44	TRANSMISSION	
FUEL SPECIFICATIONS	44	Power Shift Transmission	92
LUBRICANTS	46	Synchromesh Transmission	94
Recommendations	47	BALLAST	96
Capacities	47	MEASURING WHEEL SLIP	97
OPERATING INSTRUMENTS	48	POWER TAKE OFF	
OPERATING: HIGH PLATFORM		Reversible Shaft	98
TRACTOR		TREAD ADJUSTMENT	
Operating Controls	52	Front Axle: Standard	99
Cab Controls	56	Rear Wheels:	
Control Levers	58	Power Adjusted	100
Operator's Seat	65	HITCH	101
OPERATING: LOW PROFILE		Telescopic Stabilizer	102
TRACTOR		Mechanical Flotation	103
Operating Controls	66	DRAWBAR	104
Operating Pedals	68	Changing Positions	104
Control Levers	69	DRAFT CONTROL	106
Operator's Seat	76	POSITION CONTROL	108
CAB AIR FLOW		DOUBLE ACTING REMOTE	
ARRANGEMENTS	77	VALVES	110
CAB AIR FLOW CONTROL	78	SINGLE ACTING AND	
		EXTERNAL EQUIPMENT	111

CONTENTS

	Page		Page
HOSE AND COUPLERS	112	Fuel Filters	141
MAINTENANCE		Steering Hydraulic Oil Filter ..	142
Introduction	113	Removing Air from the	
Service Chart: High Platform		Fuel System	143
Tractor	114	Air Cleaner Elements	145
Service Chart: Low Profile		External Nuts and Bolts	146
Tractor	118	Operators Seat Belt	146
Service Chart: MFD Tractor ..	122	Operators Seat	147
DAILY INSPECTION	123	Roll Over Protective	
50 HOUR SERVICE	124	Structure	149
Lubrication Fittings	124	800 HOUR SERVICE	
Power Steering	124	Hydraulic System	151
Brakes	124	Brake and Clutch Fluid	151
Transmission Clutch:		Final Drives	151
High Platform	125	Cooling System	152
PTO Clutch High Platform	126	Power Shift Oil Pressure	152
Transmission Clutch:		Differential and Reduction	
Low Profile	127	Hubs: MFD	153
PTO Clutch Low Profile	128	Front Hub Bearings:	
Brake and Clutch Fluid	129	NOT MFD	153
Fuel Water Trap	130	COMPRESSOR BELT	
Transmission	131	REPLACEMENT	154
Controls	132	AIR CONDITIONING	
Coolant	132	Receiver-Drier	157
Battery	132	Headliner	157
Tires	132	Blower	157
Wheel Nuts	132	Refrigerant Check	158
100 HOUR SERVICE	133	Compressor Belt	160
Engine Oil Change	133	Compressor	160
Final Drives	133	Condenser	160
Front Axle: MFD	133	Evaporator	160
Cab Air Filter	134	DOME LIGHT	161
200 HOUR SERVICE		FUSE PANEL (CAB)	161
Engine Oil Filter	137	ALTERNATOR	162
Compressor Belt	138	BATTERY	163
400 HOUR SERVICE		AUXILIARY BATTERY	164
Transmission Oil Filter	139	HOOD	165
Injectors	140	HOOD SIDE PANELS	167
Valve Clearances	140	FUSES (TRACTOR)	168
Fan Belt	141		


TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer

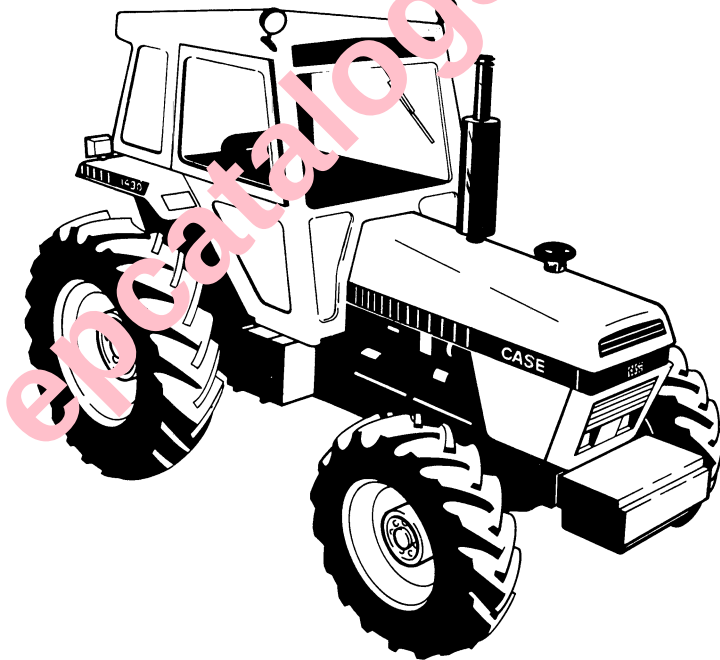

79-0361/1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

[Buy now](#)

[Case 1490 Tractor PDF Operator's Manual](#)

[With Instant Download](#)