

epcatalogs.com

1494 Tractor

Operators Manual

9-9812

Reprinted

CASE 






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TABLE OF CONTENTS

TO THE OWNER	III	Grease Fittings	30,31
SAFETY	V	Engine Oil Change	32
Safety Rules	V	Engine Oil Filter Change	33
Before Starting	V	Transmission Oil Level	
Operation	VII	Check & Change	34
Service	XVII	Transfer Gear Box Oil Level - MFD	34
HAND SIGNALS	XX	Hydraulic Oil Filter Change	35
DECALS	XXII	Differential Oil Axle - MFD	37
SERIAL NUMBERS	1	Planetary Oil Axle - MFD	38
DIESEL ENGINE SPECIFICATIONS	2,3	OPERATING INSTRUCTIONS	39
GENERAL SPECIFICATIONS	4-6	Run-In Procedure	39
APPROXIMATE TRACTOR SPEEDS	7-11	Before Operating the Tractor	40
FUEL SPECIFICATIONS	1	Towing	41
APPROXIMATE MEASUREMENTS	12-15	How to Transport the Tractor	41
APPROXIMATE TRANSPORT WEIGHTS	12-15	Operating Instruments	42,43
TIRE AND WHEEL EQUIPMENT	16,17	Operating Levers	44,45
TIRE ARRANGEMENTS - MFD	18	Operating Controls	
FRONT WHEEL TREAD POSITIONS - 2V	19	Tractor without Cab	46-61
FRONT WHEEL TREAD POSITIONS - MFD	20,21	Instrument Panel	46-49
REAR WHEEL TREAD POSITIONS	22	Levers, Left-Hand Side	50-55
POWER ADJUST REAR WHEEL TREAD POSITIONS	23	Levers, Right-Hand Side	56-61
LUBRICATION	24	Pedals	
Engine Hourmeter	24	Operating Controls	
Diesel Engine Oil	25	Tractor With Cab	62-82
Lubrication Chart	26	Instrument Panel	62-65
Capacities and Approved		Foot Pedals	66,67
Lubricants	27	Levers, Left-Hand Side	68-71
Lubrication - MFD	28,29	Levers, Right-Hand Side	72-77
		Controls Cab Roof	78,79
		Air Conditioning Operating	83-85
		Controls Cab	80-82
		Operators Seat	86,87
		Seat Belt	88
		Amber Warning Lamps, Direction	
		Turn Signals & SMV	89
		Implement Warning Lamps,	
		SMV Symbol	90
		Auxiliary Outlet Socket	92
		Operating On The Road	91
		Auxiliary Outlet Socket	93
		Operating the Engine	44
		Starting Procedure	95,96
		Stopping the Engine	97,98
		Cold Temperature Operation	99
		Power Shift Transmission	102,103
		Synchromesh	100,101
		Differential Lock	104

Power Takeoff	105,106	Coolant	164
Operating Safety	107	Compressor Belt	165
Drawbar	108,109	Differential - MFD	37
Pick-Up Hitch/Drawbar	110-115	Engine Cover	155
Combined Pick-Up Hitch Drawbar	116	Engine Oil	32
Three Point Linkage	117	Engine Oil Filter	33
Jeffes Type Linkage	117	Final Drives	
Lift Rod Adjustment	119	Front Hubs - MFD	176
Leveling Lever Adjustment	120	Fuel Filters	167
Sway Blocks	123	Fuel Pump Water Trap	163
Mechanical Floatation	121	Fuses	183
Stabilizer Bar Adjustment	122	Injectors	166
Top Link Adjustment	118	Lamps	184
Spacer Bar Adjustment	118	Power Steering	161
Sensing Unit	125	ROPS	173
Selector Dial	126	Seat Belt	172
Operating Jeffes Linkage	124	Transmission Oil	34
Operating The Linkage	127	Transmission Filter	34
Operating Draft	128	Valve Clearance	166
Operating Above Ground	128	Wheel Nuts	164
Operating External Equipment	129		
Three Point Linkage	135	OPTIONAL EQUIPMENT	193
Hydraulic Hose Couplers	136		
Front Axle Adjustment - 2WD	137		
Front Axle Adjustment - MFD	138		
Rear Wheel Tread Adjustment	142		
Tractor Ballast	144		
Front End Weights	145		
Rear Wheel Weights	146		
Liquid Ballast	147		
Measuring Wheel Slip			
ROLLOVER PROTECTIVE STRUCTURE			
(ROPS).....	149-152		
PREVENTIVE MAINTENANCE	153		
First 20 Hours Service	154		
Raising Engine Cover	155		
Removing Front Panel	156		
Removing Side Panels	157		
Service Periods	159		
Daily 10 Hour Inspection	160		
50 Hour Service	161		
100 Hour Service	165		
200 Hour Service	165		
400 Hour Service	166		
800 Hour Service	174		
Air Cleaner	170		
Air Conditioning	178		
Alternator	191		
Auxiliary Battery	190		
Battery	188		
Brake Adjustment	161		
Brake Fluid	163		
Cab Air Filter	177		

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



1494 TRACTOR WITHOUT CAB

Figure 1

NOTE: When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.

[Buy now](#)

[Case 1494 Tractor PDF Operator's Manual](#)

[With Instant Download](#)