

epcatalogs.com

1690 Tractor

Operators Manual

9-7523



Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

SECTIONS

	Page
TO THE OWNER.....	5
SAFETY RULES.....	7
HAND SIGNALS.....	23
DECALS.....	25
PRODUCT IDENTIFICATION NUMBER (PIN).....	30
SPECIFICATIONS.....	32
INSTRUMENTS AND CONTROLS.....	54
OPERATING.....	99
MAINTENANCE.....	125

SPECIFICATIONS

DIESEL ENGINE SPECIFICATIONS.....	32
GENERAL TRACTOR SPECIFICATIONS.....	34
APPROXIMATE TRACTOR SPEEDS.....	38
APPROXIMATE MEASUREMENTS.....	40
TIRE SIZES, MAXIMUM LOADS AND PRESSURES.....	44
TIRE ARRANGEMENTS, MFD TRACTORS.....	45
FRONT TREAD (TRACK) POSITIONS.....	46
REAR TREAD (TRACK) POSITIONS.....	48
FUEL SPECIFICATIONS.....	50
RECOMMENDED LUBRICANTS AND CAPACITIES.....	52
BRAKE AND CLUTCH FLUID.....	53
GREASE.....	53

INSTRUMENTS AND CONTROLS

	Page
OPERATING INSTRUMENTS: } ALL TRACTORS	54
WARNING LAMPS:	56
OPERATING CONTROLS:	58
OPERATING PEDALS:	62
CONTROL LEVERS:	64
OPERATOR'S SEAT:	71
CAB CONTROLS:	72
OPERATING CONTROLS:	80
OPERATING PEDALS:	82
CONTROL LEVERS:	84
OPERATOR'S SEAT:	91
COMBINING VALVE	
TRACTORS WITH TANDEM HYDRAULIC PUMP	92
SEAT BELTS	93

OPERATING

AMBER WARNING LAMPS, DIRECTION TURN SIGNALS AND SMV SYMBOL	94
ENGINE:	
Before Starting the Engine	99
Starting the Engine	100
Before Stopping the Engine	101
Stopping the Engine	101
POWERSHIFT TRANSMISSION:	
Operating with Power Shift Transmission	102
Using the Travel Speed Chart	102
SYNCHROMESH TRANSMISSION:	
Operating with Synchromesh Transmission	104
Using the Travel Speed Chart	104
BALLAST	106
MEASURING WHEEL SLIP	107
FRONT TREAD ADJUSTMENT	108
REAR TREAD ADJUSTMENT:	
POWER ADJUSTED WHEELS	109

OPERATING

	Page
HITCH.....	110
STABILISER BARS	111
LIFT ROD	112
MECHANICAL FLOTATION	113
DRAWBAR	114
SENSING UNIT	116
SELECTOR DIAL	117
OPERATING WITH DRAFT CONTROL	118
OPERATING WITH POSITION CONTROL	119
DOUBLE ACTING REMOTE VALVES	120
HOSE AND COUPLINGS	122
POWER TAKE-OFF (PTO)	123

MAINTENANCE

INTRODUCTION	125
FIRST OIL CHANGE AT 200 HOURS.....	125
SERVICE CHART: HIGH PLATFORM TRACTOR.....	126
SERVICE CHART: LOW PROFILE TRACTOR.....	130
SERVICE CHART: MOWER TRACTOR.....	134
DAILY INSPECTION	136
50 HOUR SERVICE	137
100 HOUR SERVICE	147
200 HOUR SERVICE	152
400 HOUR SERVICE	154
800 HOUR SERVICE	166

[Buy now](#)

[Case 1690 Tractor PDF Operator's Manual](#)

[With Instant Download](#)