

epcatalogs.com

2090 Tractor

Operators Manual

9-6374



Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

TABLE OF CONTENTS

TO THE OWNER	III	LUBRICATION (Cont'd)	
SAFETY	IV-XVIII	Differential Oil Level	34
Safety Rules	IV	Planetary Oil Level	35
Before Starting	IV-V	Steering & Brake System Air Removal ..	36
Operation	VI-XV	Front Wheel Bearing	37
Service	XVI-XVIII	Front Wheel Pivot Pin Bearing	38
HAND SIGNALS	XIX-XX	ALTERNATOR CHARGING SYSTEMS ...	38
DECALS	XXI-XXV	OPERATING INSTRUCTIONS	39-129
NOTES	XXVI	Run-In Procedure	39
SERIAL NUMBERS	1	Before Starting the Engine	40
DIESEL ENGINE SPECIFICATIONS	2,3	Towing	41
GENERAL SPECIFICATIONS	4-7	How to Transport the Tractor	41
APPROXIMATE TRACTOR SPEEDS		Operating Instruments	42-47
12 Speed Transmission	8	Automatic Engine Shut off	
8 Speed Transmission	9	(If Equipped)	46-47
FUEL SPECIFICATIONS	10	Operating Controls	48-79
APPROXIMATE OVER ALL		Steering Console	48-49
MEASUREMENTS	11	Foot Pedals	50-51
APPROXIMATE TRANSPORT		Operator's Console	52-60
WEIGHT	11-13	Steering Column Tilt	61
OPERATOR'S CAB STANDARDS	11	Heater Stop Valve	62
TIRE AND WHEEL EQUIPMENT	14-15	Fuel Tank Water Trap	62
TIRE SIZE ARRANGEMENTS - MFD	16	Rear View Mirrors	63
FRONT WHEEL TREAD POSITIONS ..	17-18	Cab Window Lever	63
REAR WHEEL TREAD POSITIONS ...	19-20	Cab Headliner Controls	64-65
DUAL REAR WHEEL		Cab Air Flow Control	66
TREAD POSITIONS	21-22	Cab Defroster Control	66
DUAL REAR TIRE PRESSURES	23	Cab Air Flow Arrangements	67-69
LUBRICATION	24-38	Air Conditioner Operation	70
Engine Hourmeter	24	Cab Door Lock	70
Diesel Engine	25	Tool Compartment	70
Lubrication Chart	26-27	Operator's Seat	71-74
Engine Oil Change	28-29	Seat Belts	75
Engine Oil Filter	29	Amber Warning Lamps, Direction ..	76-77
Transmission Oil Level Check & Change ..	30	Turn Signals & SMV	
Transfer Gear Box Oil Level	30	Implement Warning Lamps,	
Hydraulic Oil Filters	31-33	SMV Symbol	78
		Auxiliary Outlet Socket	79
		Starting Procedure	80-81
		Stopping the Engine	82
		Cold Temperature Operation	83
		Preparing Tractor For Operating	
		In Cold Temperatures	84
		Cold Temperature Starting	85-88
		Case Starting Fluid	85
		Coolant Heater	85
		Operating Ether Start	86-87
		Starting Fluid Container Replacement ..	88
		Power Shift Transmission	89-90
		Mechanical Shift Transmission	91
		Differential Lock	92

TABLE OF CONTENTS

OPERATING INSTRUCTIONS (Cont'd)

Power Takeoff	93-96
Operating PTO	93
540 or 1000 RPM PTO Operation	94
Guards	95
Operating Safety	96
Drawbar	97
Three Point Hitch System	98
Hitch System Adjustments	99-101
Hitch Operation	102-106
Connect Implement	102
Hitch Control Lever	102-103
Sensing Control	104-105
Stationary Depth	105
Hydraulic Float Control	105
Anti-Sway Chain	106
Hitch Coupler - Category I	106
Hitch Coupler - Category III	107-109
Remote Hydraulic Control	110-116
Remote Control Lever	110-111
Variable Flow Control	112-113
Operating the Remote System	114
Hydraulic Hose Couplers	115
Hydraulic Hose Coupling	116
Remote Cylinder	117
Hydraulic Cylinder Jack Pads	118
Front Axle Adjustment	119
Rear Wheel Hub Adjustment	120-122
Rear Wheel Mounting	123
Rear Tire Mounting	124
Tractor Ballast	124-129
Ballast	124
Measuring Slip	125
Tractor and Equipment Weight	126
Front End Weights	127
Rear Wheel Weights	128
Tire Liquid Weight	129

PREVENTIVE MAINTENANCE 130-186

Hood and Side Panels	131
Slide Type Hood (If Equipped) ...	132-133
Slide Type Hood Adjustment	
(If Equipped)	132
Slide Type Hood Lubrication	
(If Equipped)	133
Tilt Type Hood	133
Cooling System	134-143
Pressure Cooling System	134
Coolant Solutions	135
Engine Cooling System Treatment ..	135
Radiator Cleaning	136
Cooling System Service	137
Thermostat Check	138
Thermostat Replacement	138-140
Fan Belt Adjustment	141
Fan Belt Replacement	142
Water Filter and Conditioner	143

PREVENTIVE MAINTENANCE (Cont'd)

Fuel System	144-149
Service Intervals	144
Fuel Filter Replacement	145-146
Primary Fuel Filter	147-148
Air Removal	148-149
Air Intake System	150-157
Air Filter Service Interval	151
Final Air Filter Service	152-156
Tubes and Hoses	157
Neutral Start Switch Adjustment ..	158-159
Electrical System	160-165
Head Lamps	160
Flood Lamps	160
Flashing Amber Warning Lamps	161
Tail Lamps	161
Instrument Cluster Lamps	162
Fuse Panel - Tractor	163
Fuse Panel - Operators Cab	163
Fuse Panel - Tractor and Cab	164
Head Lamp Adjustment	165
Storage Battery	166-169
Access to Batteries	167
Battery Cables and Terminals	167
Battery Water	168
Breather Tubes (If Equipped)	168
Removal and Installation of Batteries ..	168
Auxiliary Battery Connections	169
Roll Over Protective Structure	
(ROPS)	170-172
Tractor Roll Over	171
Safety Rules	171
Maintenance and Inspection	171
ROPS Label	172
Operator's Cab	173-186
Preventive Maintenance	173-174
Air Filter Removal	175
Air Filter Service	176-177
Seat Belt Inspection	
and Maintenance	177
Operator's Seat	178-179
Refrigerant Check	180-181
Compressor Belt Adjustment	182
Compressor Belt Replacement	183
Dome Lamp	184-185
Console Lamp	186

CASE TECHNICAL MANUALS 187

[Buy now](#)

[Case 2090 Tractor Operator's Manuals PDF](#)

[With Instant Download](#)