

epcatalogs.com

**Case  
2096 Tractor**

**Operator's Manual**

9-11120

Reprinted

***CASE***






*THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.*

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.



# 2096 Tractor Operators Manual

Rac 9-11120

Written In *Clear  
And  
Simple  
English*

epcatalogs.com

**J I Case**  
A Tenneco Company





**THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.**

## **IMPORTANT**

**If This Machine Is Used By An Employee Or Is Loaned Or Rented, Make Certain That The Operator (s), Prior To Operating:**

- 1. Is Instructed In Safe And Proper Use.**
- 2. Reviews And Understands The Manual (s) Pertaining To The Machine.**



## **OPERATING INSTRUCTIONS**

- 1. SECURELY FASTEN YOUR SEAT BELT IF THE TRACTOR HAS A ROPS.**
- 2. WHERE POSSIBLE, AVOID OPERATING THE TRACTOR NEAR DITCHES, EMBANKMENTS AND HOLES.**
- 3. REDUCE SPEED WHEN TURNING, CROSSING SLOPES, AND ON ROUGH, SLICK, OR MUDDY SURFACES.**
- 4. STAY OFF SLOPES TOO STEEP FOR SAFE OPERATION.**
- 5. WATCH WHERE YOU ARE GOING,**

**ESPECIALLY AT ROW ENDS, ON ROADS, AND AROUND TREES.**

- 6. DO NOT PERMIT OTHERS TO RIDE.**
- 7. OPERATE THE TRACTOR SMOOTHLY- NO JERKY TURNS, STARTS, OR STOPS.**
- 8. HITCH ONLY TO THE DRAWBAR AND HITCH POINTS RECOMMENDED BY TRACTOR MANUFACTURERS.**
- 9. WHEN TRACTOR IS STOPPED, SET BRAKES SECURELY AND USE PARK LOCK IF AVAILABLE.**

**REFERENCE: OSHA TITLE 29 CFR 1928.51**



# TABLE OF CONTENTS

TO THE OWNER .....	III	OPERATING INSTRUCTIONS (Cont'd)	
SAFETY .....	IV-XVIII	Programming Dynamic	
Safety Rules .....	IV	Loaded Radius .....	48,49
Before Starting .....	IV-V	True Ground Speed .....	50
Operation .....	VI-XV	True Ground Speed Sensor .....	50,51
Service .....	XVI-XVIII	Wheel Slip Function .....	52,53
HAND SIGNALS .....	XIX-XX	Area/Hour Function .....	53
DECALS .....	XXI-XXV	Programming Attachment Width ..	54,55
SERIAL NUMBERS .....	1	Area Done Function .....	56
DIESEL ENGINE SPECIFICATIONS .....	2,3	English/Metric Selection .....	56
GENERAL SPECIFICATIONS .....	4-7	Operating Service Monitors	
APPROXIMATE TRACTOR SPEEDS .....	8	& Bar Indicators .....	57-62
FUEL SPECIFICATIONS .....	9	Instrument Cluster	
APPROXIMATE OVER ALL		Functional Checks .....	63
MEASUREMENTS .....	10,11	Automatic Shutdown System .....	64,65
APPROXIMATE TRANSPORT		Operating Controls .....	66-97
WEIGHT .....	10,11	Steering Console .....	66-69
MAXIMUM GROSS VEHICLE WEIGHT ..	10,11	Foot Pedals .....	68,69
TIRE AND WHEEL EQUIPMENT .....	12,13	Operator's Console .....	70-76
FRONT WHEEL TREAD POSITIONS .....	14	Mechanical Front Drive .....	76
FRONT WHEEL		Park Brake Control .....	77
TREAD POSITIONS - MFD .....	15	Steering Column Tilt .....	78
WHEEL MOUNTING TORQUES .....	16	Telescopic Steering Column .....	78
INSTALLATION OF		Heater Stop Valve .....	79
STEERING STOPS - MFD .....	16,17	Fuel Tank Water Trap .....	79
TIRE SIZE ARRANGEMENTS - MFD .....	17,18	Rear View Mirrors .....	80
REAR WHEEL TREAD POSITION .....	19	Cab Window Lever .....	80
DUAL REAR WHEEL		Cab Headliner Controls .....	81,82
TREAD POSITIONS .....	20,21	Cab Air Flow Control .....	83
LUBRICATION .....	22-36	Cab Defroster Control .....	83
Engine Hourmeter .....	22	Cab Air Flow Arrangements .....	84-86
Engine Lubrication .....	23	Air Conditioner Operation .....	87
Lubrication Chart .....	24,25	Cab Door Lock .....	87
Engine Oil Check & Change .....	26,27	Operators Seat .....	88-91
Engine Oil Filter .....	28	Seat Belts .....	92,93
Transmission Oil Level Check & Change ..	28	Amber Warning Lamps, Direction	
Transmission Hydraulic Oil Filters .....	30-32	Turn Signals & SMV Symbol .....	94,95
Differential Oil Check & Change .....	33	Implement Warning Lamps	
Fuel Filter Oil Check & Change .....	34	& SMV Symbol .....	96
Steering & Brake System Air Removal ..	35	Auxiliary Outlet Socket .....	97
Front Wheel Bearings .....	36	Starting Procedure .....	98,99
ALTERNATOR CHARGING SYSTEMS .....	37	Stopping the Engine .....	100
OPERATING INSTRUCTIONS .....	37-150	Cold Temperature Operation .....	101,102
Run-In Procedure .....	37,38	Cold Temperature Starting .....	103-107
Before Starting the Engine .....	39	Ether Starting Fluid .....	103,104
Towing .....	40	Starting Fluid	
How to Transport the Tractor .....	40	Container Replacement .....	105
Digital Instrument Cluster .....	41-65	Coolant Heater .....	106
Programming Tire Size .....	44-46	Oil Pan Heater .....	107
Programming Static		Power Shift Transmission .....	108,109
Loaded Radius .....	47	Differential Lock .....	110
		Power Takeoff .....	111-115
		Operating PTO .....	111
		540 or 1000 RPM PTO Operation .....	112
		Drawbar Position .....	113
		Guards .....	114
		Operating Safety .....	115

[Buy now](#)

[Case 2096 Tractor PDF Operator's Manuals](#)

[With Instant Download](#)