

epcatalogs.com

2390 Tractor

Operators Manual

9-6153

Reprinted

CASE 



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	33-120
SAFETY	IV-XVII	Run-In Procedure	33
Safety Rules	IV	Before Starting the Engine	34
Before Starting	IV-V	Towing	35
Operation	VI-XV	How to Transport the Tractor	35
Service	XVI-XVIII	Operating Instruments	36-41
HAND SIGNALS	XIX-XX	Automatic Engine Shutoff	
DECALS	XXI-XXV	(If Equipped)	40-41
NOTES	XXVI	Operating Controls	42-70
SERIAL NUMBERS	1	Steering Console	42-43
DIESEL ENGINE SPECIFICATIONS	2,3	Foot Pedals	44-45
GENERAL SPECIFICATIONS	4-7	Operator's Console	46-52
APPROXIMATE TRACTOR SPEEDS	8-9	Steering Column Tilt	53
APPROXIMATE OVER ALL		Telescopic Steering Column	53
MEASUREMENTS	10-11	Heater Stop Valve	54
APPROXIMATE TRANSPORT		Fuel Tank Water Trap	54
WEIGHT	1-11	Rear View Mirrors	55
OPERATOR'S CAB STANDARDS	10-11	Cab Window Lever	55
TIRE AND WHEEL EQUIPMENT	12	Cab Heating Controls	56-57
FRONT WHEEL TREAD POSITIONS	13	Cab Air Flow Control	58
REAR WHEEL TREAD POSITIONS	14-15	Cab Defogger Control	58
DUAL REAR WHEEL		Cab Air Flow Arrangements	59-61
TREAD POSITIONS	16-17	Air Conditioner Operation	62
DUAL REAR TIRE PRESSURES	17	Cab Door Lock	62
FUEL SPECIFICATIONS	18-19	Tool Compartment	62
LUBRICATION	20-31	Operator's Seat	63-65
Engine Hourmeter	20	Seat Belts	66
Diesel Engine	21	Amber Warning Lamps, Direction	67-68
Lubrication Chart	22-23	Turn Signals & SMV	
Engine Oil Change	24-25	Implement Warning Lamps,	
Engine Oil Filters	25	SMV Symbol	69
Transmission Oil Level Check & Change	26	Auxiliary Outlet Socket	70
Hydraulic Oil Filters	27-29	Starting Procedure	71-72
Steering & Brake System Air Removal	30	Stopping the Engine	73
Front Wheel Bearing	31	Cold Temperature Operation	74
ALTERNATOR CHARGING SYSTEMS	32	Preparing Tractor For Operating in Cold	
		Temperatures	75
		Cold Temperature Starting	76-79
		Case Starting Fluid	76
		Coolant Heater	76
		Operating Ether Start	77-78
		Starting Fluid Container Replacement	79
		Power Shift Transmission	80-81
		Differential Lock	82
		Power Takeoff	83-85
		Operating PTO	83
		Guards	84
		Operating Safety	85
		Drawbar	86
		Three Point Hitch System	87
		Hitch System Adjustments	88-90

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Hitch Operation	91-95
Anti-Sway Chain	91
Connect Implement	92
Hitch Control Lever	92-93
Sensing Control	94-95
Stationary Depth	95
Hydraulic Float Control	95
Hitch Coupler - Category III-II	96-99
Hitch Coupler - Category III	100
Remote Hydraulic Control	101-107
Remote Control Levers	101-102
Variable Flow Control	103-104
Operating the Remote System	105
Hydraulic Hose Couplers	106
Hydraulic Hose Coupling	107
Remote Cylinder	108
Hydraulic Cylinder Jack	109
Front Axle Adjustment	110
Rear Wheel Hub Adjustment	111-113
Dual Wheel Mounting	114
Rear Tire Mounting	115
Loads Matched to Tractor	115
Tractor Balance	116-120
Measuring Tip	116
Tractor and Equipment Weight	117
Front End Weights	118
Rear Wheel Weights	119
Tire Liquid Weight	120

PREVENTIVE MAINTENANCE

Hood and Side Panels	122
Cooling System	123-132
Pressure Cooling System	123
Coolant Solutions	124
Engine Cooling System Treatment ..	124
Radiator Cleaning	125
Cooling System Service	126
Thermostat Check	127
Thermostat Replacement	127-129
Fan Belt Adjustment	130
Fan Belt Replacement	131
Water Filter & Conditioner (If Equipped)	132
Fuel System	133-138
Service Intervals	133
Fuel Filter Replacement	134-135
Primary Fuel Filter	136-137
Air Removal	137-138

Air Induction System	139-148
Air Filter Service Interval	140
Final Air Filter Service	141-144
Aspirated Strata Tube Service ..	145-147
Tubes and Hoses	148

Neutral Start Switch Adjustment ..	149-150
Electrical System	151-156
Head Lamps	151
Flood Lamps	151
Flashing Amber Warning Lamps	152
Tail Lamps	152
Instrument Cluster Lamps	153
Fuse Panel - Tractor	154
Fuse Panel - Operators Cab	154
Fuse Panel - Tractor & Cab	155
Head Lamp Adjustment	156

Storage Battery	157-160
General Maintenance	157
When Batteries Are Not In Use	157
Access to Batteries	158
Battery Cables and Terminals	158
Battery Water	159
Breather Tubes	159
Removal and Installation of Batteries ..	159
Auxiliary Battery Connections	160

Roll Over Protective Structure (ROPS)	161-163
Tractor Roll Over	162
Safety Rules	162
Maintenance and Inspection	162
ROPS Label	163

Operator's Cab	164-176
Preventive Maintenance	164-165
Air Filter Removal	166
Air Filter Service	167-168
Seat Belt Inspection and Maintenance	168
Operator's Seat	169-170
Refrigerant Check	171-172
Compressor Belt Adjustment	173
Compressor Belt Replacement	174
Dome Lamp	175
Console Lamp	176

CASE TECHNICAL MANUALS

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

[Buy now](#)

[Case 2390 Tractor PDF Operator's Manual](#)

[With Instant Download](#)