

epcatalogs.com

# **2594 Tractor**

## **Operators Manual**

9-9442

Reprinted

**CASE** 



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

**Your Authorized Case Dealer**



**Figure 1**

**NOTE:** When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

# TABLE OF CONTENTS

|                                          |          |                                    |         |
|------------------------------------------|----------|------------------------------------|---------|
| TO THE OWNER .....                       | I        | OPERATING INSTRUCTIONS (Cont'd)    |         |
| SAFETY .....                             | IV-XVIII | True Ground Speed .....            | 47      |
| Safety Rules .....                       | IV       | True Ground Speed Sensor .....     | 47,48   |
| Before Starting .....                    | IV-V     | Programming Attachment Width ..    | 51,52   |
| Operation .....                          | VI-XIV   | English/Metric Selection .....     | 53      |
| Service .....                            | XV-XVIII | Operating Service Monitors and     |         |
| HAND SIGNALS .....                       | XIX-XX   | Bar Indicators .....               | 54-59   |
| DECALS .....                             | XXI-XXV  | Automatic Shutdown System          |         |
| SERIAL NUMBERS .....                     | 1        | (If Equipped) .....                | 60      |
| DIESEL ENGINE SPECIFICATIONS ..          | 2,3      | Instrument Cluster                 |         |
| GENERAL SPECIFICATIONS .....             | 4-6      | Functional Checks .....            | 61      |
| APPROXIMATE TRACTOR SPEEDS ..            | 7-9      | Operating Controls .....           | 62-91   |
| TIRE AND WHEEL EQUIPMENT .....           | 10,11    | Steering Console .....             | 62-65   |
| APPROXIMATE OVERALL                      |          | Operators Console .....            | 66-71   |
| MEASUREMENTS .....                       | 12,13    | Steering Column Tilt .....         | 72      |
| APPROXIMATE TRANSPORT                    |          | Telescopic Steering Column .....   | 72      |
| WEIGHT .....                             | 12,13    | Heater Stop Valve .....            | 73      |
| OPERATOR CAPACITY .....                  | 12,13    | Fuel Tank Water Trap .....         | 73      |
| FRONT WHEEL TREAD POSITIONS ..           | 14,15    | Rear View Mirrors .....            | 74      |
| REAR WHEEL TREAD POSITIONS ..            | 16,17    | Cab Window Lever .....             | 74      |
| EQUAL REAR WHEEL                         |          | Cab Headliner Controls .....       | 75,76   |
| TREAD POSITIONS .....                    | 18,19    | Cab Air Flow Control .....         | 77      |
| TIRE SPECIFICATIONS .....                | 20,21    | Cab Defroster Control .....        | 77      |
| LUBRICATION .....                        | 22-33    | Cab Air Flow Arrangements .....    | 78-80   |
| Engine Hourmeter .....                   | 22       | Air Conditioner Operation .....    | 81      |
| Diesel Engine .....                      | 23       | Cab Door Lock .....                | 81      |
| Lubrication Chart .....                  | 24,25    | Operators Seat .....               | 82-85   |
| Engine Oil Change .....                  | 26,27    | Seat Belts .....                   | 86,87   |
| Engine Oil Filters .....                 | 27       | Amber Warning Lamps, Direction     |         |
| Transmission Oil Level Check & Change .. | 28       | Turn Signals & SMV Symbol .....    | 88,89   |
| Hydraulic Oil Filters .....              | 29-31    | Implement Warning Lamps,           |         |
| Steering & Brake System Air Removal ..   | 32       | SMV Symbol .....                   | 90      |
| Front Wheel Bearings .....               | 33       | Auxiliary Outlet Socket .....      | 91      |
| ALTERNATOR CHARGING SYSTEMS ..           | 34       | Starting Procedure .....           | 92,93   |
| OPERATING INSTRUCTIONS .....             | 35-142   | Stopping the Engine .....          | 94      |
| Run-In Procedure .....                   | 35       | Cold Temperature Operation .....   | 95      |
| Before Starting the Engine .....         | 36       | Preparing Tractor For Operating in |         |
| Towing .....                             | 37       | Cold Temperatures .....            | 96      |
| How to Transport the Tractor .....       | 37       | Cold Temperature Starting .....    | 97-100  |
| Digital Instrument Cluster .....         | 38-61    | Case Starting Fluid .....          | 97      |
| Programming Tire Size .....              | 41-43    | Coolant Heater .....               | 97      |
| Programming Static Loader Radius ..      | 44       | Ether Starting Fluid .....         | 98,99   |
| Programming Dynamic                      |          | Starting Fluid Container           |         |
| Loaded Radius .....                      | 45,46    | Replacement .....                  | 100     |
|                                          |          | Power Shift Transmission .....     | 101,102 |
|                                          |          | Differential Lock .....            | 103     |
|                                          |          | Power Takeoff .....                | 104-106 |
|                                          |          | Operating PTO .....                | 104     |
|                                          |          | Guards .....                       | 105     |
|                                          |          | Operating Safety .....             | 106     |



# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS (Cont'd)

|                                                    |         |
|----------------------------------------------------|---------|
| Drawbar .....                                      | 107     |
| Three Point Hitch System .....                     | 108     |
| Hitch System Adjustments .....                     | 109-112 |
| Hitch Operation .....                              | 113-117 |
| Anti-Sway Chain .....                              | 113     |
| Connect Implement .....                            | 114     |
| Hitch Control Lever .....                          | 114,115 |
| Sensing Control .....                              | 116,117 |
| Stationary Depth .....                             | 117     |
| Hydraulic Float Control .....                      | 117     |
| Hitch Coupler - Category III-II .....              | 118-121 |
| Hitch Coupler - Category III .....                 | 122     |
| Remote Hydraulic Control .....                     | 123-129 |
| Remote Control Levers .....                        | 123,124 |
| Variable Flow Control .....                        | 125,126 |
| Operating the Remote System .....                  | 127     |
| Hydraulic Motors .....                             | 127     |
| Remote Valve With Lockcheck<br>(If Equipped) ..... | 127     |
| Hydraulic Hose Couplers .....                      | 128     |
| Hydraulic Hose Coupling .....                      | 129     |
| Remote Cylinder .....                              | 130     |
| Hydraulic Cylinder Jack Pads .....                 | 131     |
| Front Axle Adjustment .....                        | 132     |
| Rear Wheel Hub Adjustment .....                    | 133-135 |
| Dual Wheel Mounting .....                          | 136     |
| Rear Tire Mounting .....                           | 137     |
| Loads Matched to Tractor .....                     | 137     |
| Tractor Ballast .....                              | 139-142 |
| Measuring Slip Without Tire .....                  | 138     |
| Ground Speed Sensor .....                          | 138     |
| Tractor and Equipment Weight .....                 | 139     |
| Front End Weights .....                            | 140     |
| Rear Wheel Weights .....                           | 141     |
| Tire Liquid Weight .....                           | 142     |
| PREVENTIVE MAINTENANCE .....                       | 143-196 |
| Hood and Side Panels .....                         | 144     |
| Cooling System .....                               | 145-154 |
| Pressure Cooling System .....                      | 145     |
| Coolant Solutions .....                            | 146     |
| Engine Cooling System Treatment .....              | 146     |
| Radiator Cleaning .....                            | 147     |
| Cooling System Service .....                       | 148     |
| Thermostat Check .....                             | 149     |
| Thermostat Replacement .....                       | 149-151 |
| Fan Belt Adjustment .....                          | 152     |
| Fan Belt Replacement .....                         | 153     |
| Water Filter & Conditioner<br>(If Equipped) .....  | 154     |

## PREVENTIVE MAINTENANCE (Cont'd)

|                                                |         |
|------------------------------------------------|---------|
| Fuel System .....                              | 155-160 |
| Service Intervals .....                        | 155     |
| Fuel Filter Replacement .....                  | 156,157 |
| Fuel Strainer .....                            | 158,159 |
| Air Removal .....                              | 159,160 |
| Air Induction System .....                     | 161-170 |
| Air Filter Service Interval .....              | 162     |
| Final Air Filter Service .....                 | 163-166 |
| Aspirated Strata Tube Service .....            | 167-169 |
| Tubes and Hoses .....                          | 170     |
| Neutral Start Switch Adjustment .....          | 171,172 |
| Electrical System .....                        | 173-176 |
| Head Lamps .....                               | 173     |
| Flood Lamps .....                              | 173     |
| Flashing Amber Warning Lamps .....             | 174     |
| Tail Lamps .....                               | 174     |
| Instrument Cluster Lamps .....                 | 175     |
| Fuse Panel - Tractor & Cab .....               | 175     |
| Head Lamp Adjustment .....                     | 176     |
| Batteries .....                                | 177-180 |
| General Maintenance .....                      | 177     |
| When Batteries Are Not In Use .....            | 177     |
| Access to Batteries .....                      | 178     |
| Battery Cables and Terminals .....             | 178     |
| Battery Water .....                            | 179     |
| Removal and Installation of Batteries .....    | 179     |
| Auxiliary Battery Connections .....            | 180     |
| Roll Over Protective Structure<br>(ROPS) ..... | 181-183 |
| Tractor Roll Over .....                        | 182     |
| Safety Rules .....                             | 182     |
| Maintenance and Inspection .....               | 182     |
| ROPS Label .....                               | 183     |
| Operators Cab .....                            | 184-196 |
| Preventive Maintenance .....                   | 184,185 |
| Air Filter Service .....                       | 186-188 |
| Seat Belt Inspection<br>and Maintenance .....  | 188     |
| Operators Seat .....                           | 189-190 |
| Refrigerant Check .....                        | 191-192 |
| Compressor Belt Adjustment .....               | 193     |
| Compressor Belt Replacement .....              | 194     |
| Dome Lamp .....                                | 195     |
| Console Lamp .....                             | 196     |
| CASE TECHNICAL MANUALS .....                   | 197     |

[Buy now](#)

[Case 2594 Tractor PDF Operator's Manual](#)

[With Instant Download](#)