

epcatalogs.com

# **2670 Tractor**

## **Operators Manual**

9-3881





***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TABLE OF CONTENTS

TO THE PURCHASER .....	III	LUBRICATION	
SAFETY .....	IV-XVI	Trans. Fluid Change .....	25
Safety Rules .....	IV	Hydraulic Oil Filters .....	25,26
Pre-Starting .....	IV, V	Planetary Oil Change .....	27
Operation .....	VI-XIII	Differential Oil Change .....	27
Service .....	XIV-XVI	Disc Brakes .....	28
		Alternator Charging Systems .....	29
SERIAL NUMBERS .....	1	OPERATING INSTRUCTIONS .....	30-94
DIESEL ENGINE		Run-In-Procedure .....	30
SPECIFICATIONS .....	2,3	Pre-Starting Check List .....	31
GENERAL SPECIFICATIONS .....	4-7	Towing .....	31
Air Intake System .....	4	Operating Instruments .....	32-37
Cooling System .....	4	Operating Controls .....	38-65
Electrical System .....	4	Starting Procedure .....	66,67
Hydraulic Brakes .....	4	Cold Weather Operation .....	68
Parking Brake .....	5	Tractor Warm Up Procedure .....	69
Power Shift Transmission .....	5	Cold Weather Starting .....	70,71
Hydraulic Pump .....	5	Ether Quick Starting Aid .....	70
Hydrostatic Front Power Steering .....	5	Operation of Quick Start Aid .....	70
Rear Power Steering .....	6	Cold Weather Starting Fluid .....	71
Axle Differential and Planetaries .....	6	Coolant Heater .....	71
3 Point Hitch System .....	6	Power Shift Transmission .....	72,73
L.H. Dual Remote Hydraulic System .....	6	Power Take-Off .....	74
R.H. Dual Remote Hydraulic System .....	6	Operating Power Take-Off .....	74
Power Take-Off .....	7	Power Take-Off Guards .....	75
Drawbar .....	7	P.T.O. Operating Precautions .....	76
APPROXIMATE TRAVEL SPEEDS .....	8	Three Point Hitch System .....	77-80
OVER MEASUREMENTS .....	9	Quick Hitch Coupler .....	81
APPROXIMATE SHIPPING WEIGHT ...	9	Anti-Sway Chain .....	81
TIRE AND WHEEL EQUIPMENT .....	10	Drawbar .....	82
WHEEL TREAD SPACING .....	11-15	Remote Hydraulic Control .....	83,84
DUAL WHEEL TIRE PRESSURES .....	15	Hydraulic Hose Coupling .....	85,86
DUAL WHEELS .....	16	Remote Cylinder .....	87
FUEL SPECIFICATIONS .....	17,18	Hydraulic Cylinder Jack Pads .....	88
Fuel Conditioner .....	18	Wheel Rim Adjust and Mount .....	89
LUBRICATION .....	19-29	Wheel Spacing and Clamp Adjust .....	90
Engine Hourmeter .....	19	Dual Wheel Mounting .....	91
Lube Recommendations and		Tire Mounting .....	92
Capacities .....	20	Tire Liquid Weight .....	92
Lubrication Chart .....	20,21	Wheel Weights .....	93
Diesel Engine .....	22	Front End Weights .....	94
Engine Crankcase Oil Change .....	23	PREVENTIVE MAINTENANCE ...	95-138
Engine Oil Filters .....	24	Cooling System .....	96-99
		Facts About Pressurized	
		Cooling System .....	96
		Anti-Freeze Solutions .....	97
		Engine Cooling System Treatment .....	97
		Cleaning the Cooling System .....	98,99
		Checking the Thermostat .....	99
		Thermostat Replacement .....	99
		Fan Belt Adjustments .....	100
		Replacing Fan Belts .....	100

# TABLE OF CONTENTS

## PREVENTIVE MAINTENANCE

Diesel Fuel System .....	101-105
General Description .....	101,102
Servicing Fuel Filters .....	103,104
Bleeding Fuel System .....	105
Air Induction System .....	106-111
Final Air Filter Service Interval ...	107
Servicing the Final Air Filter .....	107-109
Servicing Air Induction System .....	110,111
Start Switch Adjustments .....	112
Parking Brake Adjustment .....	113
Three Point Hitch Adjustments .....	114-116
Electrical System .....	117-123
Headlights .....	117
Comb. Rear Tail and Flood Light ...	117
Flashing Amber Warning Lights ...	118
Instrument Panel Gauge Lights ....	118
Flood Lights .....	119
Directional Turn Signal Panel Light .....	119
Front Headlight Adjustment .....	120
Storage Battery .....	121-123

## PREVENTIVE MAINTENANCE

Rollover Protective Structure (ROPS) .....	124-126
Operator's Cab .....	127-138
Preventive Maintenance .....	127
Air Filter Removal .....	128
Air Filter Service .....	129,130
Seat Belt Inspection and Care .....	130
Operator's Seat and Trim .....	131,132
Dome Light .....	133
Fuse Panel .....	133
Console Light .....	134
Checking Refrigerant Level ...	135,136
Compressor Belt Replacement .....	137
Compressor Belt Adjustment .....	138

## CASE TECHNICAL MANUALS ..... 139

# TO THE PURCHASER OF A CASE TRACTOR

The care you give your Case Tractor will greatly determine the satisfaction and service you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

**Your Authorized Case Dealer**



**Figure 1**

**TO INSURE EFFICIENT AND PROMPT SERVICE, PLEASE FURNISH US WITH THE MODEL, TRACTOR, ENGINE, TRANSMISSION, CAB AND AXLE SERIAL NUMBERS OF YOUR TRACTOR IN ALL CORRESPONDENCE OR CONTACTS.**

**NOTE:** The terms "Right Hand" and "Left Hand" whenever used in this manual, apply to the tractor when facing in the direction the tractor will move in forward operation.

[Buy now](#)

[Case 2670 Tractor PDF Operator's Manual](#)

[With Instant Download](#)