



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

## BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
- 2. MAKE SURE THE OPERATOR (FALS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR TH' 2 'A HINE.



IMPROPER OPT. TICH FTHIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STACTING THE ENGINE, DO THE FOLLOWING:

- 1. BEAT THE OPERATOR'S MANUAL.
- 2 n. Al ALL SAFETY DECALS ON THE MACHINE.
- 5. LEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, LOLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

© 1995 Case Corporation

CASE and IH are registered trade marks of Case Corporation

## **TABLE OF CONTENTS**

TO THE PURCHASER III	LUBRICATION
	Turbocharger Oil Filter27
SAFETY IV-XVI	Trans. Fluid Change 28
Safety Rules IV	Hydraulic Oil Filters 28,29
Pre-Starting IV,V	Planetary Oil Change 30
Operation VI-XIII	Differential Oil Change
Service XIV-XVI	Alternator Charging Systems 31
	Disc Brakes
SERIAL NUMBERS 1	Disc Brakes 32
	OPERATING INSTRUCTIONS 33-100
DIESEL ENGINE SPECIFICATIONS 2,3	
DIEDEL ENGINE DI ECH ICHII, CINO 2,0	Run-In-Procedure
GENERAL SPECIFICATIONS 4-7	Pre-Starting Check List
Air Intake System 4	Towing
Cooling System 4	Operating Instrume 36-41
	Operating Controls 42-68
Hydraulic Brakes 4	Starting Proced 69,70
Parking Brake	Stopping the ngi
Electrical System 4,5	Cold Weather ation
Power Shift Transmission 5	Tractor (arm Up Procedure 72
Hydraulic Pump 5	Cold Wea ar Starting 73-75
Hydrostatic Front Lower Steering 6	Frel Pump Assist 73
Rear Power Steering 6	String Fluid 73
Axle Differential and Planetaries 6	000 nt Heater 73
3 Point Hitch System 6	Einer Quick Starting Aid 74
L.H. Dual Remotes 6	eration of Quick Start
R.H. Dual Remotes	replacing Starting Fluid 75
Power Take-Off 7	Power Shift Transmission 76,77
Drawbar	Power Take-Off78
	Operating Power Take-Off 78
APPROXIMATE TRAVEL SPI E 8	Power Take-Off Guards 79
	PTO Operating Precautions 80
OVERALL MEASUREMFN1 9	Three Point Hitch System 81-86
	Anti-Sway Chain 81
APPROXIMATE SHIPPI IC WEIGHT . 9	Hitch System Adjustments 82-84
	Hitch System Operation 85,86
TIRE AND WHELE E UIPMENT 10	
	Quick Hitch Coupler 87
WHEEL TRE D PACING 11-15	Drawbar 88
	Remote Hydraulic Control 89,90
DUAL V "LI L T.RE PRESSURES 15	Hydraulic Hose Coupling 91,92
	Remote Cylinder93
DUAL WHEELS 16	Hydraulic Cylinder Jack Pads 94
DOAL WHEELS 10	Wheel Rim Adjust and Mount 95
FUEL SPECIFICATIONS 17,18	Wheel Spacing and Clamp Adjust 96
Fuel Conditioner	Dual Wheel Mounting 97
r dei Conditioner 18	Tire Mounting
	Tire Liquid Weight 98
LUBRICATION 19-32	Wheel Weights 99
Engine Hourmeter 19	Front End Weights 100
Lube Recommendations	
and Capacities	PREVENTIVE MAINTENANCE 101-150
Lubrication Chart	Cooling System 102-107
Diesel Engine	Facts About Cooling System 102
Engine Crankcase Oil Change 23	Anti-Freeze Solutions 103
Engine Oil Cleaner	Engine Cooling
Engine On Cleaner 24-26	System Treatment 103

## TABLE OF CONTENTS

PREVENTIVE MAINTENANCE
Cleaning Cooling System 104
Checking Thermostats 105
Thermostat Replacement 105,107
Fan Belt Adjustments 108
Replacing Fan Belts 108
Diesel Fuel System 109-111
Servicing Fuel Filters 109,110
Bleeding Fuel System 111
Air Induction System 112-119
Servicing Final Air Filter 113-117
Servicing Air Induction
System
Start Switch Adjustments 120
Parking Brake Adjustment 121
Three Point
Hitch Adjustments 122-124
Electrical System 125-131
Headlights 125
Comb. Rear Tail
Flood Lig* 125
Flashing Ar r Warning
Lights 126
Inst um t Panel Lights 126
Flot L' 5
r, mere Light 127
Fro t Headlight Adjustment 128
29,131 Larage Battery
<b>X U</b>

PREVENTIVE MAINTENANCE	
Roll Over Protective	
Structure 132-134	4
Operator's Cab 135-146	ô
Preventative Maintenance 135,13	6
Air Filter Removal 13	6
Air Filter Service 137,13	8
Seat Belt Inspection and Care 13	8
Operator's Seat and Trim 139,14	0
Dome Light 14	1
Fuse Panel 14	1
Console Light 14	2
Checking Refrigerant	
Level 143,14	4
Compressor Belt Adjustment 14	5
Compressor Belt Replacement 14	6
Valve Tappet Adjustment 147-15	0
Checking Top Dead Center 147-14	9
Tappet Adjustment 15	
CASE TECHNICAL MANUALS 15	53

## TO THE PURCHASER OF A CASE TRACTOR

The care you give your Case Tractor will greatly determine the satisfaction and service you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.





Figure 1

TO INSURE EFFICIENT AND PROMPT SERVICE, PLEASE FURNISH US WITH THE MODEL, TRACTOR, ENGINE, TRANSMISSION, CAB AND AXLE SERIAL NUMBERS OF YOUR TRACTOR IN ALL CORRESPONDENCE OR CONTACTS.

**NOTE:** The terms"Right Hand" and "Left Hand" whenever used in this manual, apply to the tractor when facing in the direction the tractor will move in forward operation.

**PRICE \$2.95** 

Buy now

Case 2870 Tractor PDF Operator's manual

With Instant Download