

epcatalogs.com

4694 Tractor

Operators Manual

9-9851

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TO THE OWNER OF A CASE INTERNATIONAL TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case International Tractor will work well for many years.

Your Dealer can assist you with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

TABLE OF CONTENTS

TO THE OWNER	I	OPERATING INSTRUCTIONS	37-154
TABLE OF CONTENTS	II,III	Run-In Procedure	37
SAFETY	IV-XVI	Before Starting the Engine	38
Safety Rules	IV	True Ground Speed Sensor	39
Before Starting	IV-VI	Digital Instrument Cluster	40-65
Operation	VI-XII	English/Metric Selection	41
Service	XIII-XVI	Engine Hour Meter	41
HAND SIGNALS	XVII-XVIII	Turn Signal Indicator	41
DECALS	XIX-XXII	Service Monitor and Indicators ..	42-48
SERIAL NUMBERS	1	Function Buttons	49-53
DIESEL ENGINE SPECIFICATIONS	2,3	Engine RPM Function	49
GENERAL SPECIFICATIONS	4-7	PTO RPM Function	49
TRAVEL SPEEDS	8,9	Timer Function	50
OVER ALL MEASUREMENTS	10	Area/Hour Function	51
TRANSPORT WEIGHT	10	Area Done Function	51
MAXIMUM GROSS MACHINE WEIGHT ..	10	Wheel Slip Function	52,53
TIRE AND WHEEL EQUIPMENT	11-14	Ground Speed Function	53
TIRE INFLATION PRESSURE	12,13	Instrument Cluster	
AXLE STOP SPACERS	14	Programming	54-63
WHEEL TREAD POSITIONS	15-19	Programming Tire Size	55-60
DUAL WHEELS	20	Standard Code Number	55
FUEL SPECIFICATIONS	21	Dynamic Tire Code Number ..	56,57
FUEL CONDITIONER	22	Static Code Number	58-60
LUBRICATION	23-35	Programming	
Engine Hourmeter	23	Attachment Width	61,62
Lubrication Chart	24,25	Programming Rear Wheel	
Engine Lubrication	26	Position Monitor	62,63
Engine Oil Change	27,28	Automatic Shutdown System ..	64,65
Engine Oil Filters	28	Operating Controls	66-102
Rear Steering Valve Filter	29	Front Console	66-73
Rear Steering Hydraulic Oil Filter ..	30	Steering Column Tilt	74
Transmission Oil Level		Moving the Telescopic	
Check & Change	31	Steering Column	75
Hydraulic Oil Filters	31,32	Side Console	76-85
Planetary Oil Level Check & Change ..	33	Park Brake Control	86
Differential Oil Level Check & Change ..	34	Heater Stop Valve	87
Tractor Brakes	35	Fuel Tank Water Traps	87
TOWING	36	Cab Headliner Controls	88,89
		Cab Air Flow Control	90
		Cab Defroster Control	90
		Cab Air Flow Arrangements	91-93
		Air Conditioner Operation	94
		Cab Door Lock	94
		Ash Tray	94
		Rear View Mirrors	95
		Cab Window Lever	95
		Operators Seat	96,97
		Seat Belts	98
		Amber Warning Lamps, Direction	
		Turn Signals & SMV	99,100
		Implement Warning Lamps and	
		SMV Symbol	101
		Auxiliary Outlet Socket	102
		Normal Starting Procedure	103-105
		Stopping The Engine	105,106

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Cold Temperature Operation	106,107
Cold Temperature Starting	108-111
Coolant Heater	108
Ether Starting Attachment	109,110
Starting Fluid Container	
Replacement	111
Power Shift Transmission	112,113
Power Takeoff	114-116
Operating PTO	114
Guards	115
Operating Safety	116
Drawbar	117-119
Three Point Hitch System	120
Hitch System Adjustments	121-123
Anti-Sway Chain	122
Hitch Operation	124-128
Hitch Control Lever	124
To Lift an Implement	124
To Lower an Implement	124
Electronic Hitch System	125,126
Controlling Maximum Depth	127
Stationary Depth Operation	127
Hydraulic Float Control	128
Hitch Coupler - Category III	129
Remote Hydraulic Control	130-135
Remote Control Levers	130,131
Variable Flow Control	132,133
Operating the Remote System	134,135
Hydraulic Hose Couplers	136
Hydraulic Hose Coupling	137
Remote Cylinder	138
Hydraulic Cylinder Jack	139
Wheel Mounting	140
Wheel Rim Adjustment & Mounting	141
Wheel Positions and	
Clamp Adjustment	142
Dual Wheel Mounting	143
Power Adjustable Wheels	144-145
Tire Mounting	146
Loads Mounted to Tractor	146
Tractor Ballast	147-154
Tractor Weight Distribution	147-149
Tractor and Equipment Weight	150
Front End Weights	151
Tire Liquid Weight	152,153
Measuring Wheel Slip	154

PREVENTIVE MAINTENANCE	155
Hood and Side Panels	156
Cooling System	157-165
Pressure Cooling System	157
Coolant Solutions	158
Radiator Cleaning	158
Cooling System Service	159

PREVENTIVE MAINTENANCE (CONT'D)

Thermostat Check	160
Thermostat Replacement	160-162
Fan Belt Adjustment	163
Fan Belt Replacement	164
Water Filter and Conditioner	165
Fuel System	166-171
Service Intervals	166
Fuel Filter Replacement	167,168
Fuel Strainer	169,170
Air Removal	170,171
Air Induction System	172
Air Filter Service Interval	172
Air Filter Service Monitor	173
Air Filter	173
Air Filter Service	174,177
Aspirated Stack Tube Service	178-180
Tubes and Hose	181
Neutral Start Switch Service	182,183
Park Brake Adjustment	184
Electrical System	185-189
Head Lamps	185
Loc Lamps	185
Flashing Amber Warning Lamps	186
Tail Lamps	186
Instrument Cluster Lamps	187
Fuse Panel	187
Head Lamp Adjustment	188
Batteries	190-192
Vent Caps	190
Removal & Installation of Batteries	191
When Batteries Are Not in Use	191
Battery Cables and Terminals	191
Auxiliary Battery Connections	192
Alternator Charging systems	189
Roll Over Protective Structure (ROPS)	193-195
Tractor Roll Over, Safety Rules and ROPS Label	194
Maintenance and Inspection	195
Operators Cab	196-210
Seat Belt Inspection and Maintenance	196
Preventive Maintenance	196-198
Air Filter Service	199-201
Operators Seat	202,203
Compressor Belt Adjustment	204
Compressor Belt Replacement	205
Compressor Belt Alignment	206
Refrigerant Check	207,208
Dome Lamp	209
Tool Box	209
Console Lamp	210

CASE TECHNICAL MANUALS	213
------------------------	-----

[Buy now](#)

[Case 4694 Tractor PDF operator's manual](#)

[With Instant Download](#)