

epcatalogs.com

4890 Tractor

Operators Manual

9-6815



Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS	38-127
SAFETY	IV-XVI	Run-In Procedure	38,39
Safety Rules	IV	Before Starting the Engine	39
Before Starting	IV-V	Operating Instruments	40-43
Operation	VI-XIII	Operating Controls	44-83
Service	XIV-XVI	Steering Console	44-53
HAND SIGNALS	XVII-XVIII	Steering Column Tilt	54
DECALS	XIX-XXIII	Moving the Telescopic	
SERIAL NUMBERS	1	Steering Column	54
DIESEL ENGINE SPECIFICATIONS	2,3	Operator's Console	55-65
GENERAL SPECIFICATIONS	4-7	Hand Brake Control	66
APPROXIMATE TRACTOR SPEEDS	8,9	Heater Stop Valve	67
APPROXIMATE OVER ALL		Fuel Tank Water Traps	67
MEASUREMENTS	10	Cab Headliner Controls	68,69
APPROXIMATE TRANSPORT WEIGHT	10	Cab Air Flow Control	70
OPERATOR'S CAB	10	Cab Defroster Control	70
TIRE AND WHEEL EQUIPMENT	11	Cab Air Flow Arrangements	71-73
WHEEL TREAD POSITIONS	12-16	Air Conditioner Operation	74
DUAL WHEELS	17	Cab Door Lock	74
FUEL SPECIFICATIONS	18,19	Ash Tray	74
LUBRICATION	20-36	Rear View Mirrors	75
Engine Hourmeter	20	Cab Window Lever	75
Diesel Engine	21	Operator's Seat	76-78
Lubrication Chart	22,23	Seat Belts	79
Engine Oil Change	24	Amber Warning Lamps, Direction	
Engine Oil Cleaner	25-27	Turn Signals & SMV	80,81
Turbocharger Oil Filter	28	Implement Warning Lamps and	
Rear Steering Valve Filter	29,30	SMV Symbol	82
Rear Steering Hydraulic Oil Filter	31	Auxiliary Outlet Socket	83
Transmission Oil Level		Starting Procedure	84-86
Check & Change	32	Stopping The Engine	86,87
Hydraulic Oil Filters	32,33	Cold Temperature Operation	87
Planetary Oil Level Check & Change	34	Preparing Tractor For Operating in	
Differential Oil Level Check & Change	35	Cold Temperatures	88
Tractor Brakes	36	Cold Temperature Starting	89-92
ALTERNATOR CHARGING SYSTEM	37	Fuel Pump Cold Start Assist	89
TOWING	37	Coolant Heater	89
		Operating the Cold Start Assist	90,91
		Starting Fluid Container	
		Replacement	92
		Power Shift Transmission	93,94
		Power Takeoff	95-97
		Operating PTO	95
		Guards	96
		Operating Safety	97
		Drawbar	98
		Three Point Hitch System	99
		Hitch System Adjustments	100-102

TABLE OF CONTENTS

OPERATING INSTRUCTIONS

Hitch Operation	103-107
Hitch Control Lever	103
To Lift an Implement	103
To Lower an Implement	103
Electronic Hitch System	104,105
Controlling Maximum Depth	106
Stationary Depth Operation	106
Hydraulic Float Control	107
Anti-Sway Chain	107
Hitch Coupler - Category III	108
Remote Hydraulic Control	109-115
Remote Control Levers	109,110
Variable Flow Control	111,112
Operating the Remote System	111
Hydraulic Hose Couplers	114
Hydraulic Hose Coupling	115
Remote Cylinder	116
Hydraulic Cylinder Jack Pans	117
Wheel Rim Adjustment & Mounting	118
Wheel Positions and	
Clamp Adjustment	119
Dual Wheel Mounting	120
Tire Mounting	121
Loads Mounted on Tractor	121
Tractor Ballast	122-126
Mounting Ballast	122
Tractor and Equipment Weight	123
Front End Weights	124
Wheel Weights	125
Tire Liquid Weight	126
Hood and Side Panels	127

PREVENTIVE MAINTENANCE ... 128-181

Cooling System	129-136
Pressure Cooling System	129
Coolant Solutions	130
Engine Cooling System Treatment	130
Radiator Cleaning	130
Cooling System Service	131
Thermostat Check	132
Thermostat Replacement	132-134
Fan Belt Adjustment	135
Fan Belt Replacement	136
Fuel System	137-142
Service Intervals	137
Fuel Filter Replacement	138,139
Primary Fuel Filter	140,141
Air Removal	141,142
Air Induction System	143-151
Air Filter Service Interval	144
Final Air Filter Service	145-148
Aspirated Strata Tube Service	149,150
Tubes and Hose	151

PREVENTIVE MAINTENANCE (CONT'D)

Neutral Start Switch Adjustment	152,153
Parking Brake Adjustment	154
Electrical System	155-159
Head Lamps	155
Flood Lamps	155
Flashing Amber Warning Lamps	156
Rear Flood and Tail Lamp	156
Instrument Cluster Lamps	157
Fuse Panel	158
Head Lamp Adjustment	159
Storage Battery	160-162
When Batteries Are Not in Use	160
Battery Cables and Terminals	160
Battery Water	161
Vent Caps	161
Removal & Installation of Batteries	161
Auxiliary Battery Connections	162
Roll Over Protective Structure	
(ROPS)	163,164
Tractor Roll Over	164
Safety Rules	164
Maintenance and Inspection	164
Operator's Cab	165-179
Preventive Maintenance	165,166
Air Filter Removal	167
Air Filter Service	168,169
Seat Belt Inspection	
and Maintenance	169
Operator's Seat	170,171
Compressor Belt Adjustment	172
Compressor Belt Replacement	173
Compressor Belt Alignment	174
Refrigerant Check	175,176
Dome Lamp	177,178
Console Lamp	179
Valve Tappet Adjustment	180,181

CASE TECHNICAL MANUALS 183

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years

Your Authorized Case Dealer can assist you with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

[Buy now](#)

[Case 4890 Tractor PDF Operator's manual](#)

[With Instant Download](#)