

SERVICE MANUAL

Tigercat 1075 FORWARDER

Issue 1.0, MARCH, 2008

TABLE OF CONTENTS

	SECTION
INTRODUCTION	iii
SAFETY	1
CONTROLS AND OPERATION	SEE OPERATOR'S MANUAL
LUBRICATION AND MAINTENANCE	3
ELECTRICAL AND COMPUTERS	6
ENGINE START & STOP	7
DRIVE	8
BRAKES	9
OIL COOLER/RADIATOR, FAN AND HYDRAULIC RESERVOIR	10
CENTER JOINT STEERING, GATE AND SNOW BLADE	11
CRANE GRAPPLE AND MAIN PUMP	12

1075-SM00

1075 Available Literature

Operator's Manual (10650101 to 10650300 and 10750101 to 10750200)	Part No. 25791A
Operator's Manual (10750201 to 10750300)	Part No. 29769A
Service Manual (10650101 to 10650300 and 10750101 to 10750200)	Part No. 25792A
Service Manual (10750201 to 10750300) (This Manual)	Part No. 29770A
Parts Catalog	Part No. 25793A

Tigercat®

Tigercat Industries Inc.
P.O. Box 544
Paris, Ontario
Canada N3L 3T6

Tel: (519) 442-1000
Fax: (519) 442-1855

epcatalogs.com

Tigercat 1075 FORWARDER

INTRODUCTION

An Operator's manual, Service manual and a Parts catalog are made available by **Tigercat** to assist the dealer, customer and operator in becoming familiar with the features of the 1075 Forwarder.

Serial numbers:-

10750201 to 10750300.

The operator's manual will assist the operator with the techniques of proper and safe operation of the Forwarder. There is also important information regarding the safe operation of optional equipment and attachments. The service manual contains safety and servicing procedures and a preventive maintenance schedule to ensure optimum machine performance.

Section 1 in both the operator's manual and the service manual contains safety information that must be followed. As well, throughout the rest of the manuals, WARNING and CAUTION notices are displayed where necessary, drawing attention to possible hazards when performing certain procedures.

Only trained personnel should be allowed to operate or work on the machine.

The information contained in this manual is current at time of printing. Improvements to the machine are on-going and may not be covered, therefore in these cases contact your **Tigercat** dealer for the appropriate information.

The phrase “**and up**” appearing in this manual and the serial number implies that the related information is current for any machine serial number HIGHER than the serial number preceding the “**and up**”.

Tigercat reserves the right to make changes to the machine after this manual release date that may not immediately appear in this manual.

Every effort is made to send out updates on a regular basis. If the machine in question was built after the release date of this manual and there is a discrepancy, call Tigercat service department. The release date appears on the first page.

The Company reserves the right to change information contained herein at any time without prior notice.

Tigercat Industries Inc.

NON-APPROVED FIELD PRODUCT CHANGES

The installation of any unauthorized attachment or changes made of any kind to this **Tigercat** product could affect the product's ability to perform as originally intended. The product's integrity, stability and safety could be at serious risk.

IT IS **Tigercat** POLICY THAT NO CHANGES ARE TO BE MADE TO ITS PRODUCTS INCLUDING DELETIONS OR ADDITIONS OTHER THAN A **Tigercat** APPROVED OPTION FITTED IN THE FACTORY APPROVED MANNER.

Official approval to make changes or install options is **only** as follows:

- i) The relevant options for that product must be shown or listed on current **Tigercat** documentation or literature such as a printed specification sheet, price list, parts manual, or product literature issued by **Tigercat**.
- ii) Approved options or product changes authorized in writing by the **Tigercat** Engineering Manager.

Authorization by any other person is unacceptable.

Unauthorized changes made or contributed to by a person or organization may result in creating a dangerous situation and therefore the person or organization will be considered to have assumed the risk involved or be negligent in creating this situation.

Weight is an important factor when considering the addition of options or an attachment. Refer to your **Tigercat** distributor for information on maximum permissible operating weight and the effect the addition of various options may have on your machine.

Tigercat will not be held responsible for any situation that may arise resulting from Non-approved Field Product Changes to its product.

Should **Tigercat** become involved in a suit resulting from changes made to the product without proper authorization by **Tigercat** as stated above, **Tigercat** will take whatever action is appropriate to protect its interests.

The product warranty, policy and the certification on any safety items installed on the modified product will become NULL and VOID if the above policy is not adhered to as specified.

Non-approved product changes also nullify warranties given to **Tigercat** by its component manufacturers.

Tigercat Industries Inc.

Tigercat 1075 Forwarder

SECTION 1 - SAFETY

MARCH, 2008

Read and understand this Safety section prior to operating any equipment.

Read and understand all manuals for any attachments or accessories.

CONTENTS - SECTION 1

ARTICULATION LOCK	1.12
BATTERY DISCONNECT SWITCH	1.7
CAB TILT SUPPORT	1.10
COOLING SYSTEM	1.9
ENGINE HOOD	1.11
EXHAUST FUMES	1.12
FIRE PREVENTION	1.13
FIRE PREVENTION GUIDELINES	1.13
WHAT ELSE TO DO BEFORE YOU EXPERIENCE A FIRE	1.14
WHAT TO DO AFTER A FIRE	1.15
WHAT TO DO IN CASE OF A MACHINE FIRE	1.14
FIRST AID	1.4
FLUID LEAKS	1.9
HYDRAULIC PRESSURE HAZARD	1.9
LOOSE CLOTHING HAZARD	1.10
PARKING THE MACHINE	1.7
PROTECTIVE CLOTHING	1.3
SAFETY INTERLOCK SWITCHES ON DOORS	1.8
SAFETY PRECAUTIONS, GENERAL	1.3, 1.4, 1.5
SAFETY PRECAUTIONS, OPERATING	1.6, 1.7, 1.8
SAFETY PRECAUTIONS, SERVICING	1.9, 1.10, 1.13
SAFETY SYMBOLS	1.2
SIGNAL WORDS	1.2

[Buy now](#)

[Tigercat Forwarder 1075 Service Manual PDF](#)

[With Instant Download](#)