

Tigercat[®]

234B LOADER

SERVICE MANUAL

SERIAL NUMBER 2342101–2344000



ISSUE 2.1, AUGUST 2022

45701AENG

epcatalogs.com

Tigercat 234B Loader

TABLE OF CONTENTS

INTRODUCTION	v
MACHINE IDENTIFICATION AND SERIAL NUMBERS	vi
MACHINE OPERATOR PROTECTIVE STRUCTURES	vii
NON-APPROVED FIELD PRODUCT CHANGES	viii
REGULATORY INFORMATION	ix
WARRANTY –EPA	x
VIBRATION AND NOISE LEVELS	xii
SAFETY	1
CONTROLS AND OPERATION	2
LUBRICATION AND MAINTENANCE	3
HYDRAULIC SYSTEM	4
PILOT SYSTEM	5
ELECTRICAL AND COMPUTERS	6
ENGINE AND ANTI-STALL	7
SELF PROPELLED	8
COOLING SYSTEM	10
BOOM	12
SWING	15
STABILIZER	16
GRAPPLE	17
LIVE HEEL	18
DELIMBER/SLASHER AND CIRCLE SAW	24

Original Instructions. The information contained in this manual is current at time of printing. Improvements to the machine are ongoing and may not be covered; in these cases, contact your Tigercat dealer for the appropriate information.

234B AVAILABLE LITERATURE

Operator's Manual	Part No. 45700AENG
Service Manual (this manual)	Part No. 45701AENG
Parts Catalog	Part No. 45703A
Engine Operation and Maintenance Manual, N45/N67 T2/Non-Certified	Part No. 45045AMUL
Engine Operation and Maintenance Manual, N45/N67 T4f	Part No. 42939AMUL

epcatalogs.com

Tigercat 234B Loader

INTRODUCTION

An Operator's Manual, Service Manual, and Parts Catalog are made available by Tigercat to assist the dealer, customer, and operator in becoming familiar with the features of the 234B Loader.

SERIAL NUMBERS:

234B	Loader	2342101–2344000
------	--------	-----------------

The 234B Loader is designed for log processing, sorting, log transferring and loading.

The Operator's Manual will assist the operator with the techniques of proper and safe operation of the 234B Loader. There is also important information regarding the safe operation of the attachment (if equipped). The Service Manual contains safety and servicing procedures and a preventive maintenance schedule to ensure optimum machine performance.

Section 1 in both the Operator's Manual and the Service Manual contains safety information that must be followed. Throughout the rest of the manuals, DANGER, WARNING, and CAUTION notices are displayed where necessary, drawing attention to possible hazards when performing certain procedures.

Read and understand the information contained in this manual, and all attachment and accessory manuals associated with this machine, prior to starting, operating, or performing maintenance on the machine for the first time.

This manual uses the International System of Units (SI) and United States customary units. Each measurement is given in SI units first, with the US customary units following in parentheses ().

Replace the Operator's Manual immediately if lost, damaged, or unreadable. This manual is an important part of the machine and should remain with the machine if sold.

Only trained personnel are allowed to operate or work on the machine. Follow all jobsite organization rules when operating the machine in coordination with other machines, vehicles, and people on the jobsite.

Tigercat Industries Inc.

P.O. Box 637
Brantford, Ontario
Canada N3T 5P9
Tel: (519) 753-2000
Fax: (519) 753-8272

[Buy now](#)

[Tigercat Loader 234B Service Manual PDF](#)

[With Instant Download](#)