

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]


Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

Part No.	BT 751 Backhoe Description	Book
01B01	MAIN FRAME	100A0128
01B02	SWING FRAME	100A0128
01B03	SWING CYLINDER	100A0128
01B04	SWING CYLINDER (COMPONENT PARTS)	100A0128
01B05	BOOM	100A0128
01B06	BOOM CYLINDER (COMPONENT PARTS)	100A0128
01B07	DIPPERSTICK	100A0128
01B08	DIPPERSTICK CYLINDER (COMPONENT PARTS)	100A0128
01B09	BUCKET LINK	100A0128
01B10	BUCKET CYLINDER (COMPONENT PARTS)	100A0128
01B11	BUCKET	100A0128
01B13	STABILIZER ARM	100A0128
01B14	STABILIZER CYLINDER LH (COMPONENT PARTS)	100A0128
01B15	STABILIZER CYLINDER RH (COMPONENT PARTS)	100A0128
01B16	STEP	100A0128
01B17	CONTROL VALVE	100A0128
01B18	CONTROL VALVE (COMPONENT PARTS)	100A0128
01B20	HYDRAULIC HOSE (INLET/OUTLET)	100A0128
01B21	HYDRAULIC HOSE (INLET/OUTLET)	100A0128
01B22	HYDRAULIC HOSE (BOOM DIPPERSTICK)	100A0128
01B23	HYDRAULIC HOSE (BUCKET)	100A0128
01B24	HYDRAULIC HOSE (STABILIZER)	100A0128
01B25	CONTROL LEVER 1	100A0128
01B26	CONTROL LEVER 2	100A0128
01B27	LABEL	100A0128
01B28	ACCESSORIES AND SERVICE PARTS	100A0128

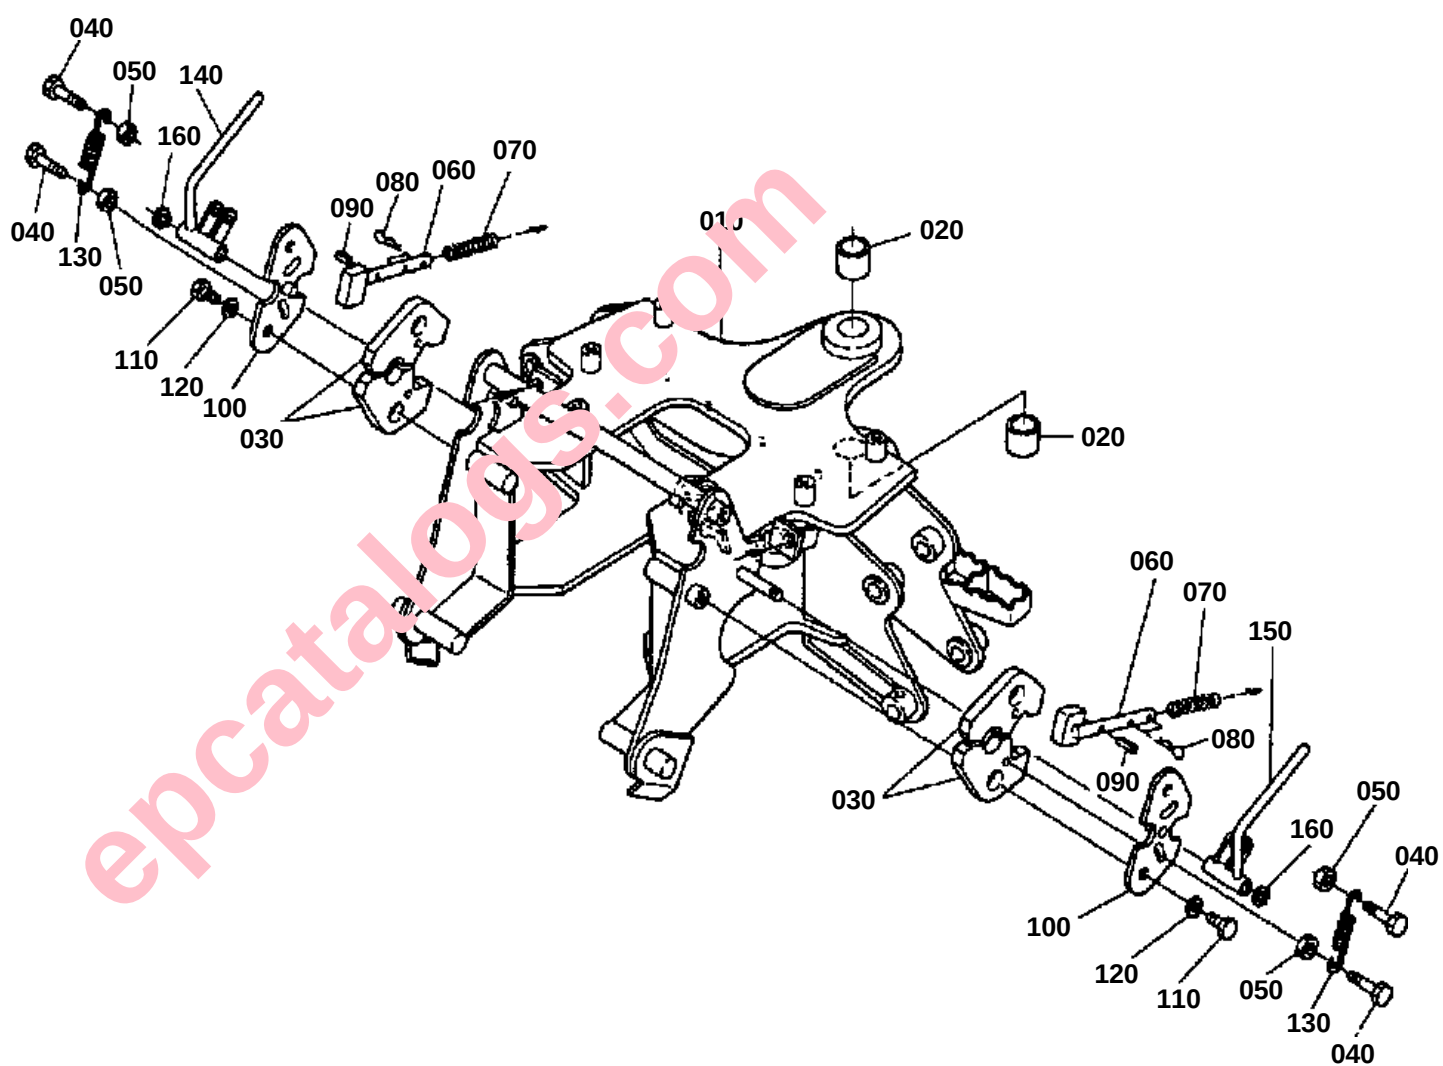




MAIN FRAME

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	75596-11010	COMP FRAME MAIN	1				0	0
020	75596-12250	BUSHING	2			1.58*1.23	0	0
030	75595-11512	HOLDER MOUNT	4				0	0
040	75599-01230	HEX.BOLT	4			5/16-18UNC*1 1/2	0	0
050	75599-31012	HEX.NUT	4			5/16-18UNC	0	0
060	75595-11520	PIN SET	2				0	0
070	75595-11540	SPRING	2				0	0
080	75595-11550	PIN SPRING LOCK	2				0	0
090	75599-52735	PIN SPRING	2			5/16*1 3/4	0	0
100	75595-11562	COMP PLATE HOLDER	2	10007			0	0
100	75595-11563	COMP PLATE HOLDER	2	10008	≠		0	0
110	75599-04725	HEX.BOLT	4			5/8-18UNF*1 1/4	0	0
120	75599-33017	WASHER SPRING LOCK	4			5/8	0	0
130	75595-11572	SPRING	2				0	0
140	75596-11610	LEVER LH	1				0	0
150	75596-11620	LEVER RH	1				0	0
160	75599-41525	CIR-CLIP EXTERNAL	2			3/4	0	0

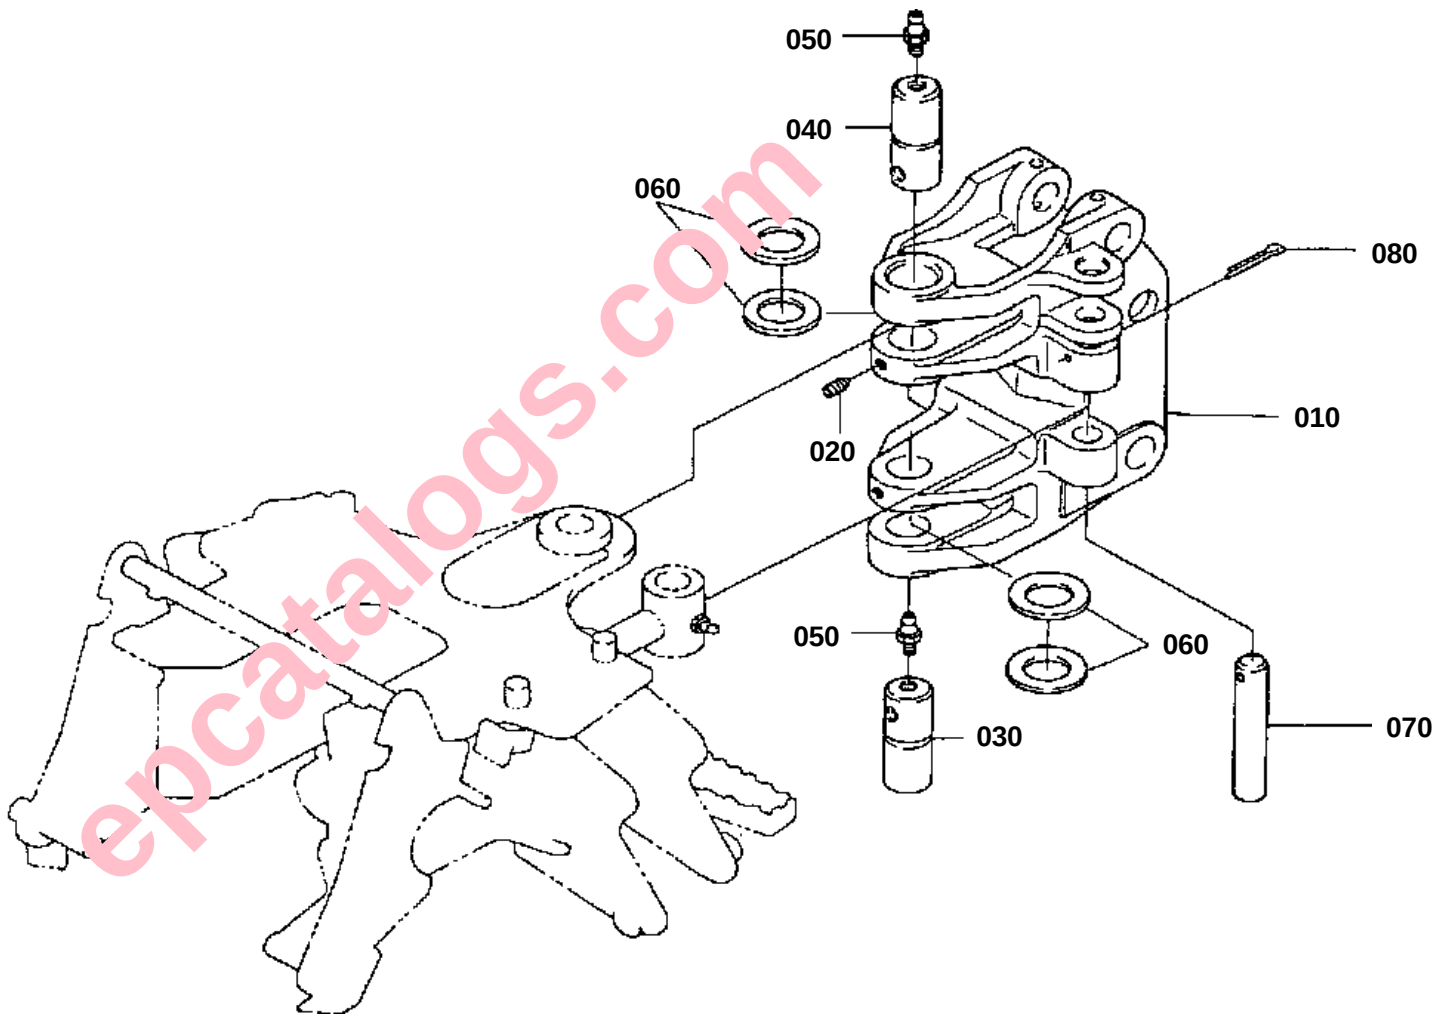

[Buy now](#)

[Kubota BT751 Backhoe Parts Manual PDF](#)

[With Instant Download](#)