

Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts as it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number referring to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quantity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.

>= Your serial number should be greater than or equal to the number shown.

<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.

↔ The part shown will work for the older and later serial number.

The part shown is not interchangeable with the other serial number.

← new for old

→ old for new

Remarks → Notes about this particular part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France. That means it will work here in the USA.

B1640A Loader		Book
Part No.		
01006	B1640 & 40A SUB-FRAME & COMPONENTS	100Z0007
01011	B1640&40A TRACTOR HYDRAULICS	100Z0007
01013	B1630, 40 & 40A LIFT FRAMES & COMPONENTS	100Z0007
01015	B1630, 40 & 40A SINGLE LEVER CONTROL	100Z0007
01017	B1630, 40 & 40A CONTROL VALVE	100Z0007
01018	PRESSURE RELIEF CARTRIDGE	100Z0007
01019	LOADER HYDRAULICS B1630 <=22004921 B1640/A <=24005472	100Z0007
01020	LOADER HYDRAULICS B1630 =>22004922 B1640/A =>24005473	100Z0007
01022	LIFT CYLINDER B1630 <=2004921 B1640/A <=244005472	100Z0007
01023	BUCKET CYLINDER B1630 <=22004921 B1640/A <=2005472	100Z0007
01024	LIFT CYLINDER B1630=>22004922 B1640/A =>24005473	100Z0007
01025	BUCKET CYLINDER B1630=>22004922 B1640/A=>24005473	100Z0007


epcatalogs.com

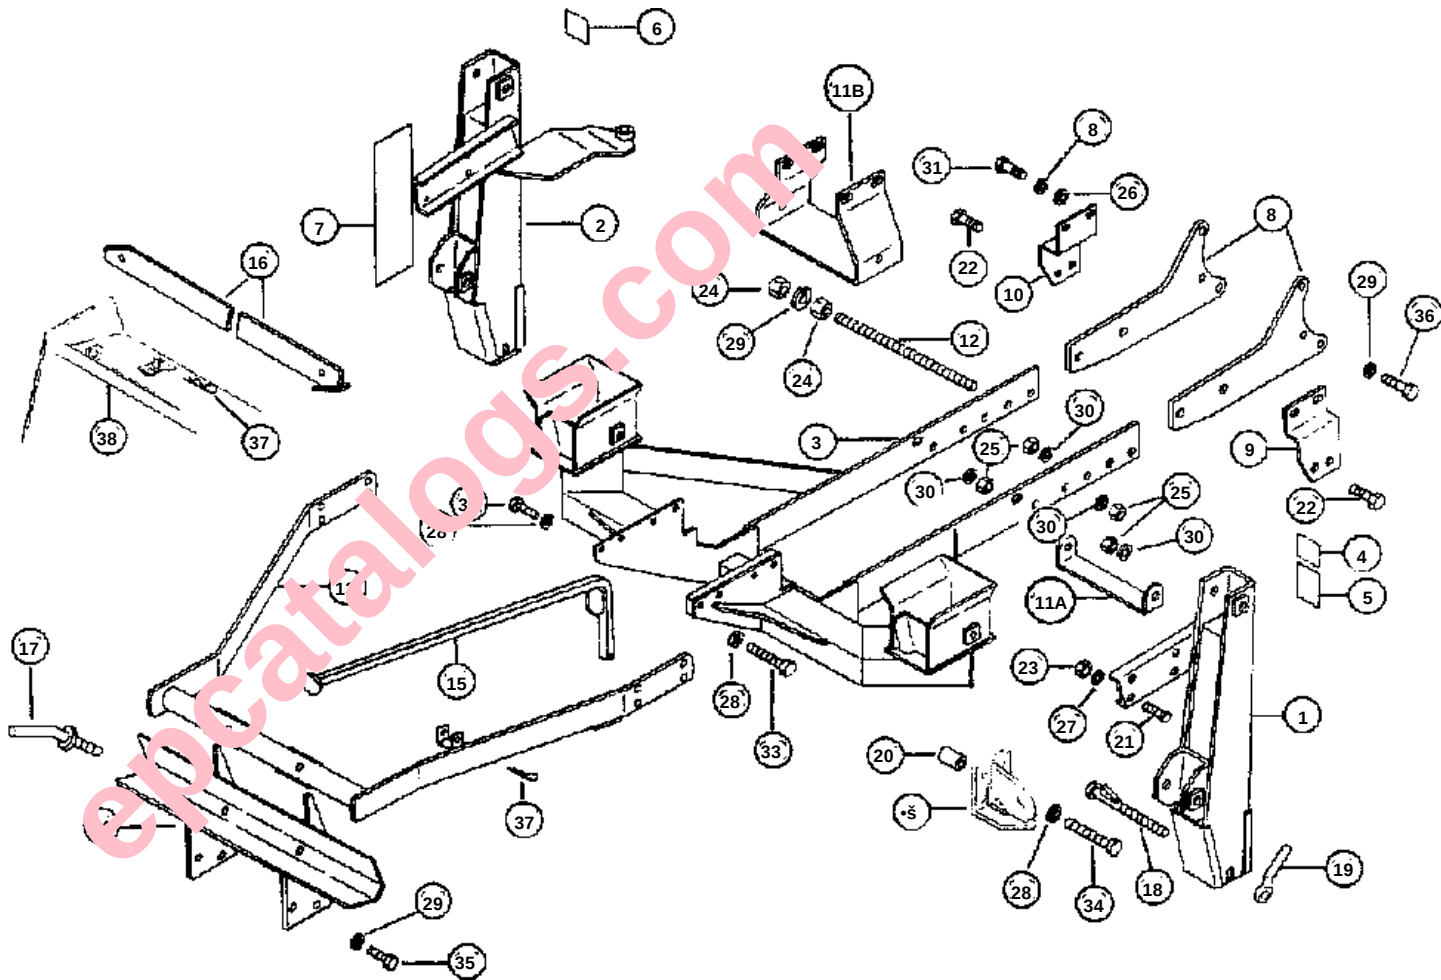

**B1640 & 40A SUB-FRAME & COMPONENTS**

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
1	70050-02557	UPRIGHT	1				0	0
2	70050-02556	UPRIGHT	1				0	0
3	70050-02555	SUB-FRAME ASSY	1				0	0
4	70050-01664	LABEL CAUTION	1				0	0
5	70050-01595	LABEL WARNING	1				0	0
6	70050-01606	LABEL CONTROL	1				0	0
7	70050-02568	LABEL INSTRUCTION	1				0	0
8	70050-02570	REAR MOUNT	2				0	0
9	70050-02256	BRACKET	1				0	0
10	70050-02257	BRACKET	1				0	0
11A	70050-02255	BELLY BRACE	1				0	0
11B	70050-01647	BELLY BRACE	1				0	0
12	70050-02562	ROD	1				0	0
13	70050-02560	FRONT BRACKET	1				0	0
14	70050-02559	MOUNT FRONT BRACKET	1				0	0
15	70050-02558	STAND UPRIGHT	2				0	0
16	70050-02553	BAR CONNECTING	2				0	0
17	70050-02554	L-BOLT SPECIAL	2				0	0
18	70050-02561	WEDGE BOLT SPECIAL	2				0	0
19	70050-02571	HANDLE NUT SPECIAL	2				0	0
20	70050-02577	SPACER POWER	3				0	0
21	70000-74028	OBTAIN LOCALLY	8				0	0
22	70000-74028	OBTAIN LOCALLY	6				0	0
23	70000-74028	OBTAIN LOCALLY	8				0	0
24	70000-74028	OBTAIN LOCALLY	4				0	0
25	70000-74028	OBTAIN LOCALLY	6				0	0
26	70000-74028	OBTAIN LOCALLY	4				0	0
27	70000-74028	OBTAIN LOCALLY	8				0	0
28	70000-74028	OBTAIN LOCALLY	14				0	0
29	70000-74028	OBTAIN LOCALLY	14				0	0
30	70000-74028	OBTAIN LOCALLY	6				0	0
31	70000-74028	OBTAIN LOCALLY	4				0	0
32	70000-74028	OBTAIN LOCALLY	3				0	0
33	70000-74028	OBTAIN LOCALLY	3				0	0
34	70000-74028	OBTAIN LOCALLY	4				0	0
35	70000-74028	OBTAIN LOCALLY	6				0	0
36	70000-74028	OBTAIN LOCALLY	6				0	0
37	70000-02036	HAIRPIN CLIP	3				0	0
38	70001-00066	BUCKET 42 SQ BACK	1				0	0
38A	70001-00066	BUCKET 48 SQ BACK	1				0	0
38B	70001-00066	BUCKET 54 SQ BACK	1				0	0
39	70000-74028	BRACKET	1				0	0
40	70050-02613	LABEL KIT	1				0	0
41	70050-93701	LABEL KIT	1				0	0

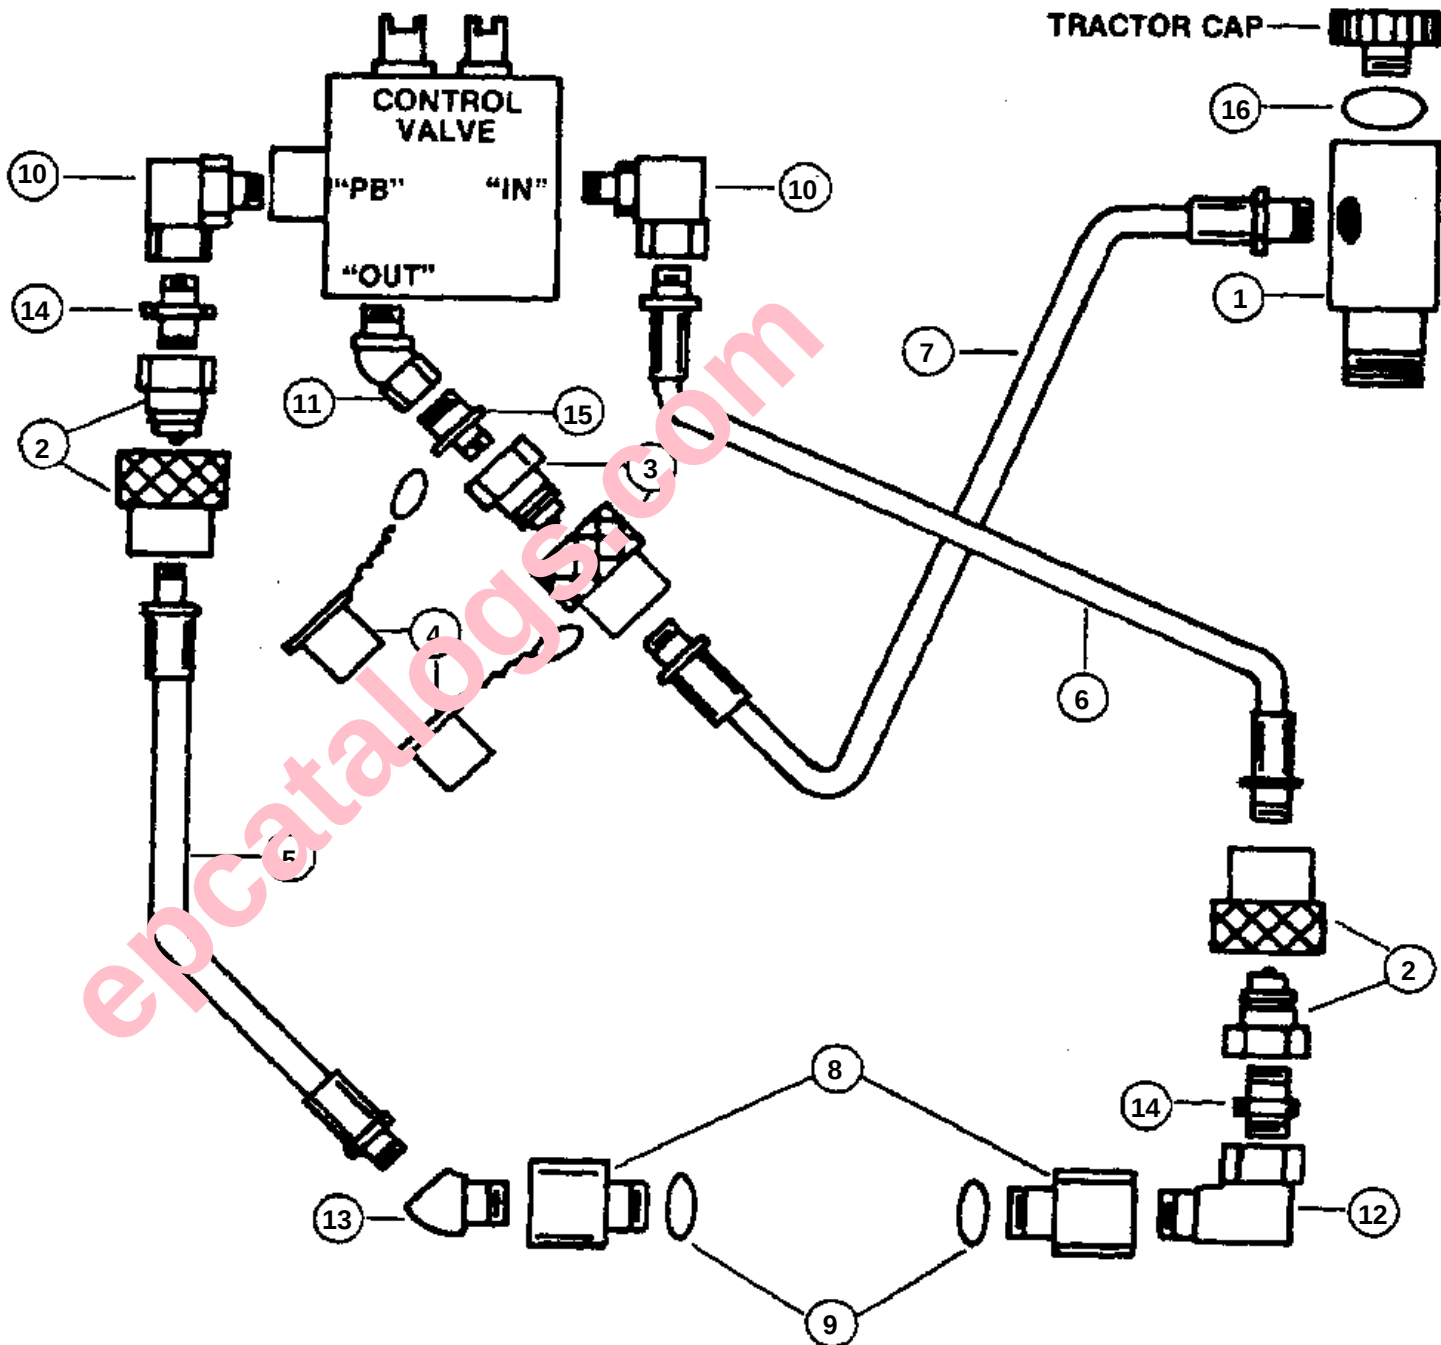

[Buy now](#)

[Kubota B1640A Loader Parts Manual PDF](#)

[With Instant Download](#)